



Thru-Hull Mount: *Retractable with Valve*

High-Performance Temperature Smart™ Sensor

Model: **B17-HP**
Legacy Models: **ST650, S650**
Patent <http://www.airmar.com/patent.html>

09/20/21
17-129-rev.12
D-17-129-rev.12

Follow the precautions below for optimal product performance and to reduce the risk of property damage, personal injury, and/or death.

WARNING: Always wear safety glasses, a dust mask, and ear protection when installing.

WARNING: The valve is not a watertight seal! Always use the insert or long blanking plug secured with the retaining pin, safety rings, and safety wire for a watertight seal.

WARNING: All the O-rings must be intact and well lubricated to make a watertight seal. Do not dry fit the insert in the housing. Attempting to install the insert without lubricating all the O-rings may damage them, possibly preventing full insertion and a watertight seal.

WARNING: Always attach the safety wire to prevent the insert or blanking plug from backing out in the unlikely event that the cap nut fails or is screwed on incorrectly.

WARNING: Immediately check for leaks when the boat is placed in the water. Do not leave the boat unchecked for more than three hours. Even a small leak may allow considerable water to accumulate.

WARNING: When the valve assembly is removed, always insert the short, emergency plug with the cap nut secured with the safety wire for a watertight seal.

CAUTION: Never pull, carry, or hold the sensor by its cable; this may sever internal connections.

CAUTION: Metal housing—Never install a metal housing on a vessel with a positive ground system.


CAUTION: Never use solvents. Cleaners, fuel, sealants, paint, and other products may contain solvents, that can damage plastic parts.

CAUTION: Never power sand or pressure wash the sensor. It may weaken the structure or damage the internal components.


IMPORTANT: Please read the instructions completely before proceeding with the installation. These instructions supersede any other instructions in your instrument manual if they differ.

Record the information found on the cable tag for future reference.

Part No. _____ Date _____

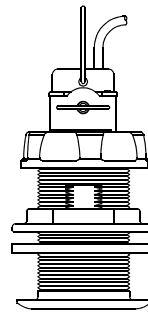

B17-HP
B17 low-profile
bronze housing

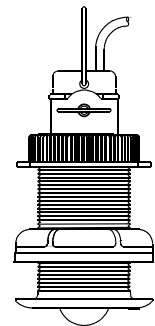

ST650
P17 low-profile
plastic housing

Applications

- **Plastic** housing recommended for fiberglass or metal hull only. *Never install a plastic housing in a wood hull, since swelling of the wood may fracture the plastic.*
- **Bronze** housing recommended for fiberglass or wood hull. *Never mount a bronze housing in a metal hull because electrolytic corrosion will occur.*

Pretest

Connect the sensor to the instrument. If it has a temperature function, check for the approximate air temperature. If it has a paddlewheel, spin it and check for a speed reading. If there is no reading(s) or it is inaccurate, check the connections and try again. If there is still a problem, return the product to the place of purchase.

Tools & Materials

- Safety glasses
- Dust mask
- Ear protection
- Water-based anti-fouling coating (**mandatory in saltwater**)
- Electric drill [Ø10mm (3/8") or larger chuck capacity]
- Drill bit: Ø 3mm or 1/8"
- Hole saw: Ø 51 mm or 2"
- Countersink tool (installing a flush housing)
- Sandpaper
- Mild household detergent or weak solvent (such as alcohol)
- File (installation in a metal hull)
- Marine sealant (suitable for below waterline)
- Additional washer [for aluminum hull less than 6mm (1/4") thick]
- Slip-joint pliers (installing a metal housing)
- Grommet(s) (some installations)
- Cable ties
- Installation in a cored fiberglass hull (page 3):
 - Hole saw for hull interior Ø 60mm or 2-3/8"
 - Fiberglass cloth and resin
 - or Cylinder, wax, tape, and casting epoxy

Mounting Location

CAUTION: Do not mount the sensor in line with or near water intake or discharge openings; behind strakes, fittings, or hull irregularities that will disturb the water flow.

CAUTION: Do not mount the sensor directly ahead of a depth transducer, since turbulence generated by the paddlewheel's rotation will adversely affect the depth transducer's performance, especially at high speeds. Mount side-by-side.

Choose an accessible spot inside the vessel. Allow a minimum of 280mm (11") of headroom for the height of the housing, tightening the nuts, and installing the insert.

B17-HP—The sensor must be continually in contact with the water at all boat speeds.

S650, ST650—Turbulence-free water must flow under the paddlewheel at all boat speeds.

- **Displacement hull powerboats**—Locate amidships near the centerline.
- **Planing hull powerboats**—Mount well aft to ensure the sensor is in contact with the water at high speeds.
- **Fin keel sailboats**—Mount on or near the centerline and forward of the fin keel 300 to 600mm (1–2').
- **Full keel sailboats**—Locate amidships and away from the keel at the point of minimum deadrise angle.

Anti-fouling Coating

Marine growth can accumulate rapidly on the sensor's surface reducing performance within weeks. Surfaces exposed to saltwater must be covered with an anti-fouling coating. *Use water-based anti-fouling coating only.* Never use ketone based paint, since ketones can attack many plastics possibly damaging the sensor.

It is easier to brush on anti-fouling coating before installation, but allow sufficient drying time. Re-coat every 6 months or at the beginning of each boating season. Coat the following surfaces (Figure 1):

- Bore of the valve assembly up 30mm (1-1/4")
- Exterior flange of the housing and valve assembly
- Temperature insert below the lower O-ring including the exposed end
- Paddlewheel insert:
 - Outside wall below the lower O-ring
 - Paddlewheel cavity
 - Paddlewheel
- Blanking plug below the lower O-ring including the exposed end


Installation

Hole Drilling

Cored fiberglass hull—Follow separate instructions on page 3.

1. Drill a \varnothing 3mm or 1/8" pilot hole from inside the hull. If there is a rib, strut or other hull irregularity near the selected mounting location, drill from the outside.
2. Using the appropriate size hole saw, cut a hole perpendicular to the hull from outside.

Flush housing—Use a countersink tool to create a 'seat' in the hull.

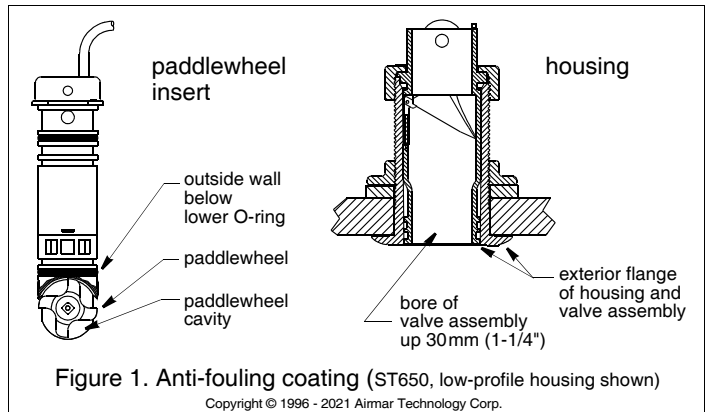

3. Sand and clean the area around the hole, inside and outside, to ensure that the sealant will adhere properly to the hull. If there is any petroleum residue inside the hull, remove it with either mild household detergent or a weak solvent (alcohol) before sanding.

Metal hull—Remove all burrs with a file and sandpaper.

Bedding

CAUTION: Be sure the surfaces to be bedded are clean and dry.

Apply a 2mm (1/16") thick layer of marine sealant around the flange of the housing that contacts the hull and up the sidewall of the housing (Figure 2). *The sealant must extend 6mm (1/4") higher than the combined thickness of the hull, washer(s), and hull nut.* This will ensure there is sealant in the threads to seal the hull and to hold the hull nut securely in place.


Installing

CAUTION: If your sensor came with a connector, do not remove it to ease cable routing. If the cable must be cut and spliced, use Airmar's splash-proof Junction Box 33-035 and follow the instructions provided. Removing the waterproof connector or cutting the cable, except when using a watertight junction box, will void the sensor's warranty.

NOTE: B17-HP—Disregard any arrow on the housing; it is not used.

1. From outside the hull, push the housing into the mounting hole using a twisting motion to squeeze out excess sealant (Figure 2).



S650, ST650—Align the arrow on the flange of the housing to point forward toward the bow. If the sensor is not installed on the centerline, angle the housing slightly toward the centerline to align it with the water flow.

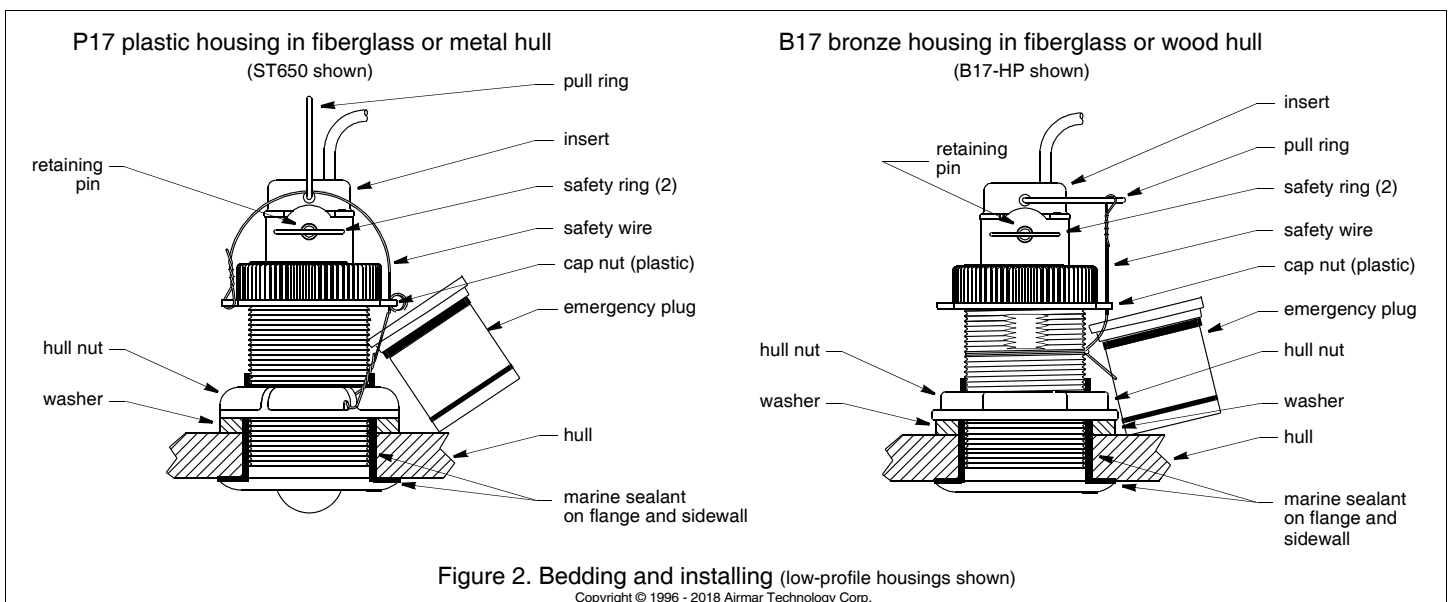

2. From inside the hull, slide the washer onto the housing.
Aluminum hull less than 6mm (1/4") thick—Use an additional rubbery, fiberglass, or plastic washer. Never use wood since it will swell, possibly fracturing the plastic housing. Never use bronze since electrolytic corrosion will occur.
3. Screw the hull nut in place.
S650, ST650—Be sure the notch on the upper rim of the housing and the corresponding arrow on the flange are still pointing forward toward the bow.
Plastic housing—Do not clamp tightly on the wrench flats, causing the housing to fracture.
Plastic hull nut—Hand tighten only. Do not over tighten.
Metal hull nut—Tighten with slip-joint pliers.
Cored fiberglass hull—Do not over tighten, crushing the hull.
Wood hull—Allow the wood to swell before tightening the hull nut.
4. Remove any excess sealant on the outside of the hull to ensure smooth water flow under the sensor.
5. All the O-rings must be intact and well lubricated to make a watertight seal. After the sealant cures, inspect the O-rings on the valve assembly (replace if necessary) and lubricate them with the silicone lubricant supplied (Figure 3).
6. Slide the valve assembly into the housing *being sure to engage the key in the notch*. Be careful not to rotate the housing and disturb the sealant. Screw the cap nut in place. **Hand tighten** only. Do not over tighten.
7. Attach one pull ring to the insert. Similarly, attach a pull ring to the blanking plug.
8. All the O-rings must be intact and well lubricated to make a watertight seal. Inspect the O-rings on the insert (replace if necessary) and lubricate them with the silicone lubricant supplied.
9. Slide the insert into the housing. Seat it into place with a pushing twisting motion until the keys fit into the notches. Be careful not to rotate the housing and disturb the sealant.
S650, ST650—Be sure the arrows on the top is pointing forward toward the bow. *The arrows on the top of the insert, the notch in the housing, and the arrow on the flange will be aligned.*
10. Attach one safety ring to one end of the retaining pin. Slide the retaining pin through the valve assembly and the insert. Attach the second safety ring to the retaining pin (Figure 2).
11. Attach the safety wire to prevent the insert from backing out in the unlikely event that the cap nut fails or is screwed on incorrectly.
Plastic housing—Attach the safety wire to one eye in the hull nut. Thread the *short emergency plug* onto the wire. Keeping the wire taut throughout, lead the wire in a counterclockwise direction and thread it through one eye in the cap nut. Thread the wire through the eye a second time. Then lead the wire through the pull ring and the second eye in the cap nut. Twist the wire securely to itself.
Metal housing—Wrap one end of the safety wire tightly around the housing and twist it together with the long end. Thread the *short emergency plug* onto the wire. Keeping the wire taut throughout, lead the wire straight up and through one eye in the cap nut. Loop the wire through the pull ring and twist it securely to itself.
12. Route the cable to the instrument being careful not to tear the cable jacket when passing it through the bulkhead(s) and other parts of the boat. Use grommets to prevent chafing. To reduce electrical interference, separate the sensor cable from other electrical wiring and the engine. Coil any excess cable and secure it in place with cable ties to prevent damage.
13. Refer to the instrument owner's manual to connect the sensor to the instrument.

Checking for Leaks

When the boat is placed in the water, **immediately** check around the sensor for leaks. Note that very small leaks may not be readily observed. Do not to leave the boat in the water unchecked for more than 3 hours. If there is a small leak, there may be considerable bilge water accumulation after 24 hour. If a leak is observed, repeat "Bedding" and "Installing" **immediately** (page 2).

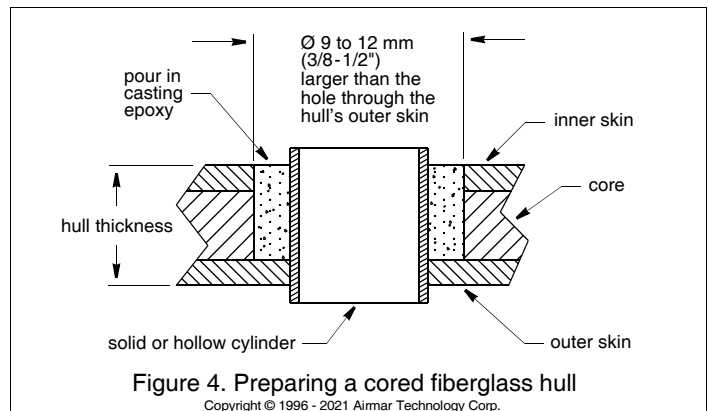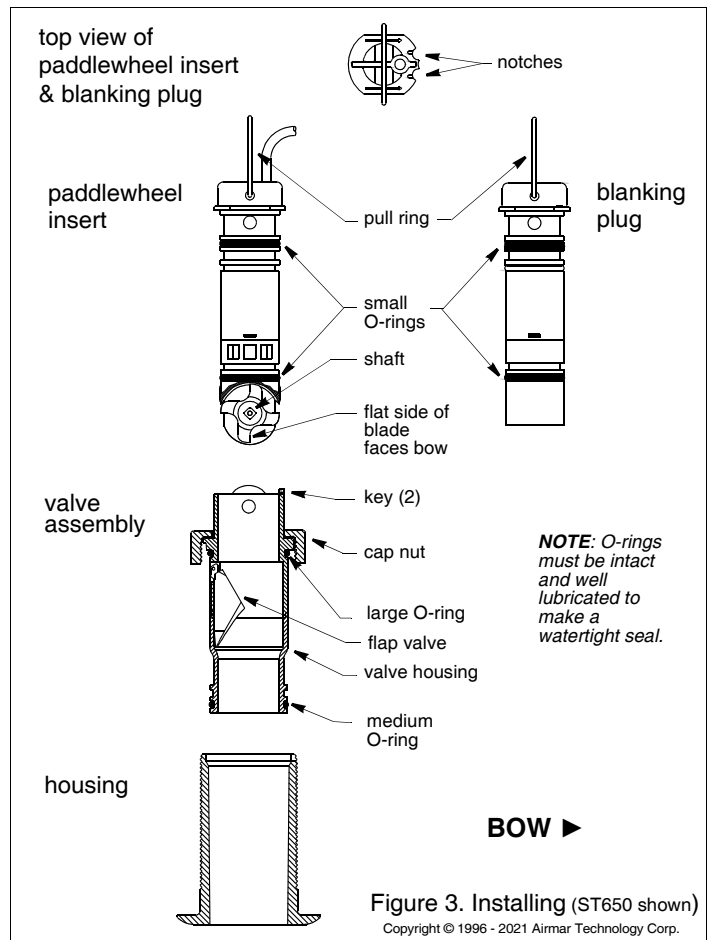

Installation in a Cored Fiberglass Hull

The core (wood or foam) must be cut and sealed carefully. The core must be protected from water seepage, and the hull must be reinforced to prevent it from crushing under the hull nut allowing the housing to become loose.

CAUTION: Completely seal the hull to prevent water seepage into the core.

1. Drill a $\text{\O} 3\text{mm}$ or $1/8"$ pilot hole from inside the hull. If there is a rib, strut, or other hull irregularity near the selected mounting location, drill from the outside. (If the hole is drilled in the wrong location, drill a second hole in a better location. Apply masking tape to the outside of the hull over the incorrect hole and fill it with epoxy.)
2. Using the $\text{\O} 51\text{mm}$ or $2"$ hole saw, cut the hole from outside the hull through the *outer skin* only (Figure 4).
3. From inside the hull, use the $\text{\O} 60\text{mm}$ or $2\text{-}3/8"$ hole saw to cut through the *inner skin* and most of the core. The core material can be very soft. Apply only light pressure to the hole saw after cutting through the inner skin to avoid accidentally cutting the *outer skin*.

- Remove the plug of core material so the *inside* of the outer skin and the inner core of the hull are fully exposed. Sand and clean the inner skin, core, and the outer skin around the hole.
- If you are skilled with fiberglass, saturate a layer of fiberglass cloth with a suitable resin and lay it inside the hole to seal and strengthen the core. Add layers until the hole is the correct diameter.
Alternatively, a hollow or solid cylinder of the correct diameter can be coated with wax and taped in place. Fill the gap between the cylinder and hull with casting epoxy. After the epoxy has set, remove the cylinder.
- Sand and clean the area around the hole, inside and outside, to ensure that the sealant will adhere properly to the hull. If there is any petroleum residue inside the hull, remove it with either mild household detergent or a weak solvent (alcohol) before sanding.
- Proceed with "Bedding" and "Installing" (page 2).

Operation, Maintenance & Parts

How the Valve Works

The valve is not a watertight seal! The sensor incorporates a self-closing valve which minimizes the flow of water into the vessel when the insert is removed. The curved flap valve is activated by both a spring and water pressure. Water pushes the flap valve upward to block the opening so there is no gush of water into the boat. Always install the insert or the *long* blanking plug secured with the retaining pin, safety rings, and safety wire for a watertight seal.

Using the Long Blanking Plug

To protect the paddlewheel insert, use the blanking plug:

- When the boat will be kept in saltwater for more than a week.
 - When the boat will be removed from the water.
 - When aquatic growth buildup is suspected due to inaccurate readings from the instrument.
- All the O-rings must be intact and well lubricated to make a watertight seal. Inspect the O-rings on the *long* blanking plug (replace if necessary) and lubricate them with the silicone lubricant supplied or petroleum jelly (Figure 3).
 - Remove the insert from the housing by removing the safety wire, one safety ring, and the retaining pin. Do not remove the cap nut (Figure 2).
 - Grasp the pull ring and remove the insert with a slow pulling motion.
NOTE: In the unlikely event that the insert cannot be removed, see "Servicing the Valve Assembly" on page 4.
 - Slide the *long* blanking plug into the housing with the arrows on the top pointing forward toward the bow. Seat it into place with a pushing twisting motion until the keys fit into the notches (Figure 3). Secure it with the retaining pin, safety rings, and safety wire (Figure 2).

S650, ST650: Servicing the Paddlewheel Insert

Aquatic growth can impede or freeze the paddlewheel's rotation and must be removed. Clean the surface using a Scotch-Brite® scour pad and mild household detergent. If fouling is severe, push the paddlewheel shaft out using a spare shaft or a 4D finish nail with a flattened point. Then, lightly wet sand the surface with fine grade wet/dry paper.

The water lubricated paddlewheel bearings have a life of up to 5 years on low-speed boats [less than 10kn (11MPH)] and 1 year on high-speed vessels. Paddlewheels can fracture and shafts can bend due to impact with water borne objects and mishandling in boat yards. O-rings must be free of abrasions and cuts to ensure a watertight seal.

- Using the new paddlewheel shaft, push the old shaft out about 6mm (1/4"). With pliers, remove the old shaft (Figure 3).
- Place the new paddlewheel in the cavity with the flat side of the blade facing the same direction as the arrows on the top of the insert.
- Tap the new shaft into place until the ends are flush with the insert.
- All the O-rings must be intact and well lubricated to make a watertight seal. Install two of the small O-rings.

- Being sure the O-rings are intact and well lubricated, place the remaining two small O-rings on the *long* blanking plug.
- To reinstall the paddlewheel insert, see "Installing" on page 2 and follow steps 8 through 11.

Servicing the Valve Assembly

Should the valve fail, remove it for servicing. A replacement Paddlewheel & Valve Kit 33-415 is available.

WARNING: When the valve assembly is removed, always insert the *short emergency plug* secured with the cap nut and safety wire for a watertight seal.

WARNING: If the insert is caught in the valve assembly trapping the cap nut, temporarily hold the *short emergency plug* in place with the safety wire. Then separate the insert from the valve assembly. If they cannot be separated and the sensor must be left unattended, cut the cable to free the cap nut [a minimum of 1 m (3') from the insert]. Later, splice the cable using Airmar's Junction Box 33-035.

- Remove the *short emergency plug* from the safety wire (Figure 2).
- All the O-ring must be intact and well lubricated to make a watertight seal. Inspect the O-ring (replace if necessary) and lubricate it with silicone lubricant or petroleum jelly.
- Unscrew the cap nut. With the *short emergency plug* ready in one hand, remove the insert and valve assembly as one unit by pulling upward on the pull ring. Rapidly insert the *short emergency plug* to minimize the flow of water into the boat.
NOTE: The *emergency plug* is not secure until the cap nut is in place.
- To free the cap nut, remove the insert from the valve assembly by removing one safety ring and the retaining pin. Grasp the insert by the pull ring and pull slowly upward.
- Secure the *short emergency plug* with the cap nut. **Hand tighten** only. Do not over tighten. Reattach the safety wire.
- Clean, repair, or replace the valve assembly, so the flap valve moves freely and seats against the valve housing (Figure 3).
- All the O-rings must be intact and well lubricated to make a watertight seal. To reinstall the valve assembly and the insert/blanking plug inspect (replace if necessary) and lubricate all the O-rings with silicone lubricant or petroleum jelly.
- Remove the safety wire and cap nut from the *short emergency plug*. With the valve assembly ready in one hand, remove the emergency plug. Rapidly slide the valve assembly being sure to engage the key in the notch of the housing. Then slide the insert/blanking plug into the valve assembly with the arrows on the top pointing forward toward the bow. Seat it into place with a pushing twisting motion until the keys fit into the notches. Screw the cap nut in place and **hand tighten** only. Do not over tighten. Reattach the safety wire.

Winterizing

After the boat has been hauled for winter storage, remove the blanking plug to let the water drain away before reinserting it. This will prevent any water from freezing around the blanking plug and possibly cracking it.

Replacement Sensor & Parts

The information needed to order a replacement sensor is printed on the cable tag. Do not remove this tag. When ordering, specify the part number and date. For convenient reference, record this information on the top of page one.

Lost, broken, and worn parts should be replaced immediately. Obtain parts from your instrument manufacturer or marine dealer.

Gemeco

USA

Tel: 803-693-0777

Email: sales@gemeco.com

Airmar EMEA

Europe, Middle East, Africa

Tel: +33.(0)2.23.52.06.48

Email: sales@airmar-emea.com



35 Meadowbrook Drive, Milford, New Hampshire 03055-4613, USA

www.airmar.com

Copyright © 1995 - 2021 Airmar Technology Corporation