





INSTRUCTIONS

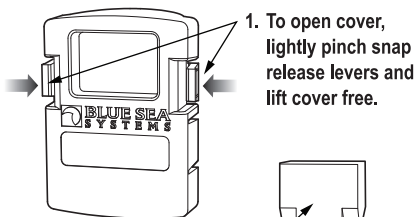

2. Loosen the terminal screws to remove or install the fuse.

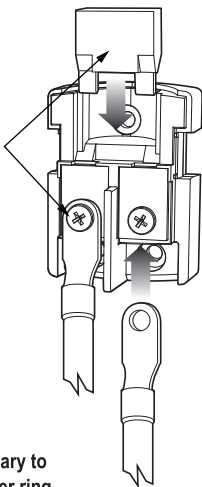

3. It may be necessary to install some larger ring terminals with the flat side up, as shown below.

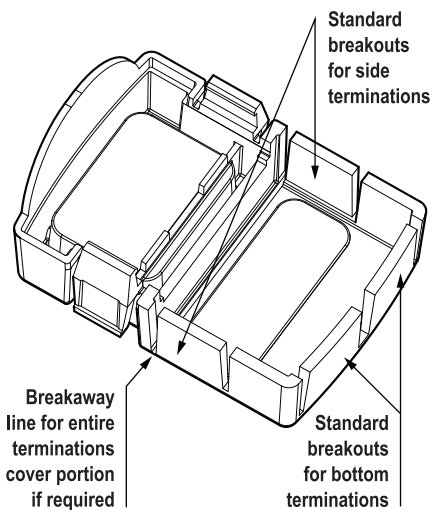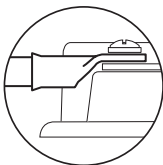

Standard breakouts allow wire access from sides and bottom directions.

In cases where terminations must be angled differently, or larger wires or lugs may interfere with secure closure of the fuse cover portion, the entire termination cover portion may be broken away to allow better access to terminals.