

Installation Manual

MULTI-COLOR LCD RADAR

Model FR-8045/FR-8065/FR-8125/FR-8255

Product Name: MARINE RADAR

SAFETY INSTRUCTIONS	i
SYSTEM CONFIGURATION	ii
EQUIPMENT LISTS.....	iii
1. HOW TO INSTALL THE SYSTEM	1
1.1 Display Unit.....	1
1.2 Antenna Unit Installation	5
1.3 Power Supply Unit	19
2. CABLE CONNECTION AND WIRING	20
2.1 Standard Connection	20
2.2 Wiring the Power Supply Unit (FR-8255 only)	21
2.3 Data Signals.....	23
2.4 Input/Output Ports.....	23
3. EQUIPMENT SETTINGS.....	25
3.1 Setting the Language.....	25
3.2 How to Set the Purpose	26
3.3 How to Enter Initial Settings.....	27
4. OPTIONAL EQUIPMENT	31
4.1 ARP Kit ARP-11	31
4.2 Connection of Buzzer and/or Remote Display	33
APPENDIX 1 MJ CONNECTOR CORROSION PROTECTION	AP-1
PACKING LISTS	A-1
OUTLINE DRAWINGS	D-1
INTERCONNECTION DIAGRAMS.....	S-1



FURUNO ELECTRIC CO., LTD.

www.furuno.com

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.



SAFETY INSTRUCTIONS

Read these safety instructions before you operate the equipment.



WARNING

Indicates a condition that can cause death or serious injury if not avoided.



CAUTION

Indicates a condition that can cause minor or moderate injury if not avoided.



Warning, Caution



Prohibitive Action



Mandatory Action



WARNING



Do not open the equipment unless totally familiar with electrical circuits and service manual.

Only qualified personnel should work inside the equipment.



Wear a safety belt and hard hat when working on the antenna unit.

Serious injury or death can result if someone falls from the radar mast.

Construct a suitable service platform from which to install the antenna unit.

Serious injury or death can result if someone falls from the radar mast.

Turn off the power at the mains switchboard before beginning the installation.

Fire, electrical shock or serious injury can result if the power is left on or is applied while the equipment is being installed.



CAUTION



Ground the equipment to prevent electrical shock and mutual interference.



WARNING



Radio Frequency Radiation Hazard

The radar antenna emits electromagnetic radio frequency (RF) energy which can be harmful, particularly to your eyes. Never look directly into the antenna aperture from a close distance while the radar is in operation or expose yourself to the transmitting antenna at a close distance.

Distances at which RF radiation levels of 100 W/m² and 10 W/m² exist are given in the table below.

Note: If the antenna unit is installed at a close distance in front of the wheel house, your administration may require halt of transmission within a certain sector of antenna revolution. This is possible - Ask your FURUNO representative or dealer to provide this feature.

Model		100W/m ²	10W/m ²
FR-8045	XN12A	N/A	1.1m
	XN13A	N/A	1.0m
FR-8065	XN12A	N/A	1.9m
	XN13A	N/A	1.7m
FR-8125	XN12A	N/A	2.1m
	XN13A	N/A	1.9m
FR-8255	XN12A	0.6m	4.6m
	XN13A	0.4m	3.1m




CAUTION

Observe the following compass safe distances to prevent deviation of a magnetic compass.

Model		Standard	Steering
Display Unit RDP-154		1.00m	0.65m
FR-8045 Antenna		0.95m	0.60m
FR-8065 Antenna	RSB-0070	1.95m	1.25m
	RSB-0073	1.90m	1.20m
FR-8125 Antenna	RSB-0070	1.00m	0.60m
	RSB-0073	1.10m	0.70m
FR-8255 Antenna	RSB-0070	1.85m	1.25m
	RSB-0073	1.80m	1.15m
PSU-008		0.80m	0.50m

SYSTEM CONFIGURATION

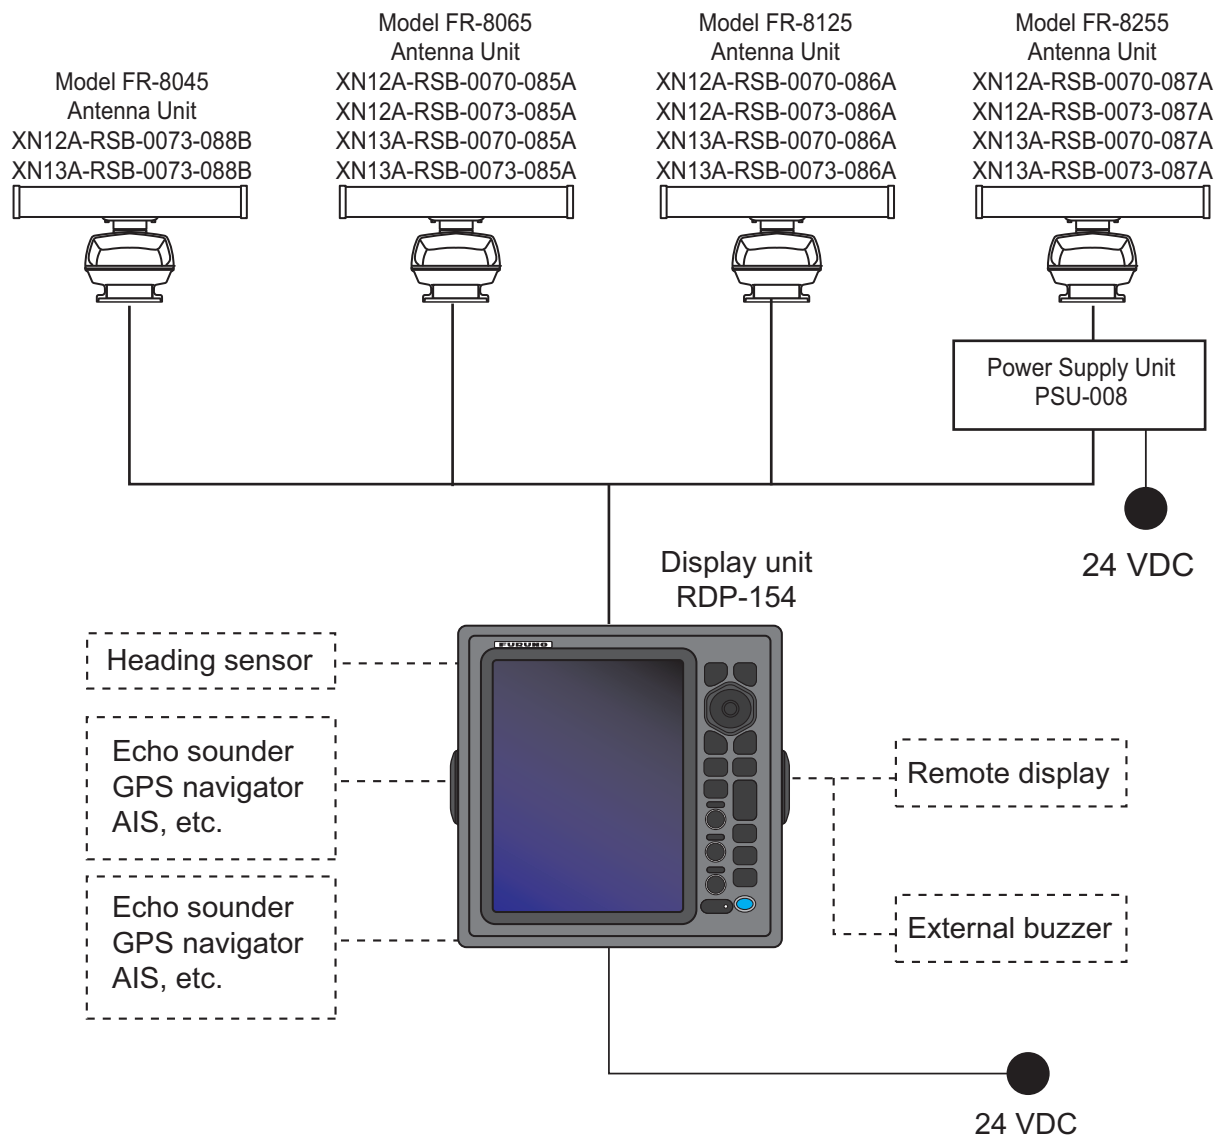

———— : Basic configuration

----- : Optional

Note 1: 12 VDC cannot be used with this equipment.

Note 2: When replacing the antenna, make sure the correct SPU board is used, referring to the table below.

Model	SPU Board
FR-8045	03P9586B
FR-8065/FR-8125/FR-8255	03P9586A

EQUIPMENT LISTS

Standard Supply

Name	Type	Code No.	Qty	Comments	
Display Unit	RDP-154	—	1		
Antenna Unit	RSB-0070/0073-085A	—	1	Radiator: XN12A or XN13A	
	RSB-0070/0073-086A	—			
	RSB-0070/0073-087A	—			
	RSB-0073-088B	—			
Power Unit	PSU-008	—	1	5m Cable	For FR-8255
Installation Materials	CP03-30700	000-090-471	1	10m Cable	For FR-8065/ or FR-8125
	CP03-30710	000-090-472		15m Cable	
	CP03-30720	000-090-473		20m Cable	
	CP03-30730	000-090-474		30m Cable	
	CP03-30500	000-083-620	1	10m Cable	For FR-8255
	CP03-30510	000-083-621		15m Cable	
	CP03-30520	000-083-622		20m Cable	
	CP03-30530	000-083-623		30m Cable	
	CP03-35600	001-304-760	1	For Display Unit (Screws, Code: 000-162-608-10, 5×20 SUS304)	
	CP03-33000	000-014-604	1	5m Cable	For FR-8045
	CP03-33010	000-014-605		10m Cable	
	CP03-33020	000-014-606		15m Cable	
	CP03-33030	000-014-607		20m Cable	
	CP03-33040	000-014-608		30m Cable	
	CP03-33801	001-141-670	1	For Antenna Unit: FR-8065/FR-8125/FR-8255	
	CP03-18401	008-503-360	1	For Antenna Unit: FR-8045	
	CP03-22901	008-219-760	1	For Radiator	
	CP03-30600	000-084-769	1	For PSU-008	
Spare Parts	SP03-17701	001-304-750	1	For Display Unit: Fuse (Code: 000-155-826-10, FGBO 125V 10A PBF)	
	SP03-14501	008-444-420	1	For PSU-008	
Accessories	FP03-12301	001-304-780	1	LCD Cleaning Cloth (Code: 100-360-673-10, 19-028-3125-3)	

Optional supply

Name	Type	Code No.	Qty	Comments
Auto Plotter	ARP-11	008-523-050	1	
External Alarm Buzzer	OP03-21	000-030-097	1	
Signal Cable Assembly	MJ-B24LPF0010-100+R	000-147-880-13	1	For Remote Display Unit
	MJ-B24LPF0010-200+R	000-147-881-13		
	MJ-B24LPF0010-300+R	000-147-882-13		
	MJ-A7SPF0007-050C	000-154-028-10	1	For NMEA1/2
	MJ-A6SPF0007-100C	000-159-695-10	1	For Heading Sensor
	MJ-A10SPFW0001+R	001-074-600-10	1	For Remote Display Unit/ External Display splitter cable
Flush Mount Kit	OP03-228	001-258-030	1	

1. HOW TO INSTALL THE SYSTEM

NOTICE

Do not apply paint, anti-corrosive sealant or contact spray to plastic parts or equipment coating.

These items contain products that can damage plastic parts and equipment coating.

1.1 Display Unit

Select a location for the display unit by following the information shown below.


- The unit is waterproof, but FURUNO recommends that you install the display unit in a cabinet.
- Keep the unit away from direct sunlight.
- The temperature and humidity must meet the requirements shown in the equipment specifications.
- Set the unit away from the exhaust pipes and vents.
- The installation location must have enough cool air.
- Install the unit where shock and vibration meet the requirements shown in the equipment specifications. If there is heavy vibration, vertically install the display unit on the hanger.
- Keep the unit away from equipment that creates an electromagnetic field, for example, motors and generators.
- For maintenance and checking, leave enough space at the sides and rear of the unit, referring to the outline drawing and provide some additional length in cables.
- Follow the recommended compass safe distances shown on page i to prevent the interference to a magnetic compass.

1.1.1 How to install the display unit


How to install the display unit on a desktop or overhead

Follow the procedure shown below to install the display unit on a desktop or overhead.

1. Unfasten the knob bolts and remove the display unit from the hanger.

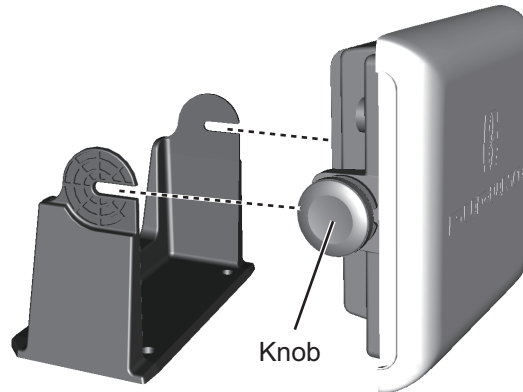

2. Fasten the hanger with four self-tapping screws.

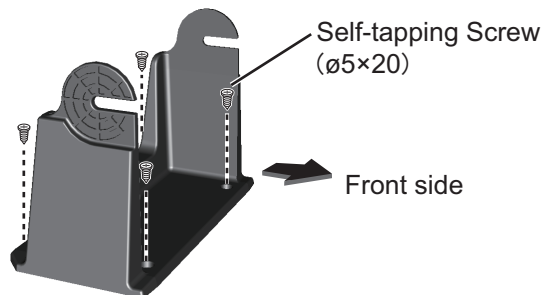

3. Connect all necessary cabling.
4. Set the display unit in the hanger, then fasten the knob bolts.

Note: For overhead installation, make sure the location is strong enough to hold the unit. If necessary, fasten the hanger with the bolts, nuts and washers (local supply).

How to install the display unit in a console

Note 1: Requires Flush Mount Kit OP03-228 (Option).


Note 2: The unit must be installed in a flat area of the console. Ensure there is ample room behind the unit once installed to allow access for maintenance.

Follow the procedure shown below to install the display unit in a console.


1. Prepare a hole in the installation location referring to the outline drawing at the back of this manual.

1. HOW TO INSTALL THE SYSTEM

2. Unfasten the knob bolts and remove the display unit from the hanger.

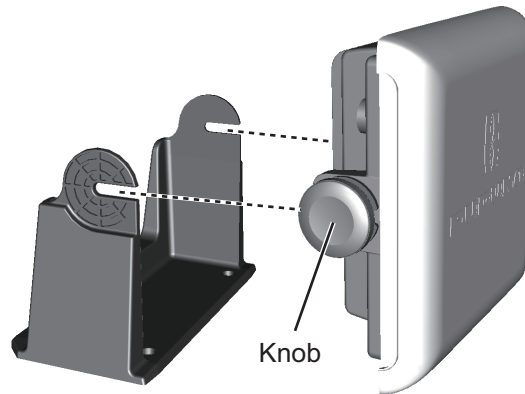

3. Fit the backing sponges, referring to the diagram below.

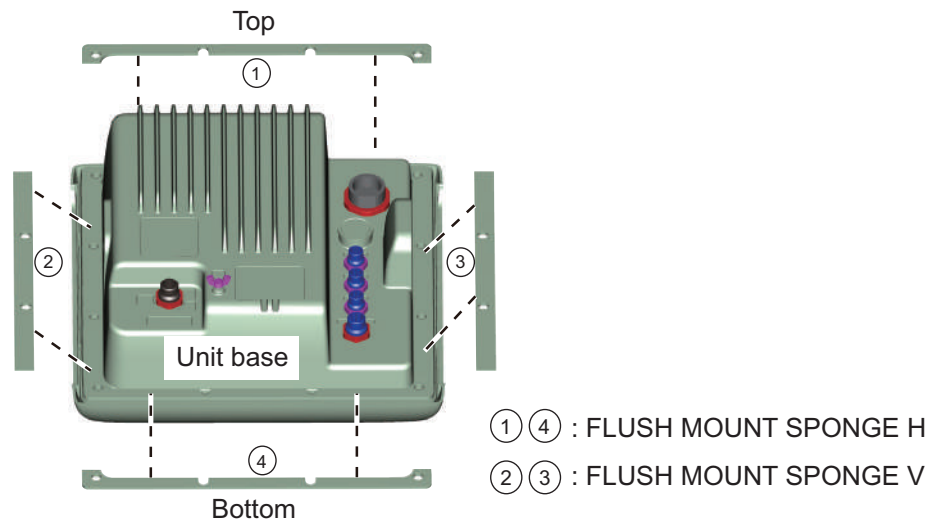


Note 1: Ensure the backing sponges are used correctly. 1 - Horizontal, 2 - Vertical.


Note 2: Take care to place the backing sponges around screw holes and ensure there are no gaps between the sponges at their joining points.

4. Connect all necessary cables to the unit, making sure to leave enough slack for maintenance and service.
5. Insert the unit into the console, making sure that all cabling attached to the unit is not damaged. Ensure the unit is secure before proceeding to the next step.


6. Adjust the flush-mounting fixture by loosening the wingnuts and wingscrews to allow the bolt free movement. Use the figure below for reference.

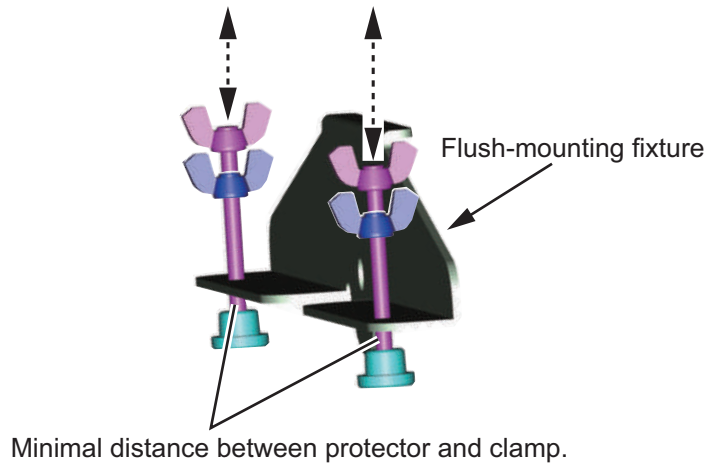

7. Attach the flush-mounting fixture to the unit referring to the diagram below.

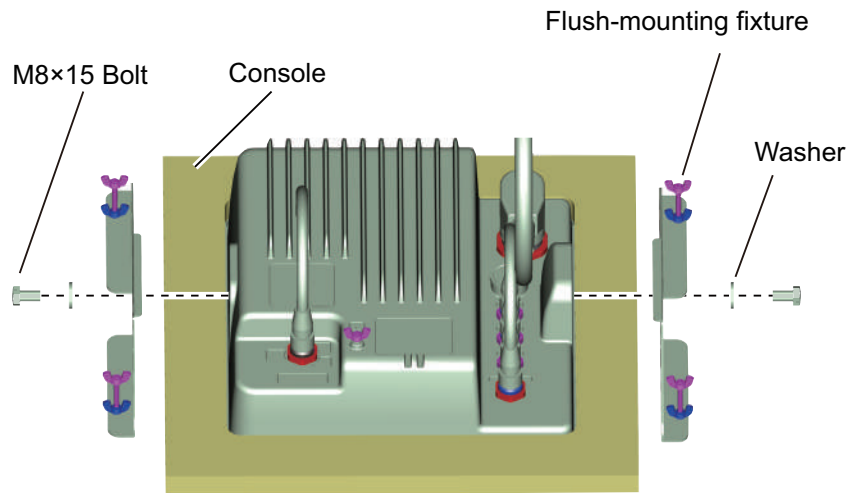

8. Fasten the four wingscrews until the footing is flush against the mounting area. See No. 2 in the figure below for reference.

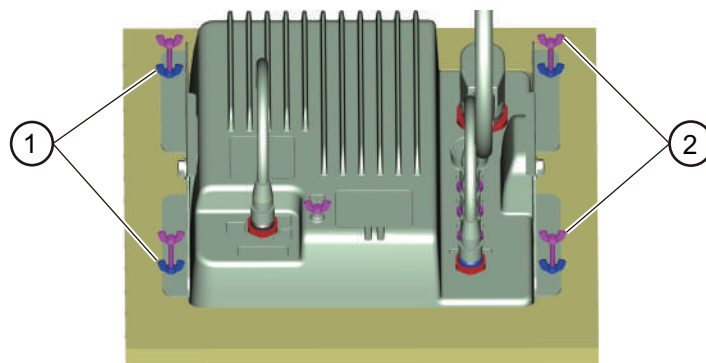


9. Tighten the four wingnuts until the unit is firmly secured. See No. 1 in the figure above for reference.


1.2 Antenna Unit Installation

How to select the location for the antenna unit


- The antenna unit is installed either on top of the wheelhouse or a platform on the radar mast. Install the antenna unit where there is a good complete view. Any obstruction causes blind sectors. For example, a mast with a diameter smaller than the horizontal beamwidth of the radiator causes only a small blind sector. A horizontal spreader or crosstrees in the same horizontal plane creates a large obstruction. Install the antenna unit above, or below a horizontal spreader or crosstrees.
- You cannot put the antenna unit where there is a completely clear view in all directions. Make sure you check for blind sectors on the radar screen after you have installed the radar.
- To reduce the electrical interference, do not run the signal cable near other electrical equipment. Also do not run the cable in parallel to power cables.
- A magnetic compass gives error if the antenna unit is installed near the magnetic compass. See SAFETY INSTRUCTIONS for the compass safe distances to prevent the interference to a magnetic compass.
- Do not apply paint to the radiator aperture. The radar wave cannot be transmitted if there is paint on the radiator.
- If this radar is installed on a large vessel, follow the points shown below:
 - The length of the signal cable between the antenna unit and the display unit is max. 30 m.
 - The output from a funnel or exhaust vent decreases aerial performance and hot gases can damage the radiator. The antenna unit must not be installed where the temperature is more than 55°C.
- The antenna unit can be installed on the bridge, a common mast, or the radar mast.

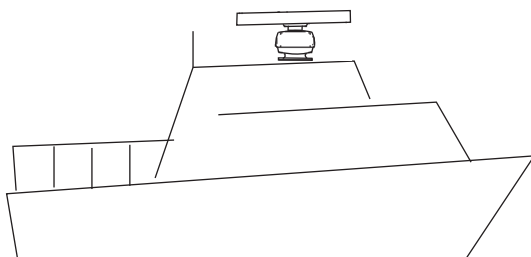

(a) On bridge

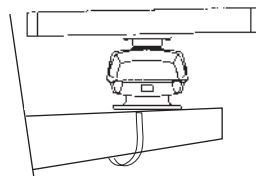

(b) Common mast

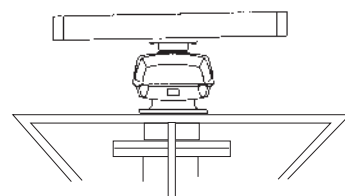

(c) Radar mast


1.2.1 Installation procedure

Refer to the outline drawing at the back of this manual for the dimensions. Make five holes in the platform. Four holes to fasten the antenna unit and one hole for the signal cable.


How to fasten the radiator to the chassis

See the packing list at the back of this manual for the installation materials.

1. Remove the radiator cap from the radiator bracket.
2. Apply marine sealant to the surface of the antenna radiator and the radiator bracket. See the figure shown below for the location.

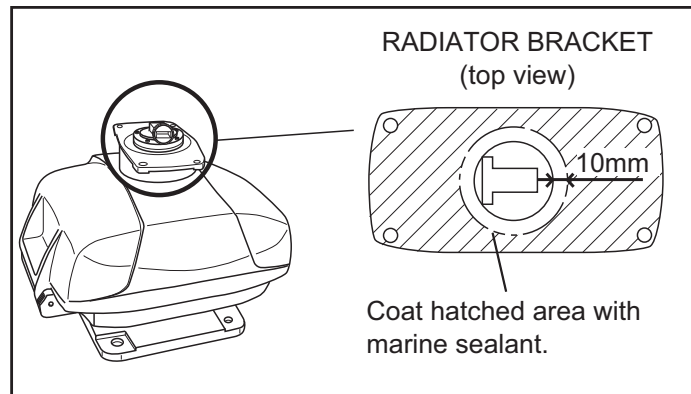

3. Apply the marine sealant to the threads in the four holes on the antenna radiator.
4. Apply the grease to the O-ring and set the O-ring to the radiator bracket.
5. Set the antenna radiator on the radiator bracket.
6. Apply the marine sealant to the radiator bolts (4 pieces). Fasten the antenna radiator to the radiator bracket with the radiator bolts, flat washers and spring washers.

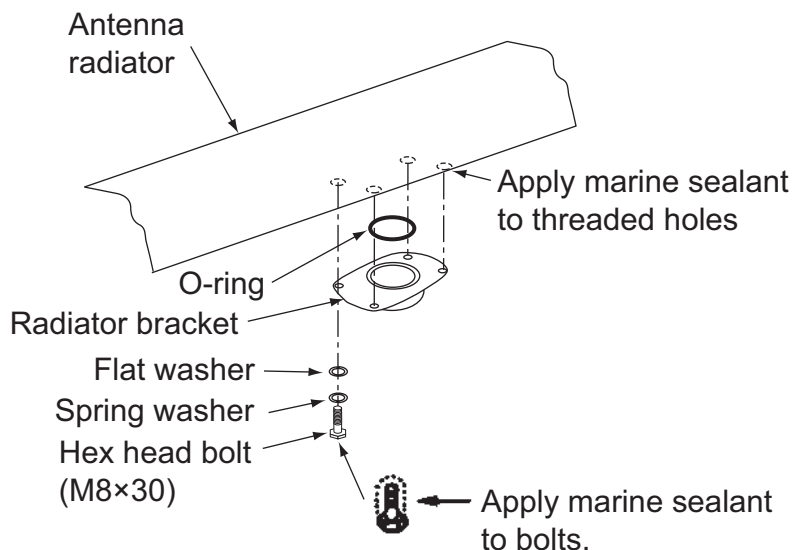

1. HOW TO INSTALL THE SYSTEM

1.2.2 How to install the antenna unit


You can install the antenna unit by one of the two methods shown below.

- Use the outside holes
- Use the inside holes

How to use outside holes of the antenna housing

Use the hex head bolts (supplied) to install the antenna unit as shown in the illustration below.

1. Put the rubber mat (supplied) on the platform.

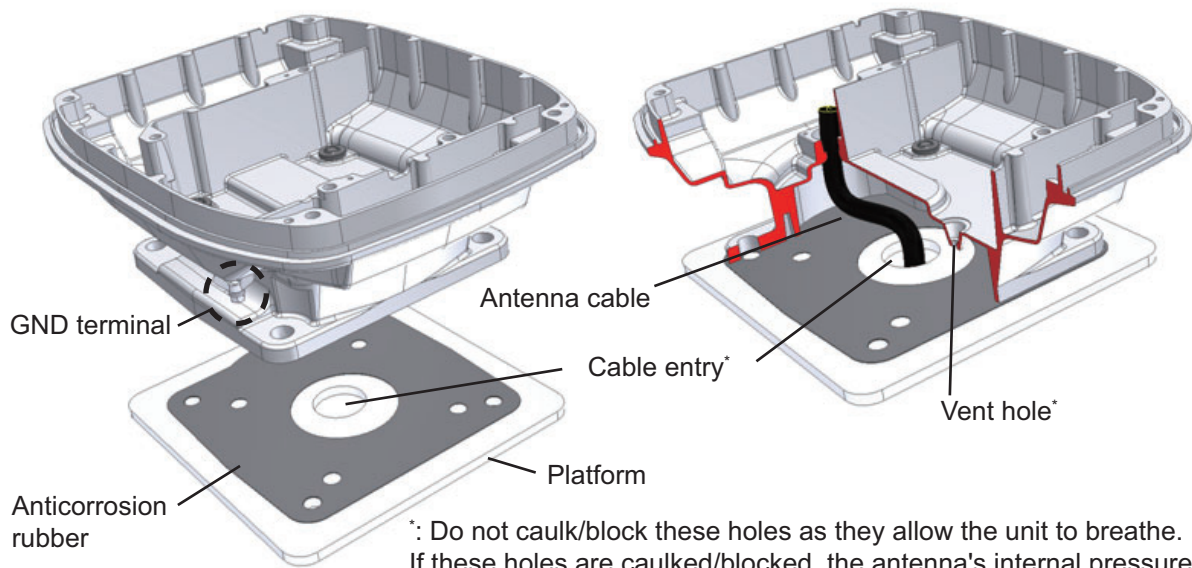

*: Do not caulk/block these holes as they allow the unit to breathe. If these holes are caulked/blocked, the antenna's internal pressure becomes negative. Negative pressure causes internal water leakage.


2. Put the antenna unit on the rubber mat. Align the position of the antenna unit as shown in the illustration below.




CAUTION

Do not lift the antenna by the radiator, the radiator may be damaged.


Always lift the antenna by the housing.

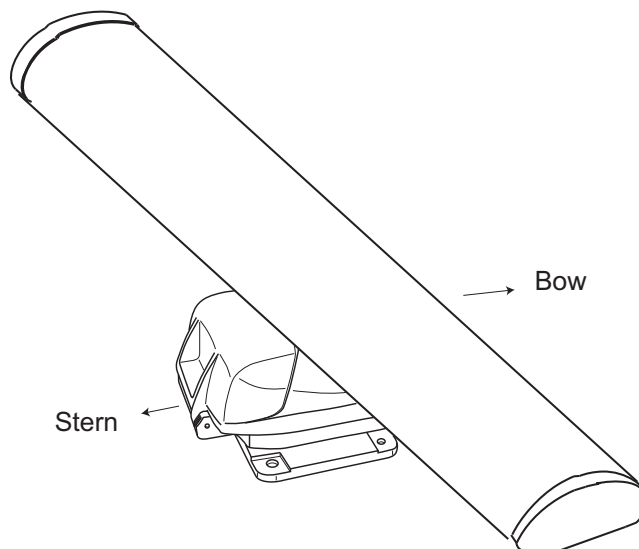


3. Set four hex head bolts (M12×60, supplied) and seal washers (supplied) from the top of the antenna housing, as shown below.

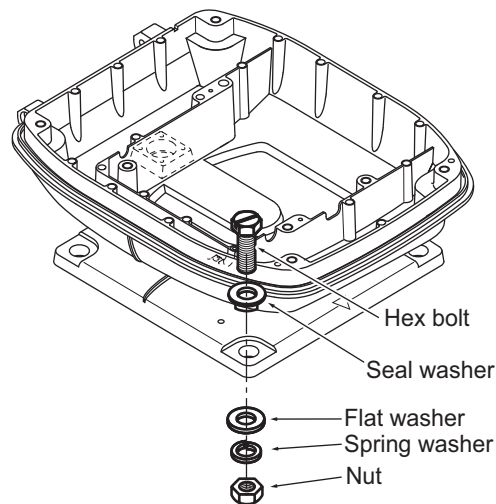

4. Set the flat washers (M12, supplied), spring washers (supplied) and nuts (supplied) to the hex head bolts. Tighten by turning the nuts. Do not tighten by turning the hex head bolts, to prevent damage to the seal washers.

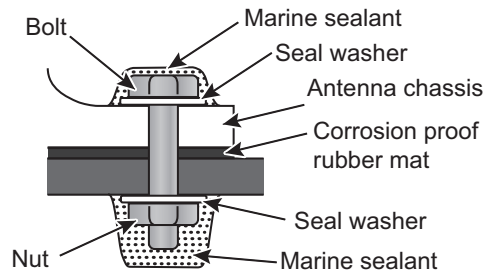


5. Apply anti-corrosive sealant to the flat washers, spring washers, nuts and visible parts of bolts.
6. Prepare the ground point on the platform. Use an M6×25 bolt, nut and flat washer (supplied). The ground point must be within 300 mm from the ground terminal on the antenna unit.
7. Run the ground wire (RW-4747, 340 mm, supplied) between the ground terminal and the ground point.
8. Apply marine sealant to the ground terminal and ground point as shown below.

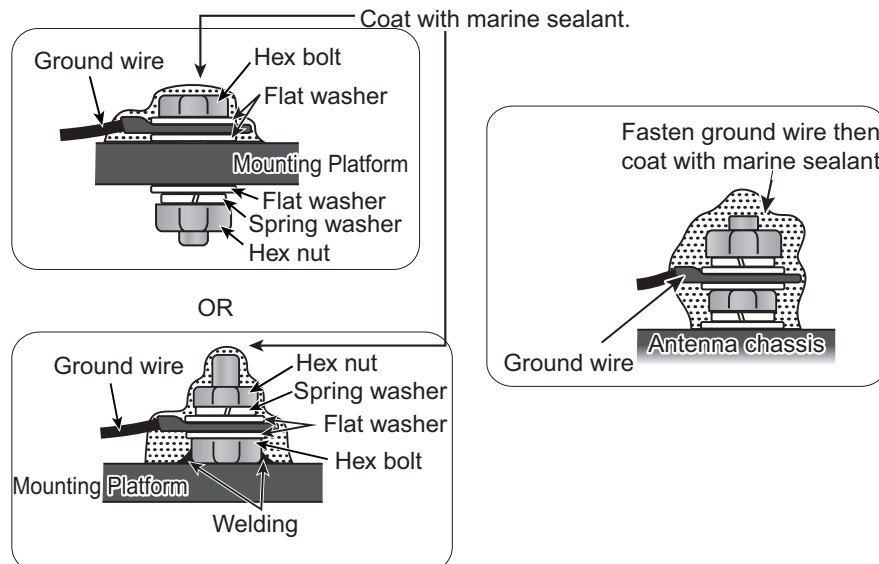

1. HOW TO INSTALL THE SYSTEM

1.2.3 How to use the inside holes of the antenna housing (FR-8045)

This method requires removal of the RF unit from the antenna unit to access the inside fixing holes. Use four hex head bolts, flat washers, spring washers and nuts (local supply) to install the antenna unit. Check the length of the bolts before you install.

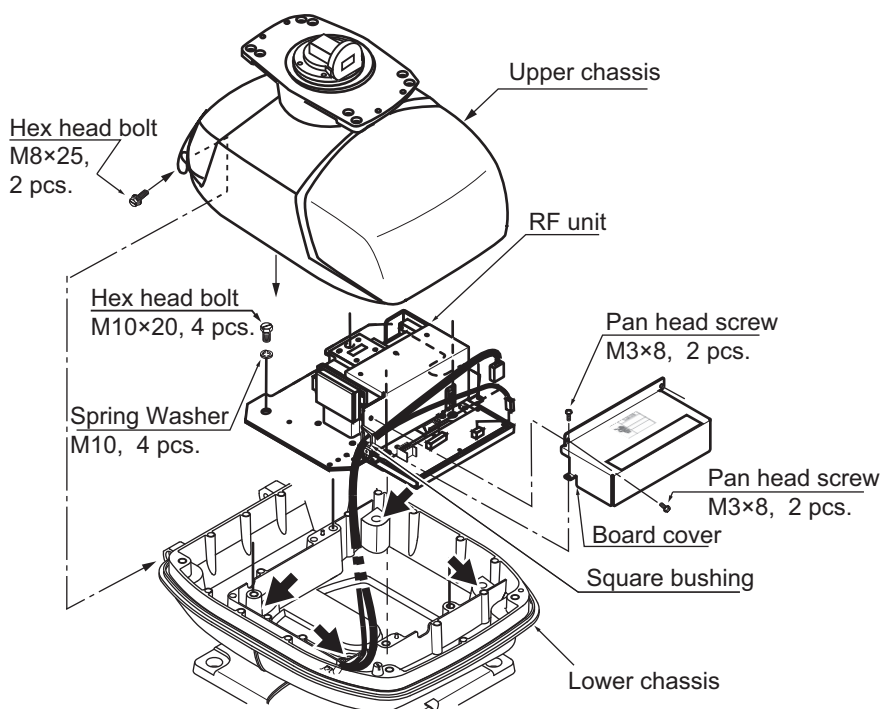


Antenna unit chassis, upper chassis separated

1. Unfasten four bolts on the cover to open the antenna unit.
2. Disconnect the connectors connected between the upper chassis and the lower chassis.
3. Remove two hex head bolts (M8×25) to separate the upper chassis from the lower chassis.
4. Loosen four pan head screws to remove the cover from the pc board.
5. Remove the connector from the RF unit.
6. Loosen four hex head bolts to remove the RF unit.
7. Set the corrosion-proof rubber mat (supplied) to the support platform.
8. Cut the rubber bushings in the fixing holes and put four bolts from the inside of the lower chassis. Fasten the lower chassis to the support platform with the spring washers, flat washers and nuts (local supply). Apply marine sealant to the flat washers, nuts and visible parts of bolts.
9. Assemble the RF unit, cover and chassis.
10. Set four caps (supplied) into the outside fixing holes.
11. Prepare the ground point on the platform. Use an M6×25 bolt, nut and flat washer (supplied). The ground point must be within 300 mm from the ground terminal on the antenna unit.
12. Run the ground wire (RW-4747, 340 mm, supplied) between the ground terminal and the ground point.
13. Apply the marine sealant to the ground terminal and ground point. See the illustration on page 8 for instructions.


1.2.4 How to connect the signal cable (FR-8045)

The signal cable runs from the display unit to the antenna unit. To reduce the electrical interference, do not run the signal cable near other electrical equipment. Also do not run the cable in parallel to power cables. Put the cable through the hole and apply sealing compound around the hole for waterproofing.

1. Loosen four bolts, open the antenna cover, and set the stay.

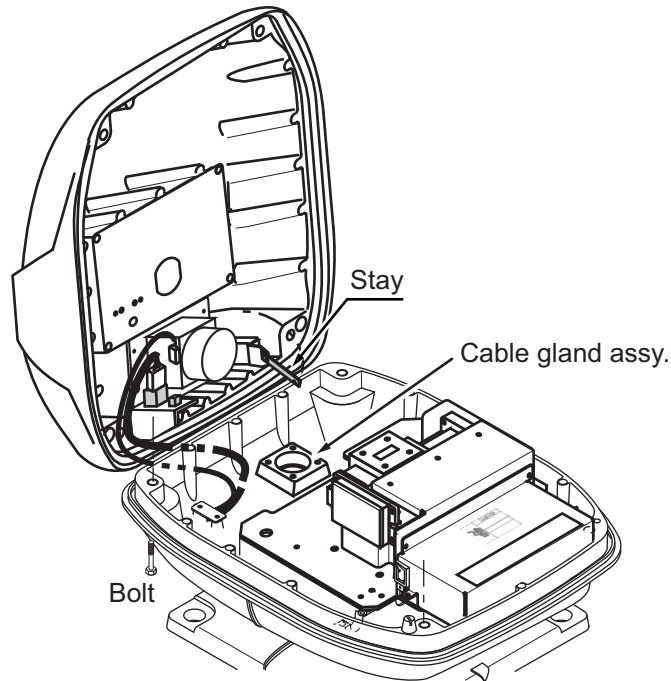


2. Loosen the cable gland assembly (plate, gasket, flat washer).
3. Put the signal cable with the connector through the bottom of the antenna unit chassis. Put the cable through the gland assembly as shown below.

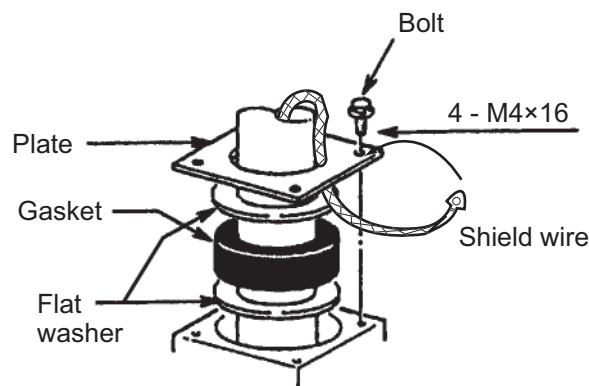


4. Fasten the crimp-on lug of the shield wire to one of the four fixing bolts of the cable gland assembly.

1. HOW TO INSTALL THE SYSTEM


- Put the signal cable so that no more than 4 cm of the sheath is visible, as shown in the figure below. Tighten the fixing bolts.

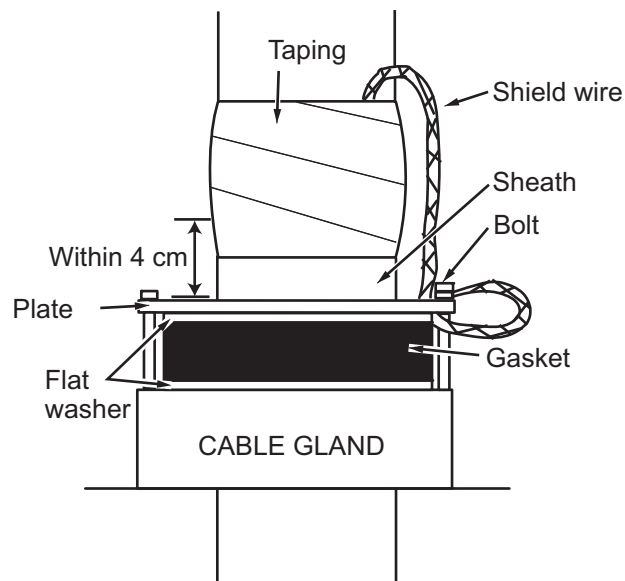

- Loosen four screws in the figure shown below and open the cover.

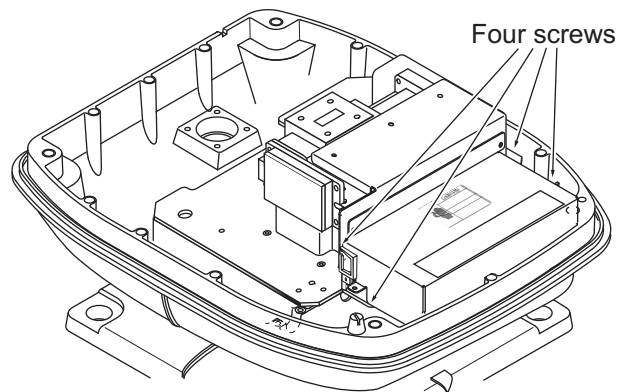


- Put the signal cable through the cable protector.

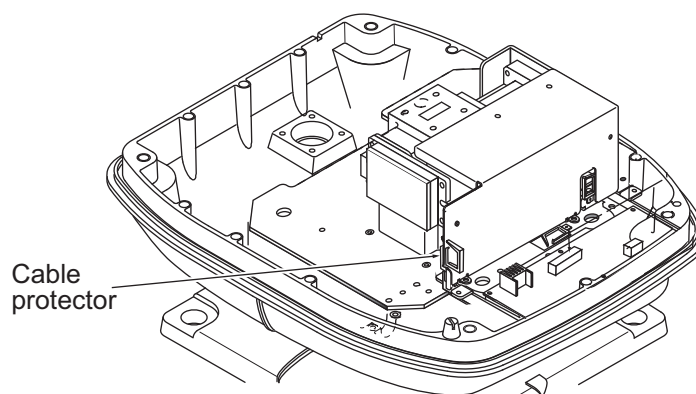

- Connect the signal cable to the RTB Board (03P9249). See the interconnection diagram and the figure shown on page 12.


9. Attach three EMI cores to the signal cable as shown below.

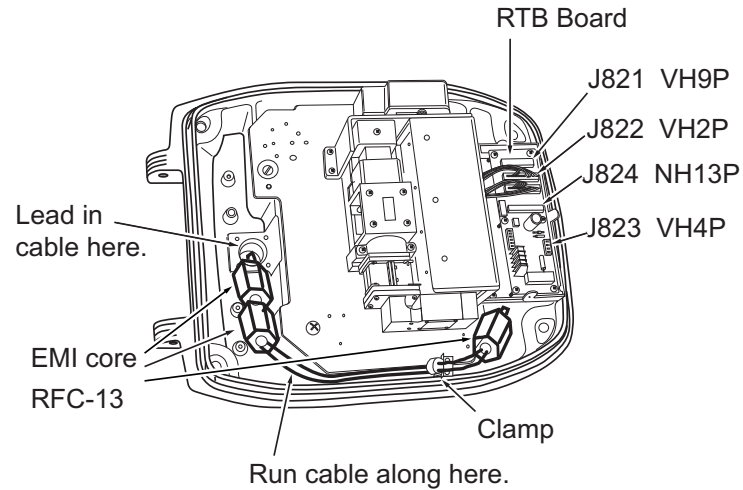

10. Fasten the signal cable with the cable clamp.

11. Undo the stay and close the cover. Securely fasten the scanner bolts.

Note: When you close the cover, set the gaskets to the grooves in the bottom chassis, then tighten the bolts.

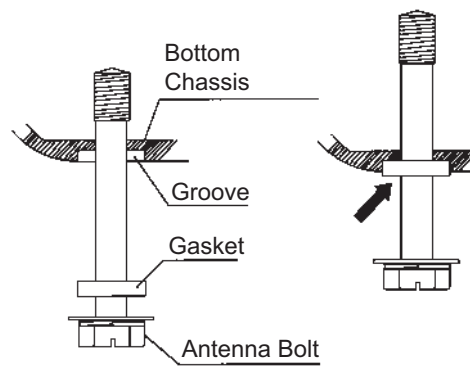


Torque : 9.8 ± 0.1 Nm

1. HOW TO INSTALL THE SYSTEM

1.2.5 How to use the inside holes of the antenna housing (FR-8065/FR-8125/FR-8255)

This method requires removal of the RF unit in the antenna unit to access inside fixing holes. Use hex head bolts, flat washers, spring washers and nuts (local supply) to mount the antenna unit, confirming length of bolts.

1. Unfasten four antenna bolts on the cover to open the antenna unit.
2. Unfasten four screws on the RTB cover to remove it.
3. Unplug connector J827 and J834 on the RTB board
4. Separate upper chassis from lower chassis by removing two hex head bolts (M8x25).
5. Remove RF unit by unfastening four hex head bolts.

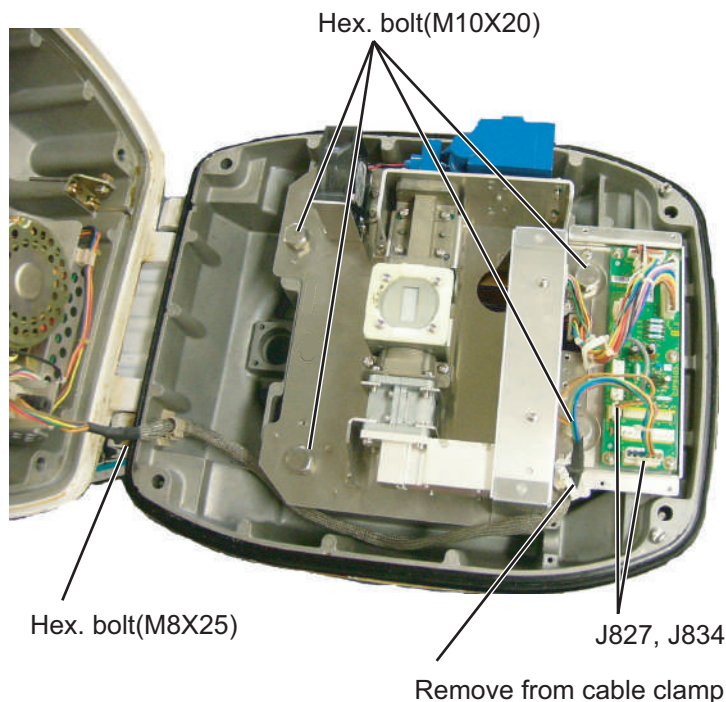

Antenna unit, opened

6. Lay the corrosion-proof rubber mat (supplied) on the mounting platform.
7. Fasten the lower chassis to the mounting platform with hex head bolts, spring washers, flat washers and nuts (local supply), and then coat flat washers, nuts and exposed parts of bolts with marine sealant. Cut a slit in the rubber bushing and insert bolt into the bushing. Do not use seal washers.
8. Reassemble RF unit, cover and chassis.
9. Set four knob caps (supplied) into outside fixing holes.
10. Do steps 6-8 in "Outside fixing holes" on page 8.


1.2.6 How to connect the signal cable (FR-8065/FR-8125/FR-8255)

Only the signal cable runs from the display unit (power supply unit in case of FR-8255) to the antenna unit. In order to minimize the chance of picking up electrical interference, avoid where possible routing the signal cable near other onboard electrical equipment. Also, avoid running the cable in parallel with power cables. Pass the cable through the hole and apply sealing compound around the hole for waterproofing.


Fabricating the signal cable

This type of signal cable is used with other models of radar. For these models, the following fabrication is required.


1. Remove shrink tubing from the signal cable.

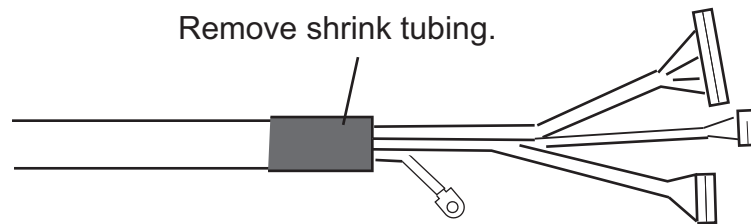

2. Remove vinyl sheath approx. 50 mm.

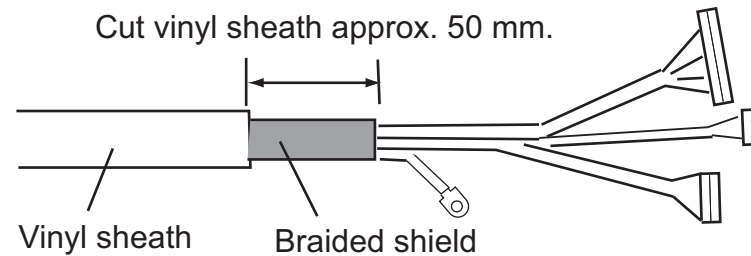


3. Wrap vinyl tape at the end of the vinyl sheath.

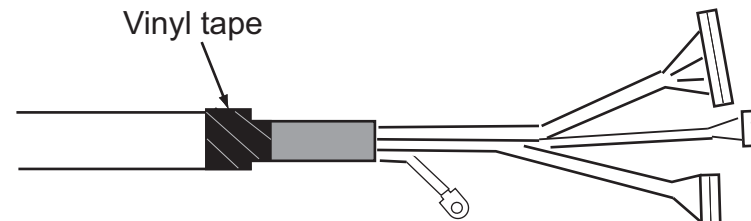

1. HOW TO INSTALL THE SYSTEM


Connecting the signal cable

1. Open the antenna cover by loosening four bolts, and then fix the stay.

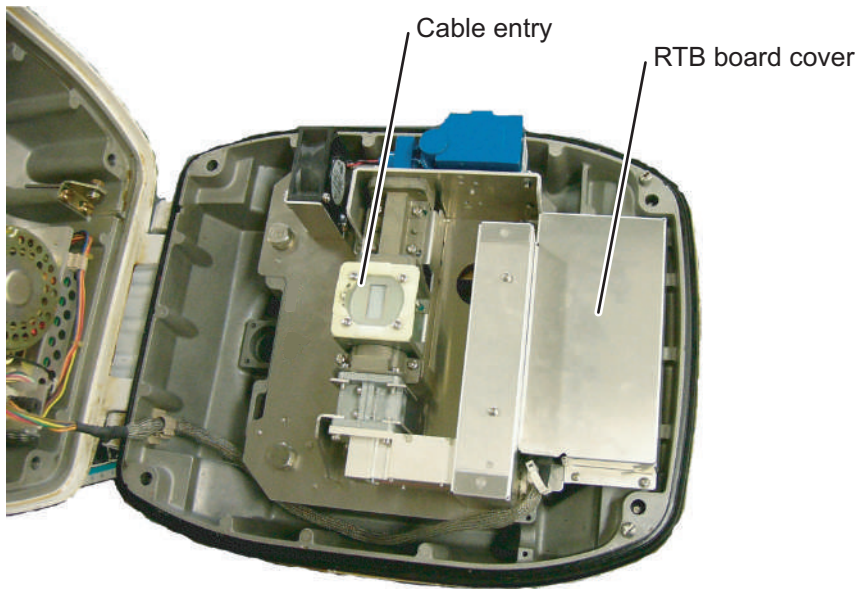

Antenna unit chassis, cover opened


2. Unfasten the cable gland assembly (plate, gasket, flat washer). The plate may be discarded.
3. Pass the signal cable with connector through the bottom of the antenna unit chassis. Pass the cable through the gland assembly as shown below.

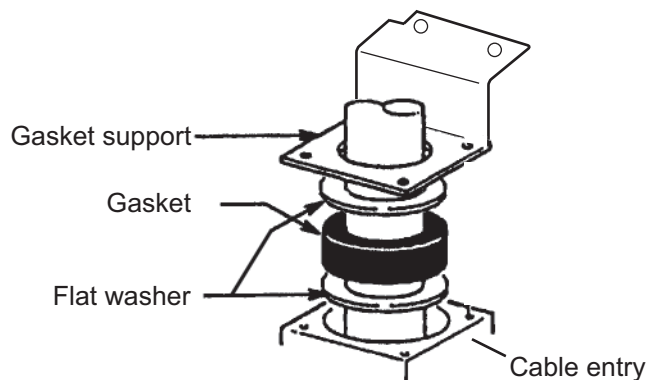

Passing the signal cable through the cable gland assembly

4. Fasten the gasket support with four bolts. Using one of the four bolts, fasten the crimp-on lug to the shield wire.

5. Fasten the shielded part of the signal cable with shield clamp (installation material) as shown below.

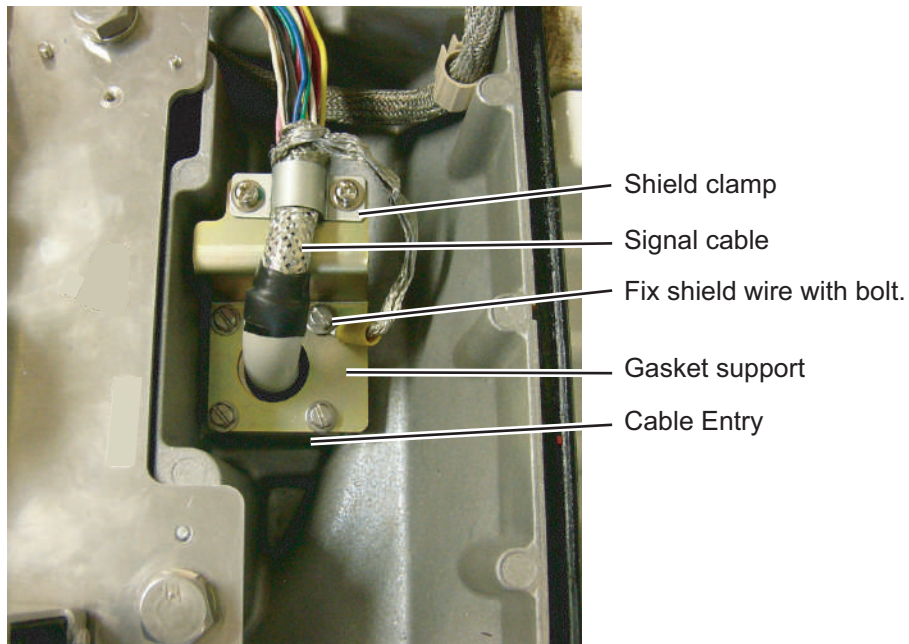


How to fix signal cable in cable gland

6. Unfasten four screws to remove the RTB board cover.
7. Connect the plugs of the signal cable to the RTB board.

FR-8065, FR8125 : J821, J823, J824, J822

FR-8255 : J821, J823, J824, J820

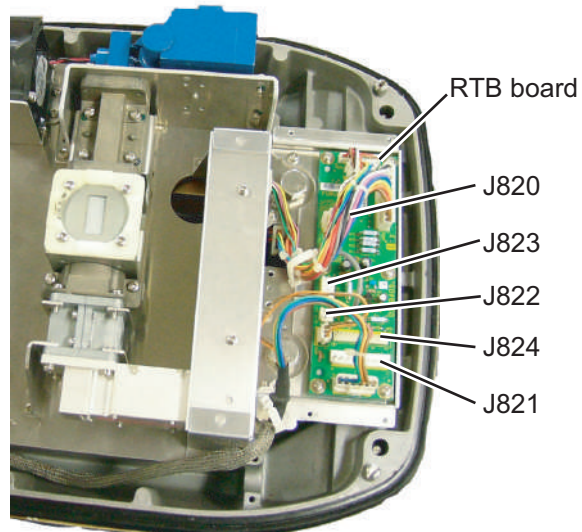


Connecting to the RTB board

8. Reattach the RTB board cover.

1. HOW TO INSTALL THE SYSTEM


9. Attach three EMI cores to the signal cable as shown below.

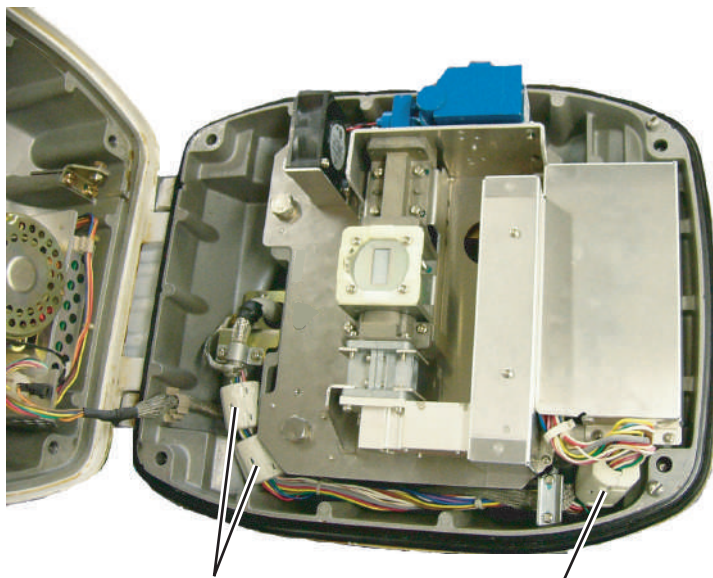


EMI Core RFC-13 (2 pcs) EMI Core RFC-H13 (1 pc)

Antenna unit chassis, cover opened


10. Fix the signal cable with the cable clamp as follows.
 - a) Dismount the cable clamp plate and remove clamp and gasket.

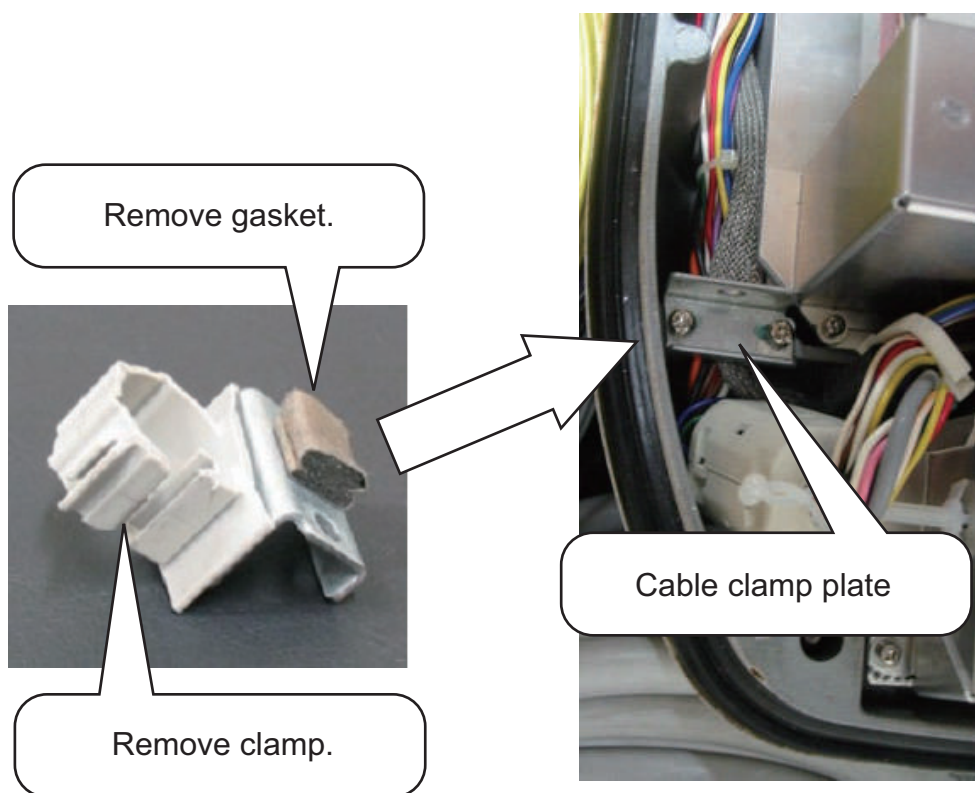

b) Run the signal cable as shown below.

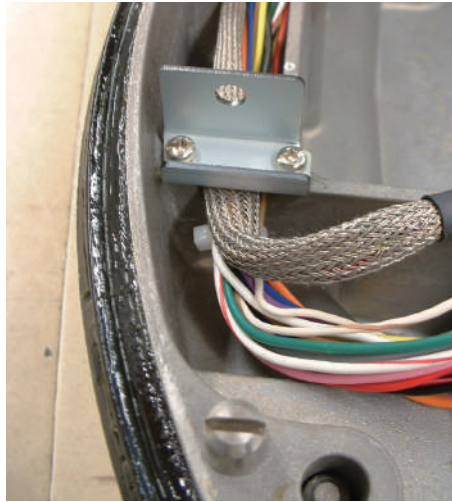


c) Fix the signal cable with cable clamp as shown below.

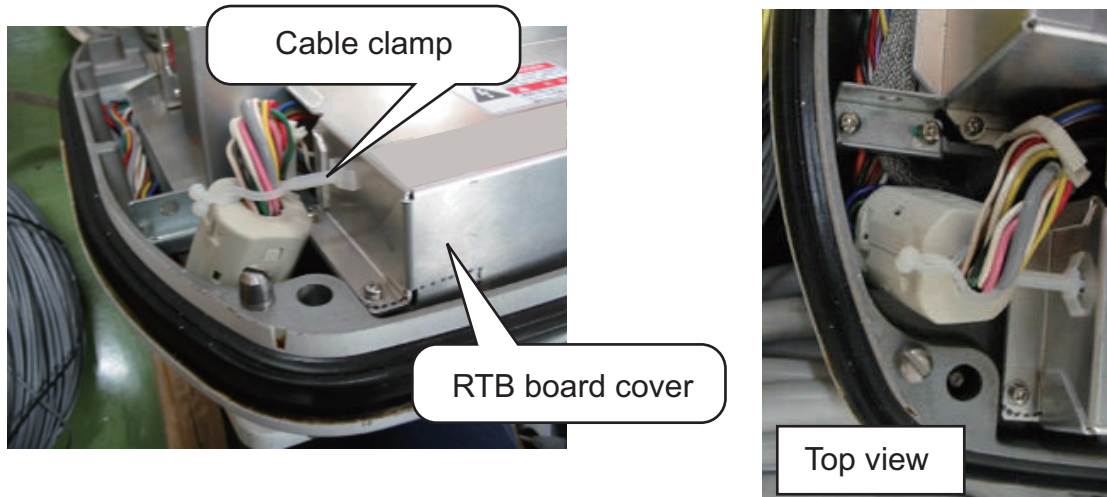

11. Release the stay and close the cover. Loosely fasten the antenna bolts; you will have to make some adjustments inside after completion of wiring.

Note: When you close the cover, set the gaskets to the grooves in the bottom chassis, then tighten the bolts.

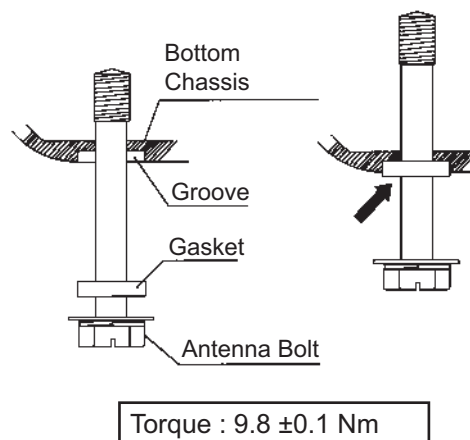


1.3 Power Supply Unit

A power supply unit is shipped with the FR-8255, because of its high power consumption.

The power supply unit can be installed almost anywhere provided the location is dry, well-ventilated, sufficient maintenance space is provided and is installed within 5 m (cable length) from the display unit. To fix the unit, use four self-tapping screws (5x20).


Note: Do not install the power supply unit on the overhead; install it on the deck or bulkhead.

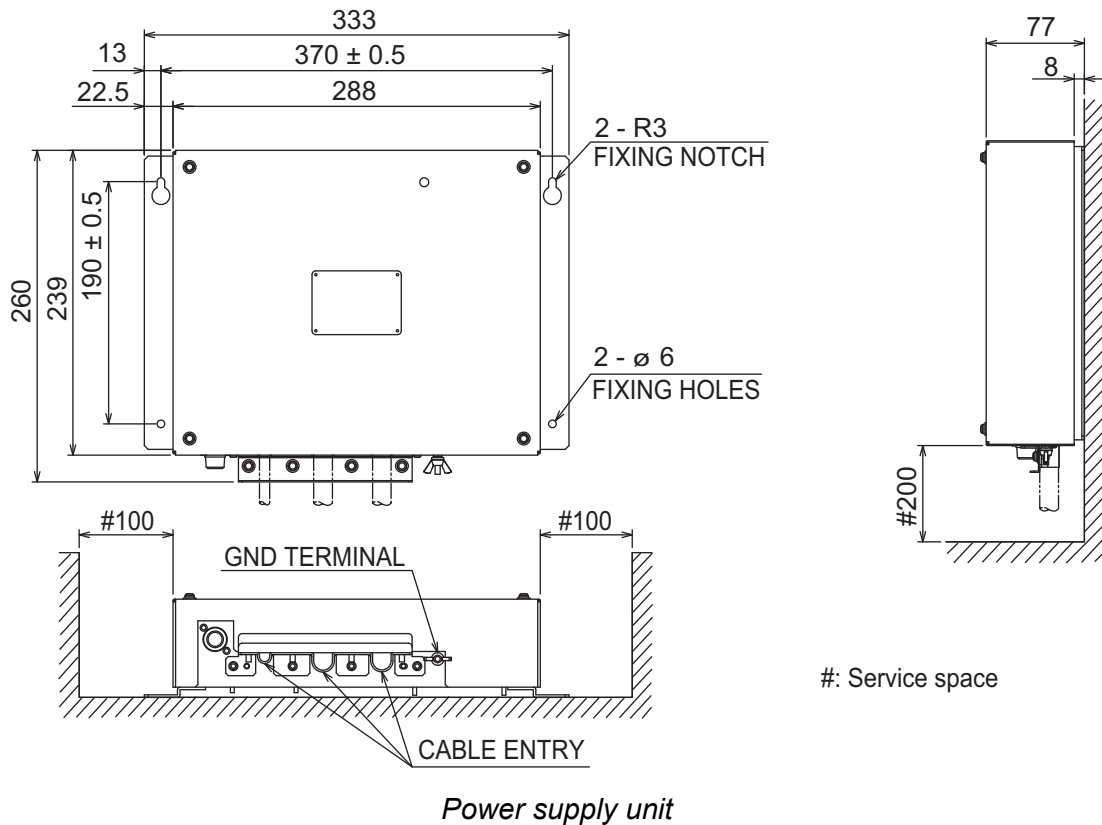

2. CABLE CONNECTION AND WIRING

2.1 Standard Connection

Connect all necessary cables, using the figure and table below for reference.

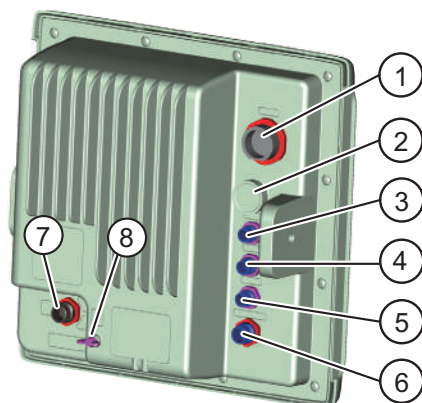


No.	Description	Cable Required
1	Antenna cable to antenna unit (FR-8045)	MJ-B24LPF0005-**+R *: 50/100/150/200/300
	Antenna cable to antenna unit. (FR-8065/8125)	MJ-B24LPF0012-**+R *: 100/150/200/300
	Antenna cable to antenna unit. (FR-8255)	• MJ-B24LPF0011-050+R • RW-9771 (10m, 15m, 20m, 30m) • VL3P-VV-S2X2C-AA050
2	USB (Used by service man only).	
3	Heading Sensor. (AD-10 format)	(MJ-A6SPF0007-100C)
4	NMEA1 input/output. (Navigational equipment)	(MJ-A7SPF0007-050C)
5	NMEA2 input/output. (Navigational equipment)	(MJ-A7SPF0007-050C)
6	Option. (External buzzer, Remote display)	(See section 4.2 for cabling.)
7	Power in. To ship's power (pos = white, neg = black)	(MJ-A3SPF0017-050ZC)
8	Grounding. Connect from here to ship's terminal.	IV-2sq.

2.2 Wiring the Power Supply Unit (FR-8255 only)

2.2.1 Cabling


1. Unfasten four screws to remove the cable clamp.
2. Unfasten four screws to remove the cover.
3. Attach the connectors of three cables as shown in the figure below.

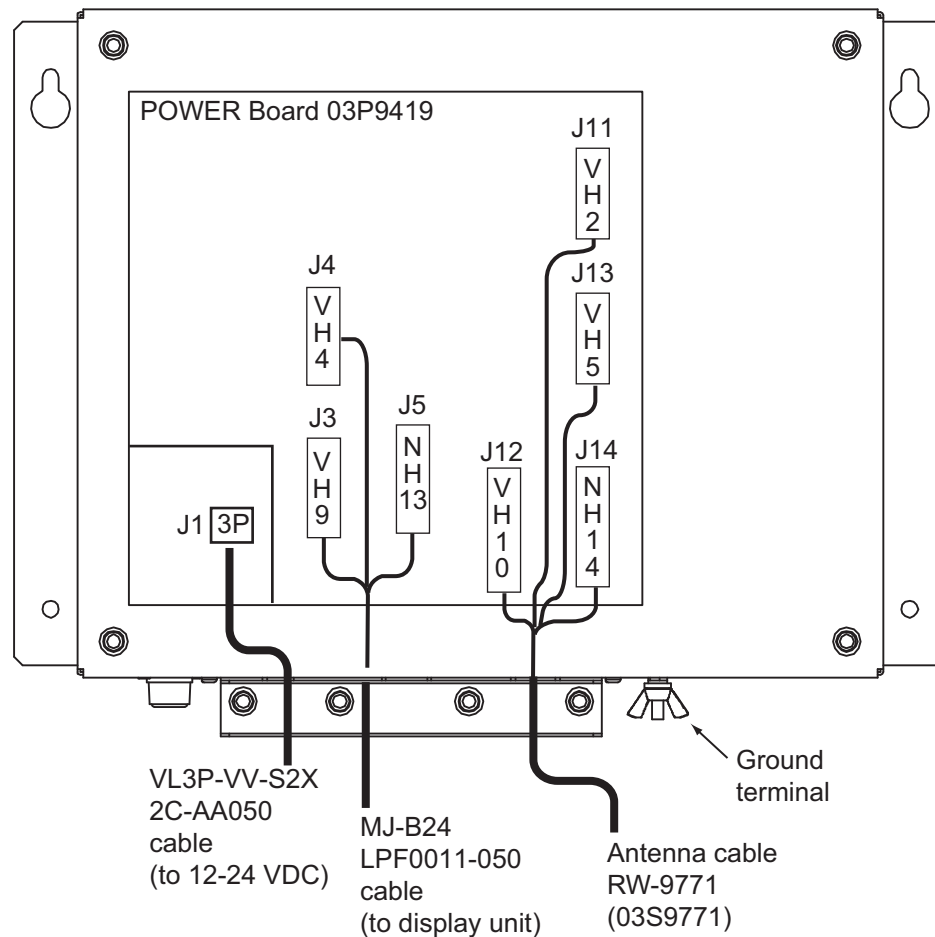

4. Lay three cables in respective slots referring to the figure above.
5. Reattach the cover and the cable clamp.
6. Connect a ground wire (local supply, IV-2sq) between the ground terminal and ship's ground.

2.2.2 Jumper block, slide switch setting

The jumper block JP1 and slide switch S112 on the PWR board (03P9419) must be set according to radar model. Open the unit, locate JP1 and S112 and set them as below.

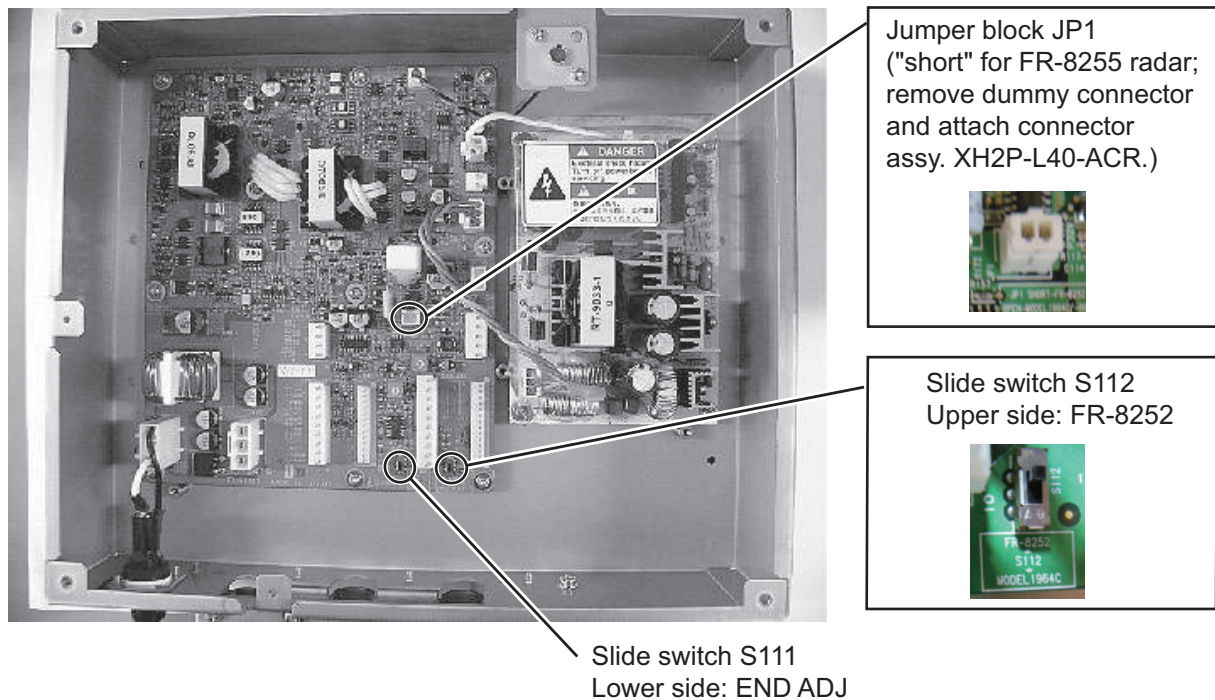

Jumperblock, slide switch	Function	Setting
JP1	Enables/disables motor slow start circuit.	Short (disable)
S111	For "Model" series only.	Lower side (END ADJ)
S112	Radar type selection.	Upper side (FR-8252)

2.2.3 Power requirement, replacement of fuses

Power requirement

The power for the power supply unit and display unit must be drawn from the same power switch on the power terminal board.

Replacement of fuses

The power supply unit is shipped with a 15 A fuse(for connection to 12 VDC battery). Replace the fuse with a 7 A (supplied) when the ship's battery is 24 VDC.

2.3 Data Signals

Position	GNS>GGA>RMC> GLL
Course true	VTG>RMC
Course magnetic	VTG>RMC (true)
Speed over the ground	VTG>RMC
Water speed and heading	VHW
Distance to waypoint	BWR>BWC>RMB
Destination waypoint, true	BWR>BWC>RMB
Destination waypoint, magnetic	BWR>BWC
Heading (true)	THS>HDT>VHW (true)>HDG>HDM>VHW (magnetic)
Heading (magnetic)	HDG> HDM>VHW (magnetic)THS>HDT>VHW (true)
Magnetic variation	HDG>RMC
Cross-track error	XTE>RMB
Depth	DPT>DBT
Temperature	MTW
Wind (true)	MWV>VWT
Wind (relative)	MWV>VWR
Time	ZDA

2.4 Input/Output Ports

2.4.1 HDG port


This port is for AD-10 format.

Parameter	Rating	Remarks	Circuit Diagram
Forward Current	50mA	Absolute Maximum	
Reverse Voltage	6V	Absolute Maximum	
Forward Voltage	1.1V (TYP) 1.4V (MAX)	$I_F=4mA$	
Parameter	Rating	Remarks	Circuit Diagram
Forward Current	50mA	Absolute Maximum	
Reverse Voltage	6V	Absolute Maximum	
Forward Voltage	1.1V (TYP) 1.4V (MAX)	$I_F=4mA$	

2.4.2 NMEA1 ports


Transmitter

This port complies with “IEC 61162-1 Ed4”.

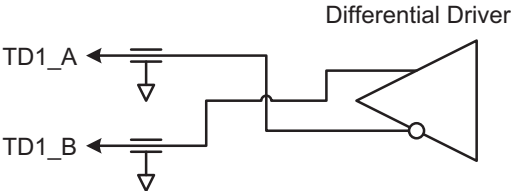Parameter	Rating	Remarks	Circuit Diagram
“H” level output current	-60mA	Absolute Maximum	
“L” level output current	60mA	Absolute Maximum	
Differential output voltage	1.5V (MIN) 5V (MAX)	Load 54Ω	

Receiver

This port complies with “IEC 61162-1 Ed4”. Also, this port is an optocoupler used to isolate I/F terminal on RD terminal. Isolation voltage is 3750 Vrms (absolute maximum rating).

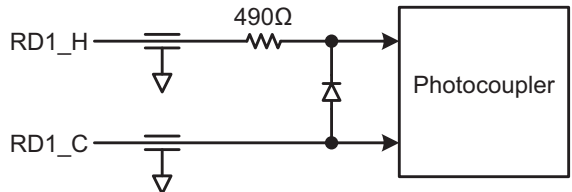Parameter	Rating	Remarks	Circuit Diagram
Forward Current	50mA	Absolute Maximum	
Reverse Voltage	6V	Absolute Maximum	
Forward Voltage	1.1V (TYP) 1.4V (MAX)	$I_F=4mA$	

2.4.3 NMEA2 ports

This port complies with “IEC 61162-1 Ed4”.

Circuit specification is the same as NMEA1 port.

3. EQUIPMENT SETTINGS

3.1 Setting the Language

After installation, on first power-up, select a language as follows:

1. Press the  /**BRILL** key to turn on the power.

"Now Initializing" appears and after a short time the window below appears.

Language	English
Langue	Français
Idioma	Español
Sprache	Deutsch
Lingua	Italiano
Idioma	Português
Sprog	Dansk
Språk	Svenska
Språk	Norsk
Kieli	Suomi
Γλώσσα	Ελληνικά
语言	中文
言語	日本語
ភាសា	ភាសាខ្មែរ
언어	한국어
Язык	Русский
Bahasa	Indonesia
ဘာသာစကား	မြန်မာစကား

2. Use the **CursorPad** to select a language required and press the **ENTER** key.
The window shown below appears.


Language English OK?	
Yes	☐
No	☒

Language selected

3. Select [Yes] and press the **ENTER** key.

3.2 How to Set the Purpose

1. Press the **MENU** key. The main menu will appear on the screen.
2. Press the **▲** or **▼** button to select [Factory]. The factory menu title bar will appear in gray color right side of the screen.
3. Hold down the **CANCEL/HL OFF** key and press the **MENU** key five times to activate the [Factory] menu.

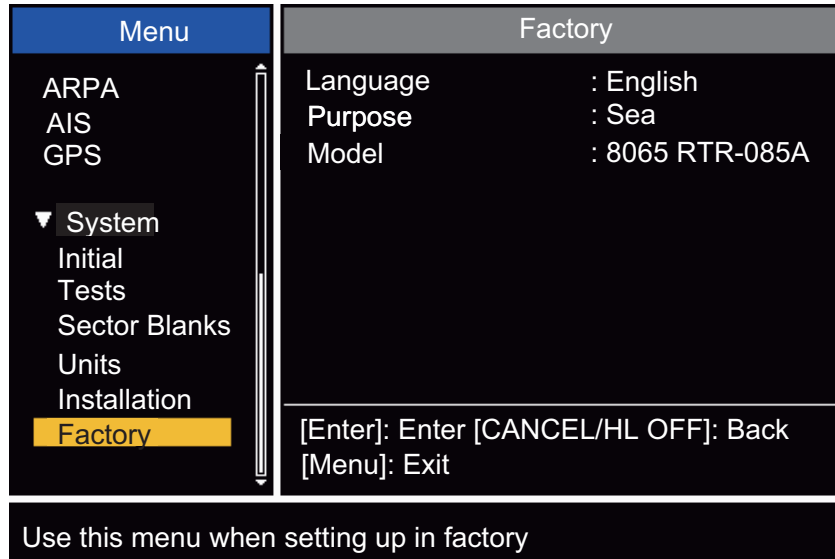

4. Press the **ENTER** key. The [Factory] menu becomes active and the cursor moves to the right-hand column.
5. Press **▲** or **▼** to select [Purpose].
6. Press the **ENTER** key to show the setting window.



7. Press **▲** or **▼** to select the purpose required.
 8. Press the **ENTER** key to set the purpose.
 9. Press **▼** to select [Model].
 10. Press the **ENTER** key to show the setting window. The default setting is [8065 RTR-085A].
- Note:** For FR-8045, the default is [8045 RTR-088A]. No adjustment is necessary, go to step 13.





11. Press **▲** or **▼** to select the appropriate model.
12. Press the **ENTER** key to set the model.
13. Press the **CANCEL/HL OFF** key to return to the main menu.

3.3 How to Enter Initial Settings

After you complete setting the radar purpose, enter the Initial Settings as follows:

1. On the main menu, press ▲ or ▼ to select [Installation].

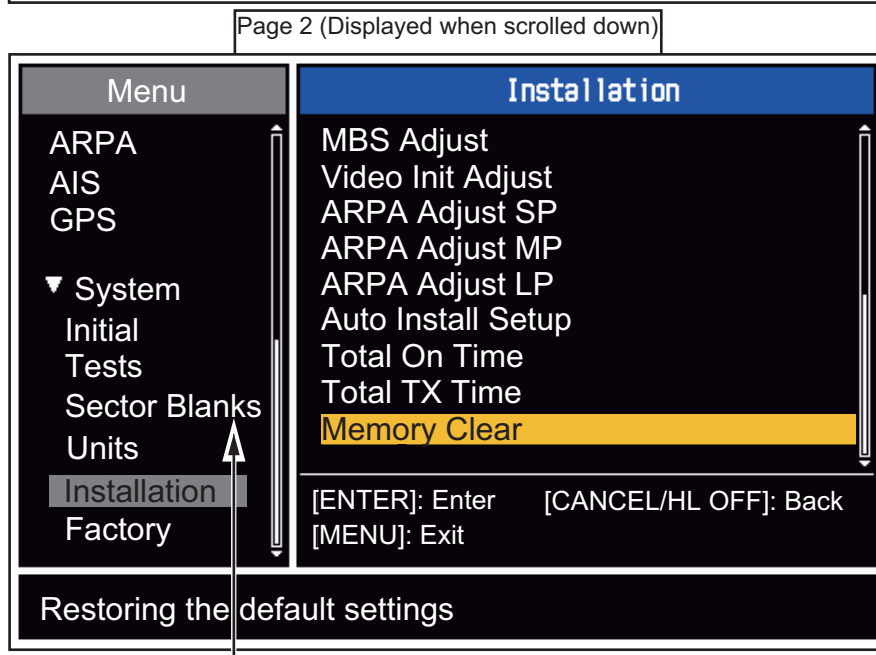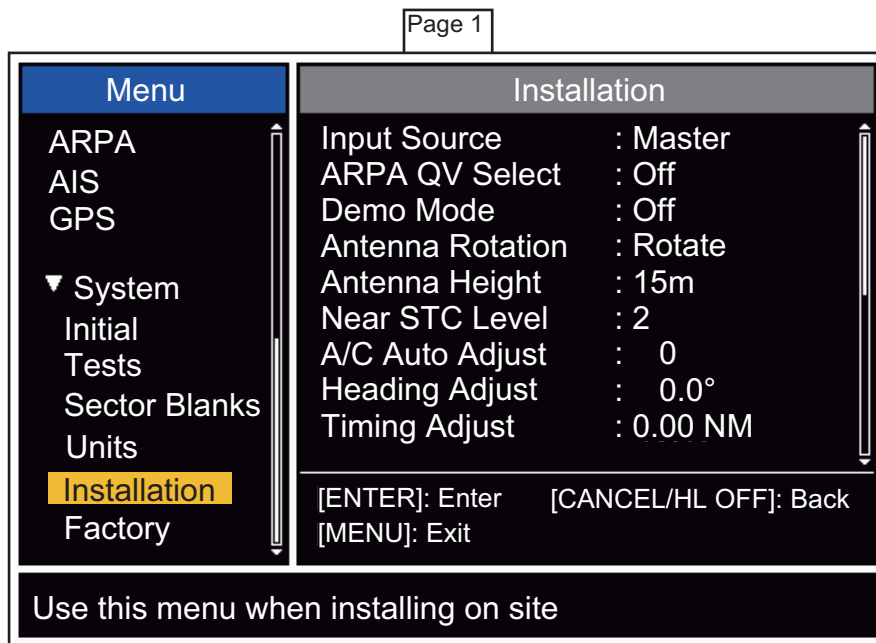

Set the [Sector Blank] to [Off] in order to execute [Auto Installation Setup] in the [Installation] menu.

2. Press the **ENTER** key. The [Installation] menu becomes active and the cursor moves to the right-hand column.
3. Press ▲ or ▼ to select an item from the [Installation] menu.
4. Press the **ENTER** key to show the settings window.
5. Press ▲ or ▼ to select an option.
6. Press the **ENTER** key to set the option.
7. Press the **MENU** key to close the main menu.

Basic settings

[Input source]: Select the input source from [Master] and [Slave]. The default setting is [Master].

Master The display unit operates as the main radar.

Slave The display unit operates as a remote display. For remote displays, adjust the [Video Init Adjust] and [Timing Adjust].
(See page 30 and page 29, respectively.)

[ARPA QV Select]: Set to [On] to display quantized video on the screen. Set to [Off] for normal use.

[Demo Mode]: Set to [On] to active demo mode. Set to [Off] for normal use.

[Antenna Rotation]: [Rotate] (default setting) transmits the radar pulses by rotating the antenna. [Stop] transmits the radar pulses without rotating the antenna.

[Antenna Height]: Set the height of the antenna above the water surface. The options are 5, 10, 15, 20, 30, 40 and 50m. The default setting is 15m.

[Near STC level]: Set the STC curve to a near distance. The options are 1, 2, 3 and 4. "4" has the strongest effect.


[A/C Auto Adjust]: Adjust the performance of the automatic A/C.

[Memory Clear]: Restore the default settings. [Purpose], [Type] and [Source] are not changed. When turning on the power after a memory clear, the language selection window appears. (See page 25.)

Heading adjustment

Ensure you have installed the antenna unit correctly, so that the unit faces towards the bow of the ship. A target at the front of the ship, aligned with the bow, must appear on the heading line (zero degrees). If the target does not appear on the heading line, follow the procedure below to adjust the heading.

1. Set the ship toward an acceptable target (for example, a ship at anchor or a buoy) at a range between 0.125 and 0.25 nautical miles.
2. Transmit the radar at a range setting of 0.25 nautical miles and measure the bearing of that target relative to the ship using an EBL.
3. Open the [Installation] menu and select [Heading Adjust].
4. Press the **ENTER** key to show the setting window for [Heading Adjust]. (See figure below)

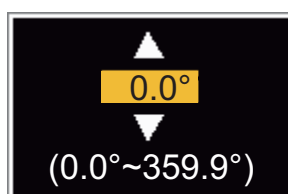

5. Press ▲ or ▼ to set the value measured in step 2. Check that the target appears on the heading line. If necessary repeat steps 1 to 5.
6. Press **ENTER** to complete the adjustment.

How to automatically set the equipment

The equipment can automatically adjust the tuning, timing and video.

Note: Before you proceed, transmit the radar for more than 10 minutes on a long range and ensure [Sector Blank] is set to [OFF].

1. Transmit on the maximum range.
2. Select [Auto Install Setup] from the [Installation] menu and press **ENTER**.


The tuning adjustment begins automatically and the message "Tuning adjusting" appears during the tuning adjustment stage. After the tuning adjustment is complete, the timing and video are adjusted, in that order. The messages "Timing adjusting" and "Video adjusting" will appear during those stages of the [Auto Install Setup]. After all the adjustments are completed, the window disappears.

Note: If any of the results require adjustment for your conditions, use the manual adjustment procedures below to manually adjust them.

Manual timing adjustment

This adjustment gives correct radar performance on short ranges. The radar measures the time required for a transmitted echo to go to the target and return to the source. The received echo appears on the display according to the measured time. The sweep must start from the center of the display.

A trigger pulse created in the display unit goes to the antenna unit through the signal cable to activate the transmitter (magnetron). The time taken by the signal to move to the antenna unit changes, according to the length of the signal cable. During this period, the display unit must wait before the radar starts the sweep. When the display unit is not adjusted correctly, the echoes from a straight object will not appear as a straight line. The target appears "pushed" or "pulled" near the picture center. The ranges to objects are also shown at wrong distances. Below are examples of wrong and correct sweep timings.

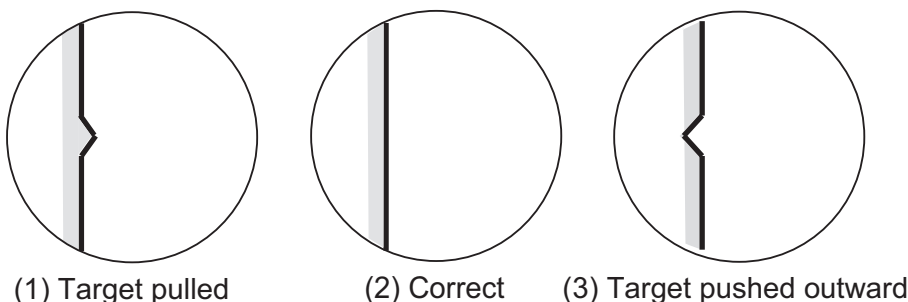

1. Transmit on the shortest range, then adjust the gain and the A/C SEA.
2. Visibly select a target that creates a straight single line, such as harbor walls or straight piers.
3. Open the [Installation] menu and select [Timing Adjust].
4. Press **ENTER** to show the setting window.
5. Press **▲** or **▼** to until the target selected in step 2 is shown as a straight line.
6. Press **ENTER** to complete the adjustments.

Manual MBS adjustment

Reduce the main bang (black hole), which appears at the display on short ranges, as follows:

1. Transmit the radar on the shortest range.
2. Open the [Installation] menu and select [MBS Adjust].
3. Press **ENTER** to show the setting window.
4. Use the ▲ or ▼ to adjust the main bang (between 0 to 255 for FR-8065/FR-8125/FR-8255, 0 to 25 for FR-8045).
5. Press **ENTER** to finish.

Manual video adjustment

Use the following procedure to manually adjust the video settings if necessary:

1. Transmit the radar and adjust the following settings:

Gain	85 to 90
A/C Sea	zero
A/C Rain	zero
Echo Average	OFF
Noise Rejector	OFF
Interference Rejector	2
2. Open the [Installation] menu and select [Video Init Adjust].
3. Press **ENTER** to show the setting window.
4. Press ▲ or ▼ to adjust the white noise on the display. The setting range is 0 to 31. A larger value increases the gain.
5. Press **ENTER** to finish.

Note: If the display is used as a remote display, set [Input Source] to [Slave]. follow the above procedure to adjust the video and take care to ensure the remote display output is similar to the master display output.

ARPA adjustment

During the sea trial, adjust the threshold level of the ARPA for short pulse, middle pulse and long pulse.

- Default setting is 2.
- If the ship echoes are difficult to acquire at setting level 2, adjust to level 1.
- If the ARPA symbol moves to a different echo at setting level 2, adjust to level 3.

4. OPTIONAL EQUIPMENT

4.1 ARP Kit ARP-11


The ARP kit provides automatic radar plotter functions to this radar.

Necessary parts


Name	ARP kit
Type	ARP-11
Code No.	008-523-050

For the contents of the kit, see the packing list attached to the kit.


1. Unscrew 12 screws and five connector nuts at the rear of the display unit. (See the figure below.)

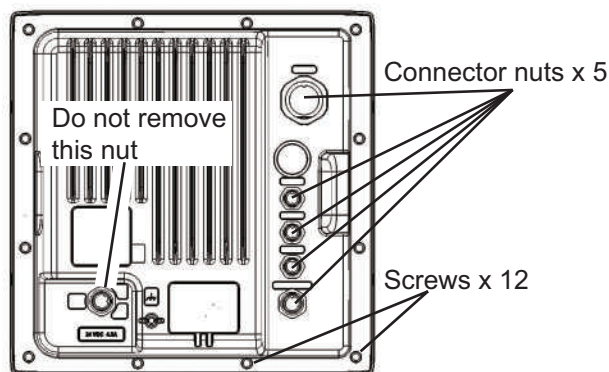

2. Lift the cover slowly and open it as shown below, taking care not to damage the SPU cables.

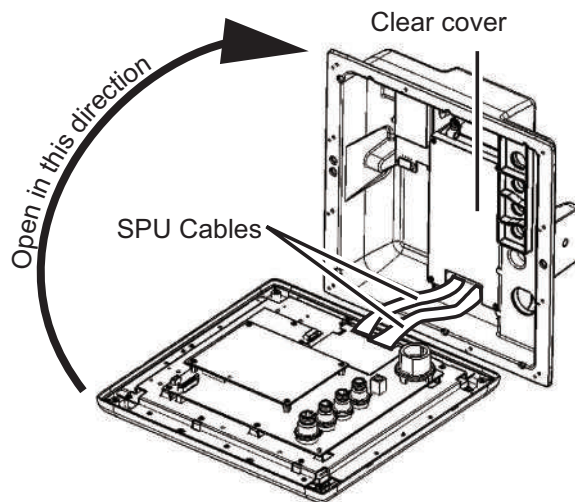


3. Mate P107 on the ARP Circuit-board with J214 on the 03P9586 Board and fasten with four screws.

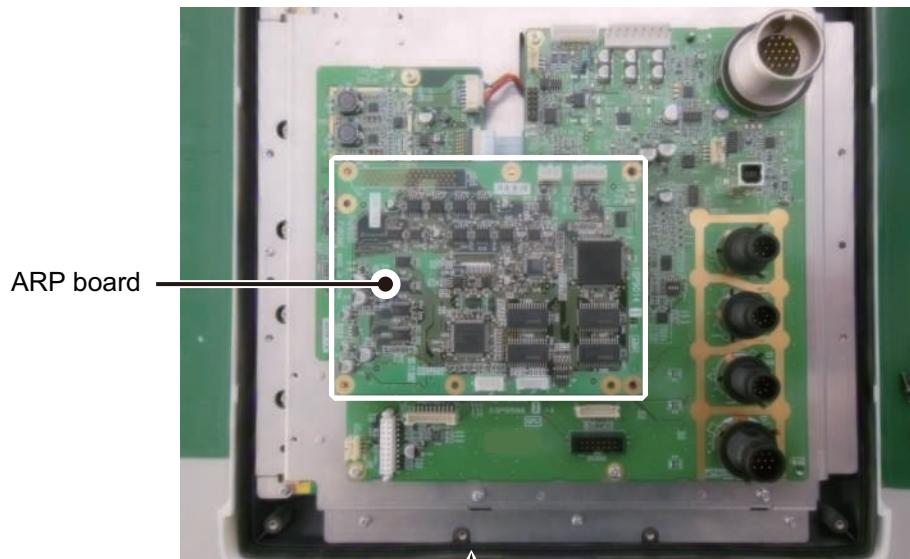

Confirm that the rubber gasket is set securely in the groove around the panel.


4. Reassemble the display unit, taking care not to exceed the torque requirements for each connector nut. (See the figure below for nut torque.)

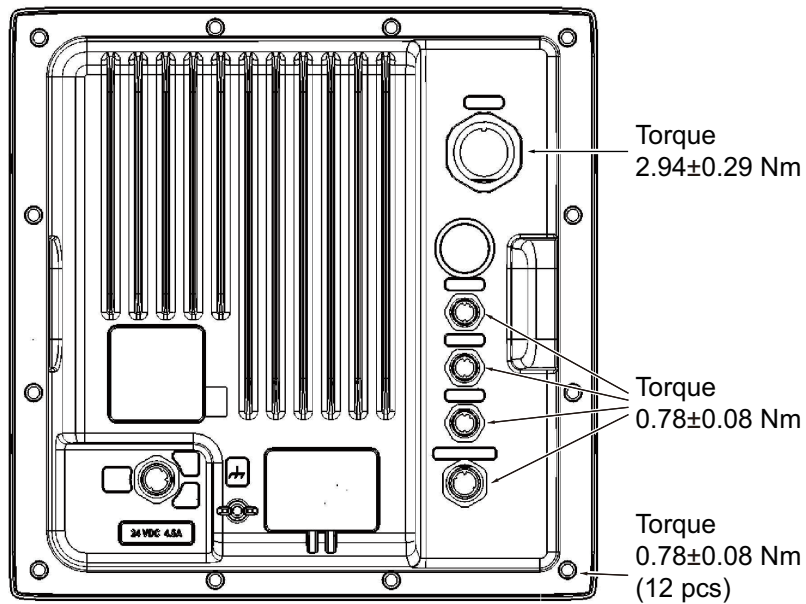

4.2 Connection of Buzzer and/or Remote Display

You will need the cables shown below to connect the optional external buzzer and remote display.

- Two-way cable MJ-A10SPFW0001 +R
- MJ-A7SPF0007-050C
- MJ-B24LPF0010-xxx+R (000: 100, 200, or 300)

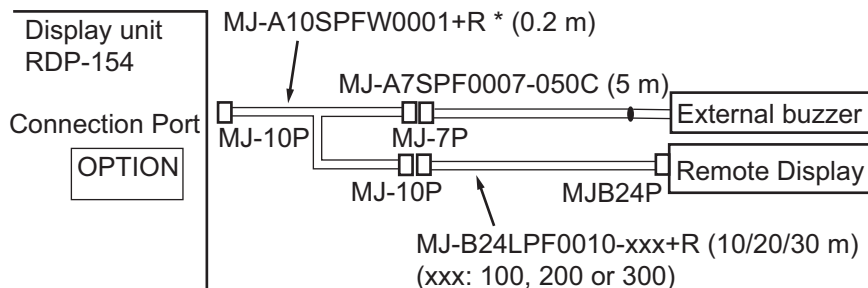

*: This cable is not required to connect the remote display only.

External buzzer


When a target enters, or exits, in the target zone, the optional external buzzer gives a loud alarm.

Type OP03-21
Code No. 000-030-097

Name	Type	Code No.	Qty	Comment
Buzzer	PKB42SWH2940	000-153-221-10	1	One NH connector attached
Cable tie	CV-70N	000-162-185-10	4	
Heat-shrink-tube	3x0.25 BLK	000-165-283-10	1	40 mm
Double-sided tape	9760	000-800-851-00	1	25 mm × 25 mm

Attach the two-way cable and MJ-A7SPF0007-050C cable to the OPTION port at the rear of the display unit. See the above figure.


1. Cut the NH connector at the end of the external buzzer cable to an acceptable length.
2. Solder the external buzzer cable to the MJ-A7SPF0007-050C cable as shown below. Before you solder the cores, cut the heat-shrink-tube in half and set the tubes to the cores of the cable. Solder the cores, then set the tubes on the soldered point.

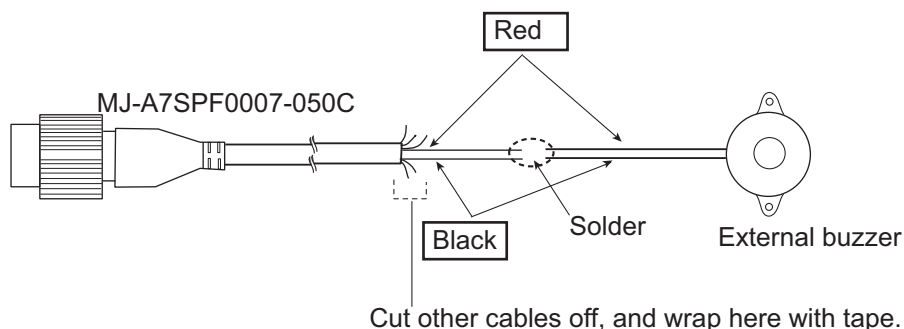


3. Fasten the buzzer with the double-sided tape or two self-tapping screws (3x15 or 3x20, local supply).

APPENDIX 1 MJ CONNECTOR CORROSION PROTECTION

Before connecting the antenna cable to the display unit, take the following corrosion protection measure for the MJ connector on the display unit.

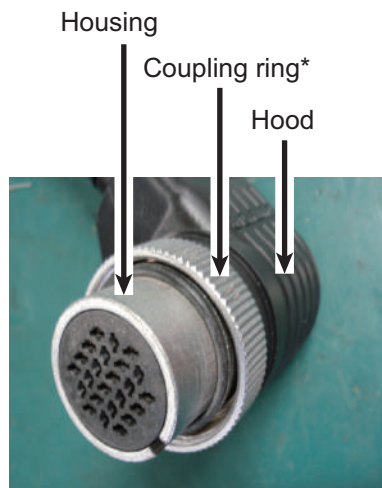

MJ connector on antenna cable

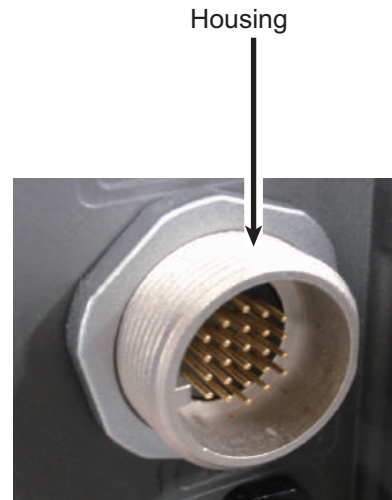

MJ connector on display unit

*: There are two types of coupling rings, round and six sided. This information shows the round ring.

1. Apply silicon grease (or oil compound) as shown below, for corrosion protection.

Silicon grease
(or oil compound)




Put a small amount of silicon grease (or oil compound) on your finger, then coat the threads of the MJ connector on the display unit with the silicon grease.

Name	Type	Code No.
Oil Compound	KS-650N-100	000-166-579-10
Silicon Grease	G-30M-100	000-169-306-10


Note: Make sure no grease or oil contacts the pins of the connector. Grease or oil on the pins can cause faulty connection. If grease or oil is on the pins, use a clean cloth to remove the grease or oil.

2. Connect the MJ connector on the antenna cable to the MJ connector on the display unit.

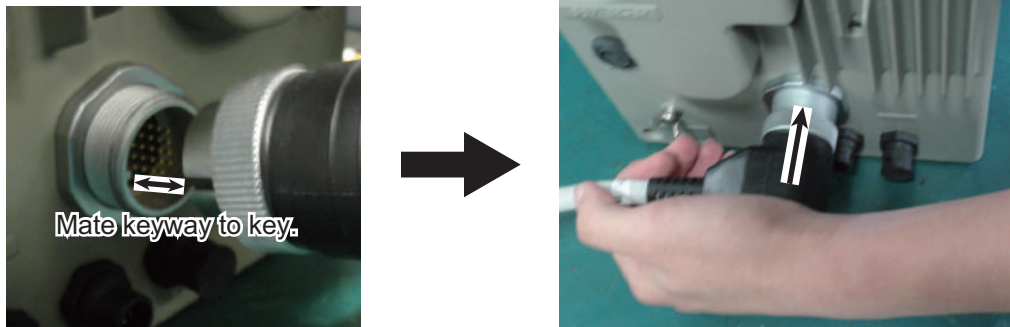

Mate the keyway in the MJ connector on the antenna cable with the key in the MJ connector on the display unit.


3. Loosely screw on the coupling ring.

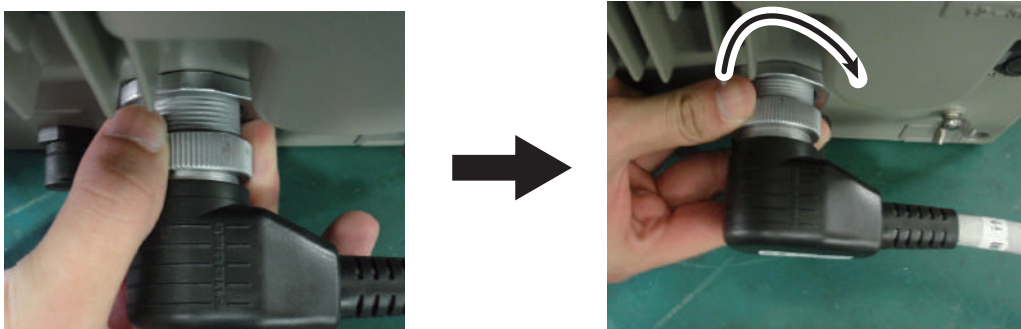

Note: Be sure the coupling ring screws on smoothly and straightly, to prevent damage to the ring and improper connection.


4. Tighten the coupling ring. Push on the hood in all directions while tightening the coupling ring. Turn the coupling ring until it cannot be turned further.

For the six sided coupling ring, the torque is 1.8 - 2.0 N•m. Use a torque wrench with a diagonal width of 36 mm.

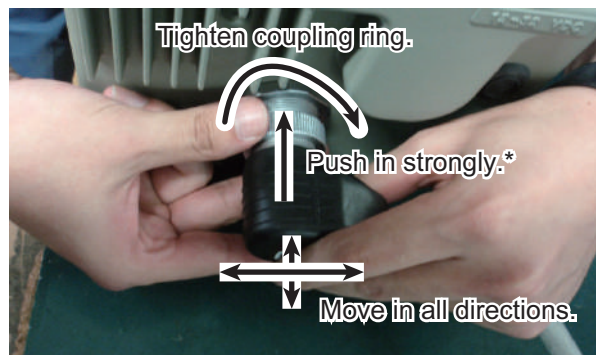





* Not necessary if a torque wrench is used.

5. Confirm that the MJ connector is tightly connected as shown below.

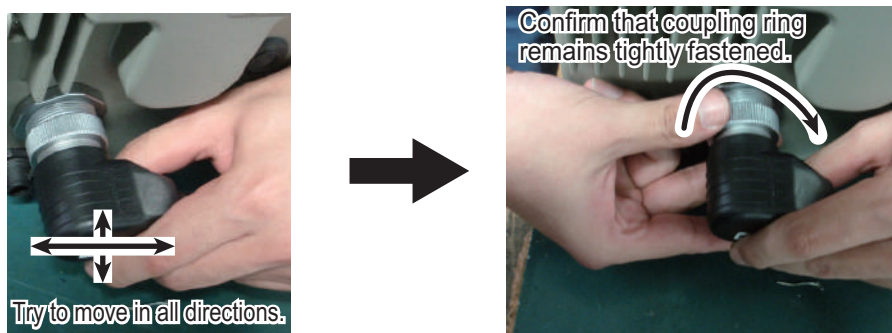

Try to move the hood in all directions. Confirm that the coupling ring remains tightly fastened.

    PACKING LIST RDP-154

NAME	OUTLINE	DESCRIPTION/CODE No.	Q T Y
ユニット UNIT			
指示部 DISPLAY UNIT		RDPI54-*	1
		000-026-323-00	**
予備品 SPARE PARTS			
予備品 SPARE PARTS		SP03-17701	1
		001-303-810-00	
付属品 ACCESSORIES			
付属品 ACCESSORIES		FP03-12301	1
		001-303-830-00	
工事材料 INSTALLATION MATERIALS			
ケーブル組品MJ CABLE ASSY.		MJ-A3SPF0017-050ZC	1
		000-157-995-10	
工事材料 INSTALLATION MATERIALS		CP03-35601	1
		001-303-820-00	
図書 DOCUMENT			
技術認証要領 APPLICATION GUIDE		J32-00501-*	1
		000-179-373-1*	(*1)
取扱説明書(和) OPERATOR'S MANUAL (JP)		OMJ-36320-*	1
		000-178-501-1*	(*1)
取扱説明書(英) OPERATOR'S MANUAL (EN)		OME-36320-*	1
		000-178-502-1*	(*2)
取扱説明書(中) OPERATOR'S MANUAL (CN)		OZS-36320-*	1
		000-178-511-1*	(*3)

 
 
1.コード番号末尾の[**]は、選択品の代表コードを表します。

1.CODE NUMBER ENDING WITH “**” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERI

2.(*1)の書類は、和文仕様専用です。

2.(*1) MARKED DOCUMENTS ARE FOR JAPANESE SET ONLY.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
操作要領書(和) OPERATOR' S GUIDE (JP)		OSJ-36320-*	1
		000-178-503-1*	(*1)
操作要領書(多言語) OPERATOR' S GUIDE (MLG)		MLG-36320-*	1
		000-178-505-1*	(*2)
操作要領書(中) OPERATOR' S GUIDE (CN)		NZS-36320-*	1
		000-178-504-1*	(*3)
装備要領書(和) INSTALLATION MANUAL (JP)		IMJ-36320-*	1
		000-178-506-1*	(*1)
装備要領書(英) INSTALLATION MANUAL (EN)		IME-36320-*	1
		000-178-507-1*	(*2)
装備要領書(中) INSTALLATION MANUAL (CN)		IZS-36320-*	1
		000-178-512-1*	(*3)
フラッシュマウント型紙 FLUSH MOUNTING TEMPLATE		CS2-01308-*	1
		000-178-509-1*	

3.(*2)の書類は、英文仕様専用です。

3.(*2) MARKED DOCUMENTS ARE FOR ENGLISH SET ONLY.

4.(*3)の書類は、中文仕様専用です。

4.(*3) MARKED DOCUMENTS ARE FOR CHINESE SET ONLY.

PACKING LIST

RSB-0070-085A, RSB-0070-086A, RSB-0070-087A, RSB-0073-085A, RSB-0073-086A, RSB-0073-087A

0307-X-9854 -1 1/1

RSB-0070-085A, RSB-0070-086A, RSB-0070-087A, RSB-0073-085A, RSB-0073-086A, RSB-0073-087A

A-2

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
ユニット			
空中線本体部 SCANNER UNIT		RSB-0070-08*A/-0073-08*A	1
		001-125-220-00 **	
空中線部工材 ANTENNA UNIT INSTALLATION MATERIALS			
空中線部工材 INSTALLATION MATERIALS		CPO3-33801	1
		001-141-670-00	

コード番号末尾の「**」は、選択品の代表コードを表します。
CODE NUMBER ENDING WITH “**” INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.
(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C3539-Z04-B



PACKING LIST

OP03-228

0311M-X-9852 -0 1/1

OP03-228

  A-3

NAME	OUTLINE	DESCRIPTION/CODE No.	QTY
フラッシュマウント部品 FLUSH MOUNTING PARTS			
フラッシュマウント H FLUSH MOUNT SPONGE H		03-185-1603-1	2
		100-381-961-10	
フラッシュマウント V FLUSH MOUNT SPONGE V		03-185-1602-1	2
		100-381-951-10	
フラッシュマウント金具組品 FLUSH MOUNT FIXTUREY		OP03-228-1	2
		001-258-040-00	
ミカキ丸平座金 FLAT WASHER		M8 SUS304	2
		000-167-464-10	
六角入りワッシャー HEXAGONAL HEAD BOLT		M8X15 SUS304	2
		000-162-916-10	

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.
(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)




C3632-Z02-A

表 1 TABLE 1

公差 (mm) TOLERANCE	尺寸区分 (mm) DIMENSION
±1.5	L ≤ 50
±2.5	50 < L ≤ 100
±3	100 < L ≤ 500
±4	500 < L ≤ 1000
±5	1000 < L ≤ 2000

TABLE 2


種類	XN10A	XN12A	XN13A
空中機長 (A) AIR LENGTH (mm)	1036±10	1255±10	1795±10
包裝安全空間 (B) AIR CLEARANCE (mm)	1200	1400	1940
質量 (kg±10%) MASS	22	25	27

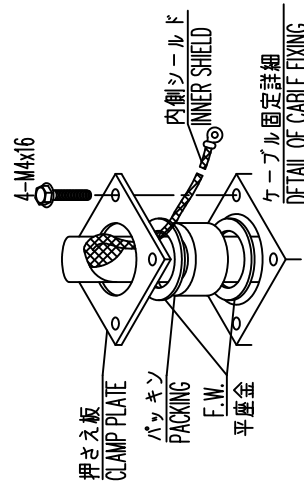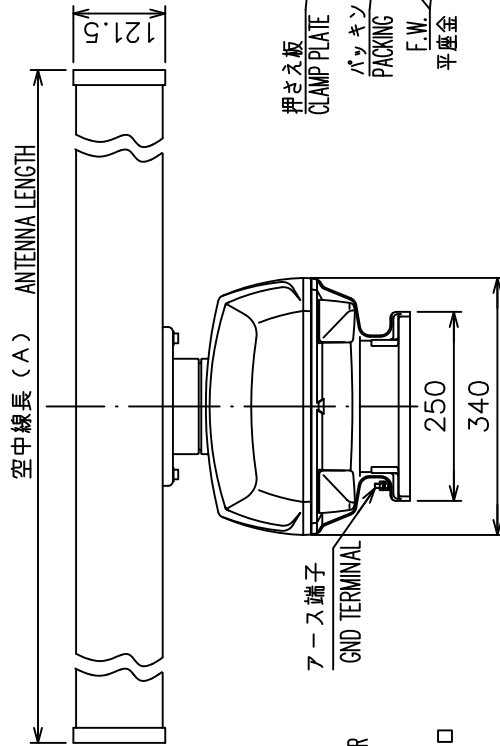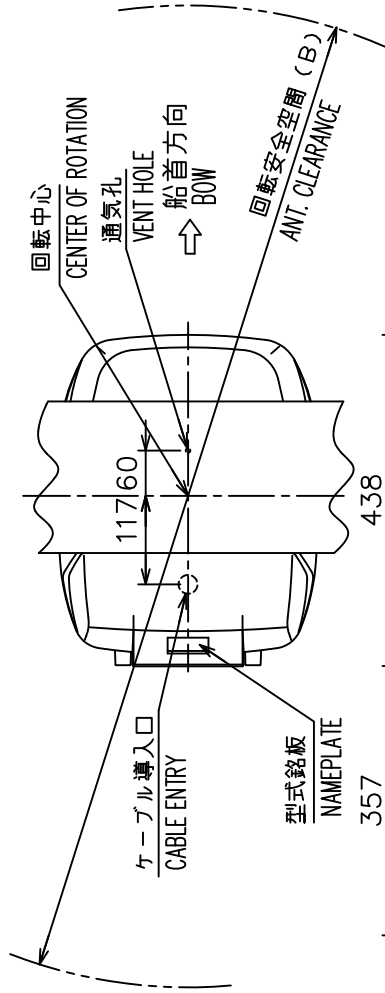

注記 1) 指定なき寸法公差は表 1 による。
2) 取付には M12 ボルトを使用のこと。
3) 通気孔は塞がないこと。

NOTE




1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. USE M12 BOLTS FOR FIXING THE UNIT.
3. DO NOT COVER THE VENT HOLE.

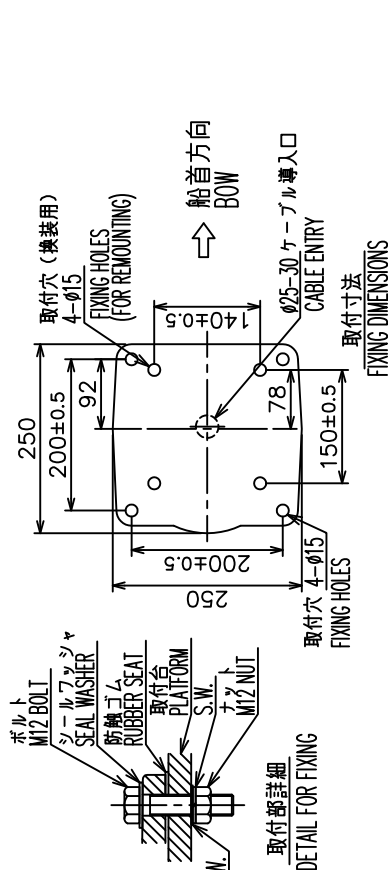

DRAWN	18/Sep/2015	T. YAMASAKI			TITLE	RSB-0070/0072/0073
CHECKED	18/Sep/2013	H. MAKI	OTHERS		名称	空中線部
APPROVED	18/Sep/2015	H. MAKI	MODEL194242, MODEL19540, ser.			外寸図
SCALE	1/10	MASS 表2参照 SEE TABLE 2	FR-7057/8062 ser.		NAME	ANTENNA UNIT
DWG. No.	C3539-G03-D		REF. No.	03-142-3003-6		OUTLINE DRAWING

表 1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

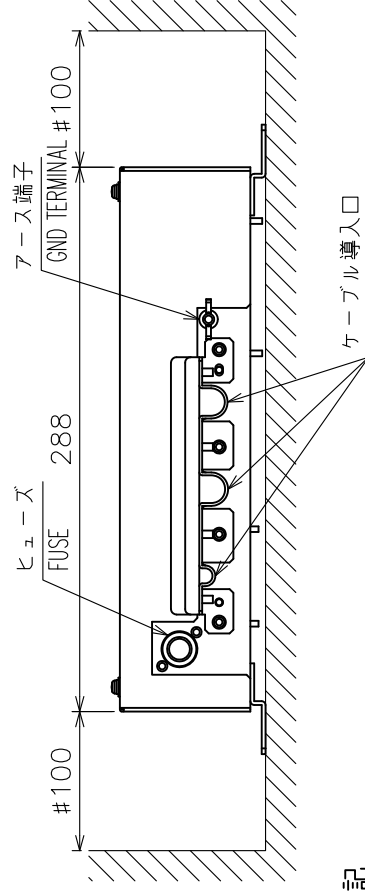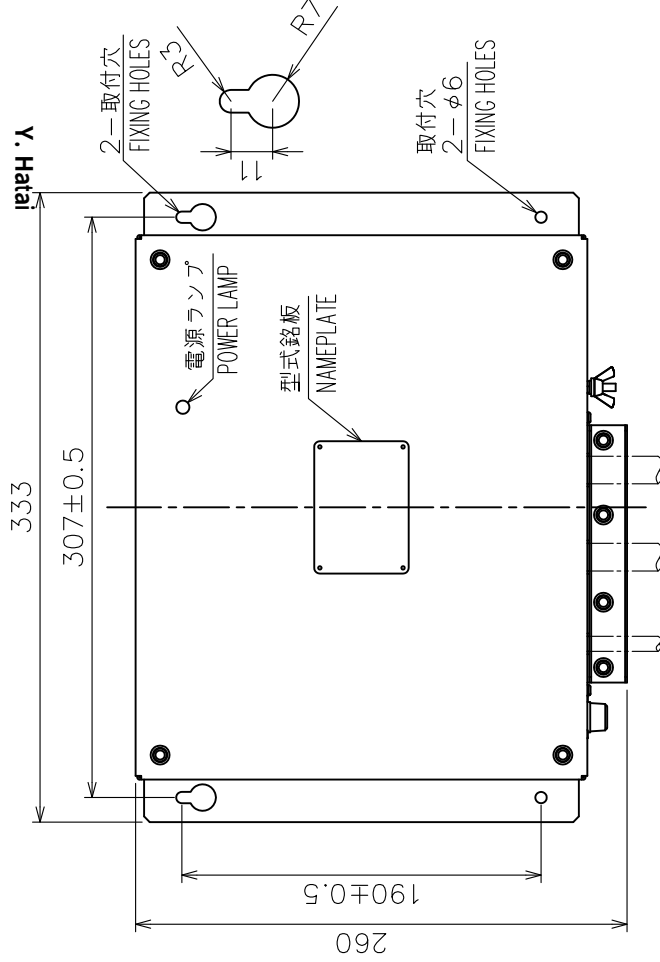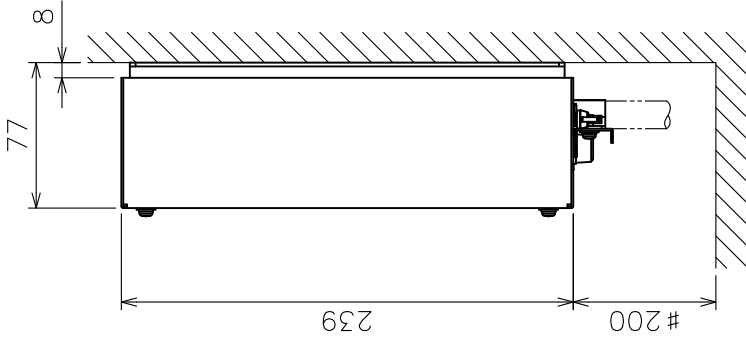


注 記

- 1) 指定外の寸法公差は表 1 による。
- 2) # 印寸法は最小サービスクリアランスとする。
- 3) 取付用ネジはトラスタスピンネジ呼び径5×20を使用のこと。




NOTE

1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. USE TAPPING SCREWS $\phi 5 \times 20$ FOR FIXING THE UNIT.

DRAWN	11/Jul/2014	I.YAMASAKI	TITLE	PSU-008
CHECKED	11/Jul/2014	H.MAKI	名称	空中線電源部
APPROVED	11/Jul/2014	H.MAKI	FR-8255 MODEL 1964C	外寸図
SCALE	1/4	MKS 2.7 kg	NAME	POWER SUPPLY UNIT
DWG.No.	C3548-G01-B		19-025-400G-0	OUTLINE DRAWING

 

寸法区分 (mm)	公差 (mm)
DIMENSION	TOLERANCE
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

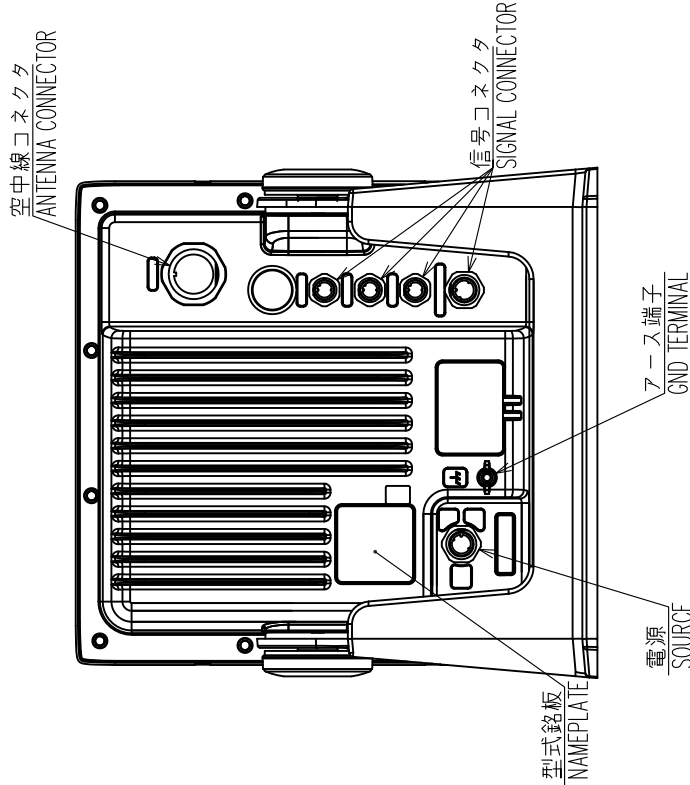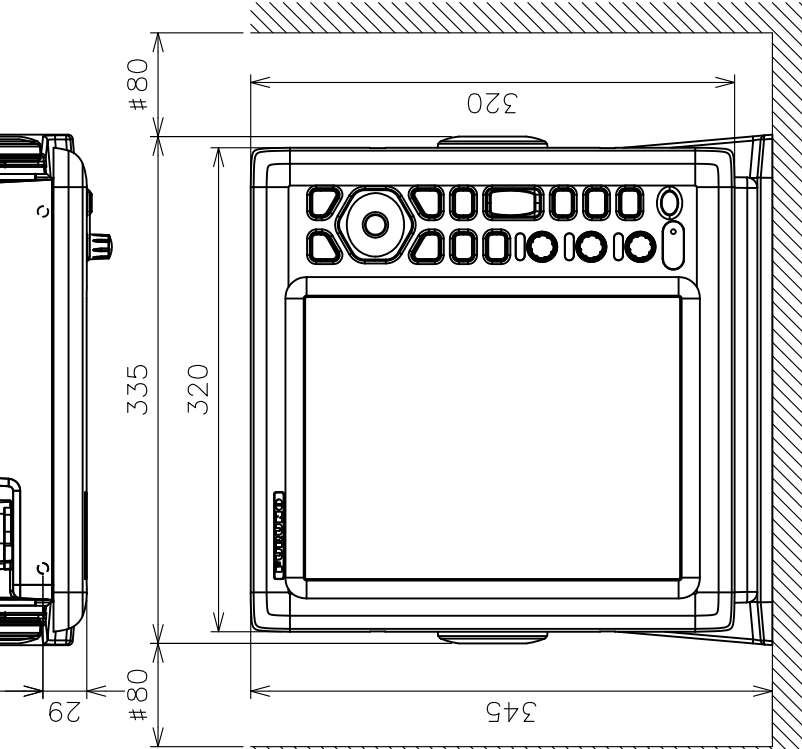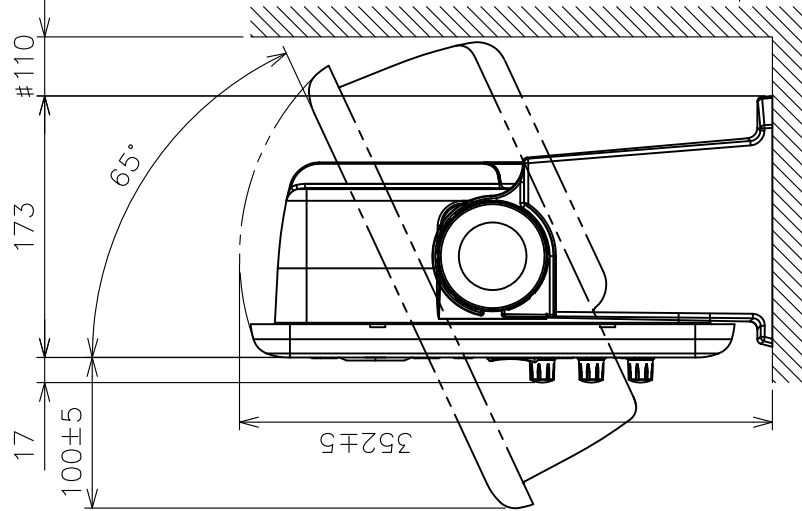


- 注 記 1) 指定外の寸法公差は表 1 による。
2) # 印寸法は最小サージス空間寸法とする。
3) 取付用ネジは + トラスタッピンネジ呼び径 5 × 2.0 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. USE TAPPING SCREWS ø5x2.0 FOR FIXING THE UNIT.


DRAWN	10/Dec/2014	T.YAMASAKI	TITLE	RDP-154
CHECKED	10/Dec/2014	H.MAKI	名称	指示部 (卓上装備)
APPROVED	11/Dec/2014	H.MAKI	外寸図	
SCALE	1/5	WASS 5.6 kg	NAME	DISPLAY UNIT (TABLETOP MOUNT)
DWG.No.	C3632-G01-C	REF.No.	03-185-100G-2	OUTLINE DRAWING

表1 TABLE 1




寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	± 1.5
$50 < L \leq 100$	± 2.5
$100 < L \leq 500$	± 3

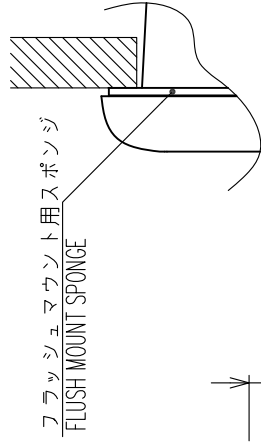

A部 詳細 (尺度: 1/3)
DETAIL FOR A (SCALE: 1/3)

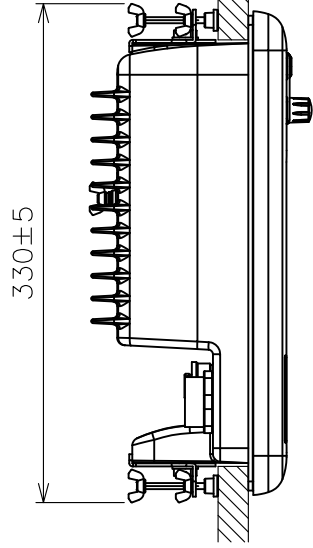

17 129 25 #150

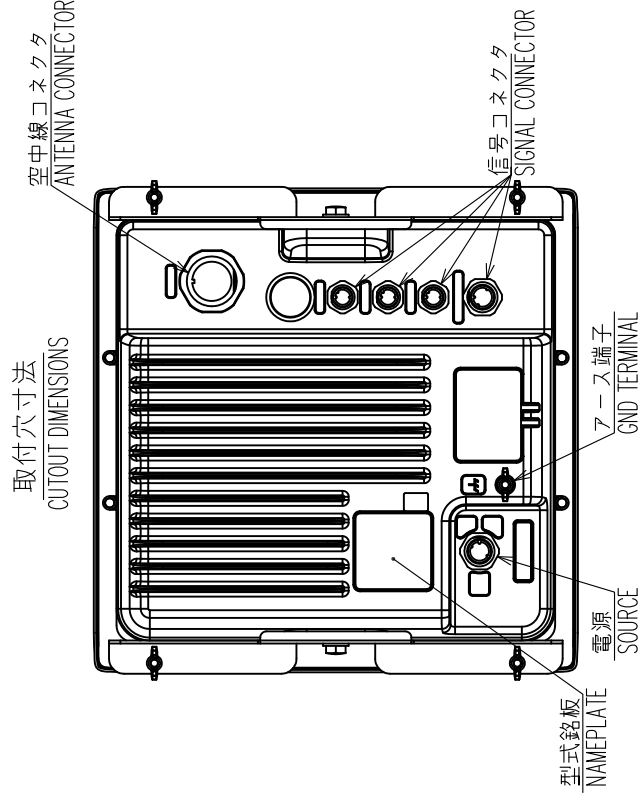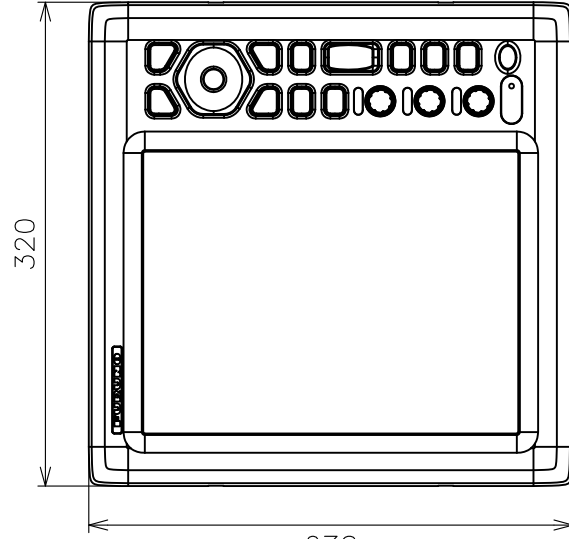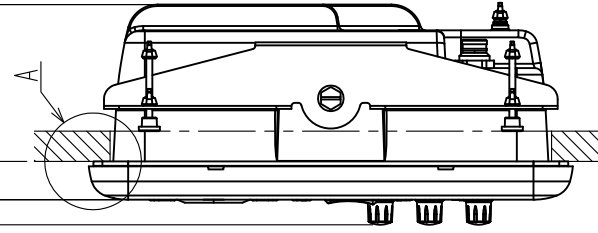

- 注記 1) 指定外の寸法公差は表1による。
2) #印寸法は最小サービス空間寸法とする。
3) 壁の厚さ (t) は最小10mm、最大20mmとする。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
2. #: MINIMUM SERVICE CLEARANCE.
3. BULKHEAD THICKNESS (t): $10 \leq t \leq 20$.

DRAWN	25/Nov/2013	T.YAMASAKI	TITLE	RDP-154
CHECKED	25/Nov/2013	H.MAKI	名称	指示部 (埋込装備)
APPROVED	27/Nov/2013	H.MAKI	外寸図	
SCALE	1/5	WASS 5.3 kg	NAME	DISPLAY UNIT (FLUSH MOUNT)
DWG.No.	C3632-G02-B	REF.No.	03-185-110G-1	OUTLINE DRAWING



*1) 造船所手配。

*2) オプシヨん。

*3) シールドは両端で完全にアースする。

NOTE

*1: SHIPYARD SUPPLY.

*2: OPTION.

***3: GROUND SHIELD EFFECTIVELY AT BOTH ENDS.**

DRAWN	24/Feb/2014	T. YAMASAKI				TITLE
CHECKED	24/Feb/2014	H. MAKI				名 称
APPROVED	25/Feb/2014	H. MAKI				
SCALE	MASS					NAME
DWG No.	C3635-C01 - C					MARINE RADAR
						INTERCONNECT ION DIAGRAM

100-115/
220-230VAC
1 φ, 50/60Hz

*1
1 整流器 *2(+) 5
2 RECTIFIER (-) 6
3 RU-3423
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

24 VDC MJ-A3SPF0017-050C, 5m, φ 10

航法装置
NAV EQUIPMENT
(NMEA0183)

航法装置
NAV EQUIPMENT
(NMEA0183)

選択
SELECT

衛星コンパス
SATELLITE COMPASS
SC-50/100 *2

ジャイロ
GYRO

A-Dコンバータ
A-D CONVERTER
AD-100 *2

Heading Sensor
HEADING SENSOR
PG-500/1000 *2

指示器
REMOTE DISPLAY


外部ブザー
EXT. BUZZER

注記


- *1) 造船所手配。
- *2) オプション。
- *3) シールドは両端で完全にアースする。

NOTE

- *1: SHIPYARD SUPPLY.
- *2: OPTION.
- *3: GROUND SHIELD EFFECTIVELY AT BOTH ENDS.

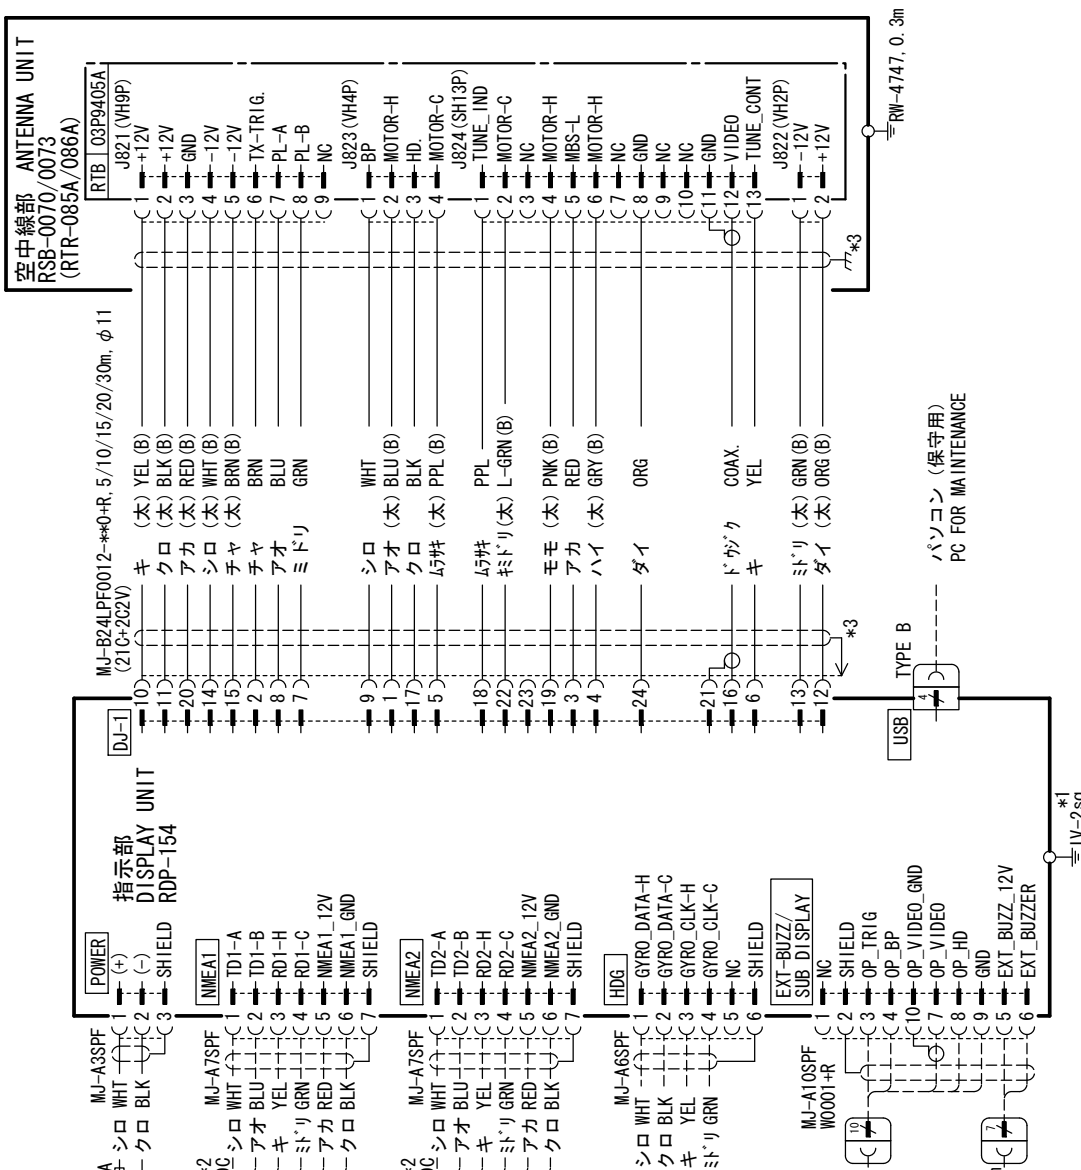

DRAWN	24/Feb/2014	T. YAMASAKI	TITLE	FR-8065/8125
CHECKED	24/Feb/2014	H. MAKI	名称	船舶用レーダー
APPROVED	25/Feb/2014	H. MAKI	相互結線図	
SCALE	1/1	MASS	NAME	MARINE RADAR
DWG. No.	C3632-001-C	kg	REF. No.	03-185-6003-0
			INTERCONNECTION DIAGRAM	

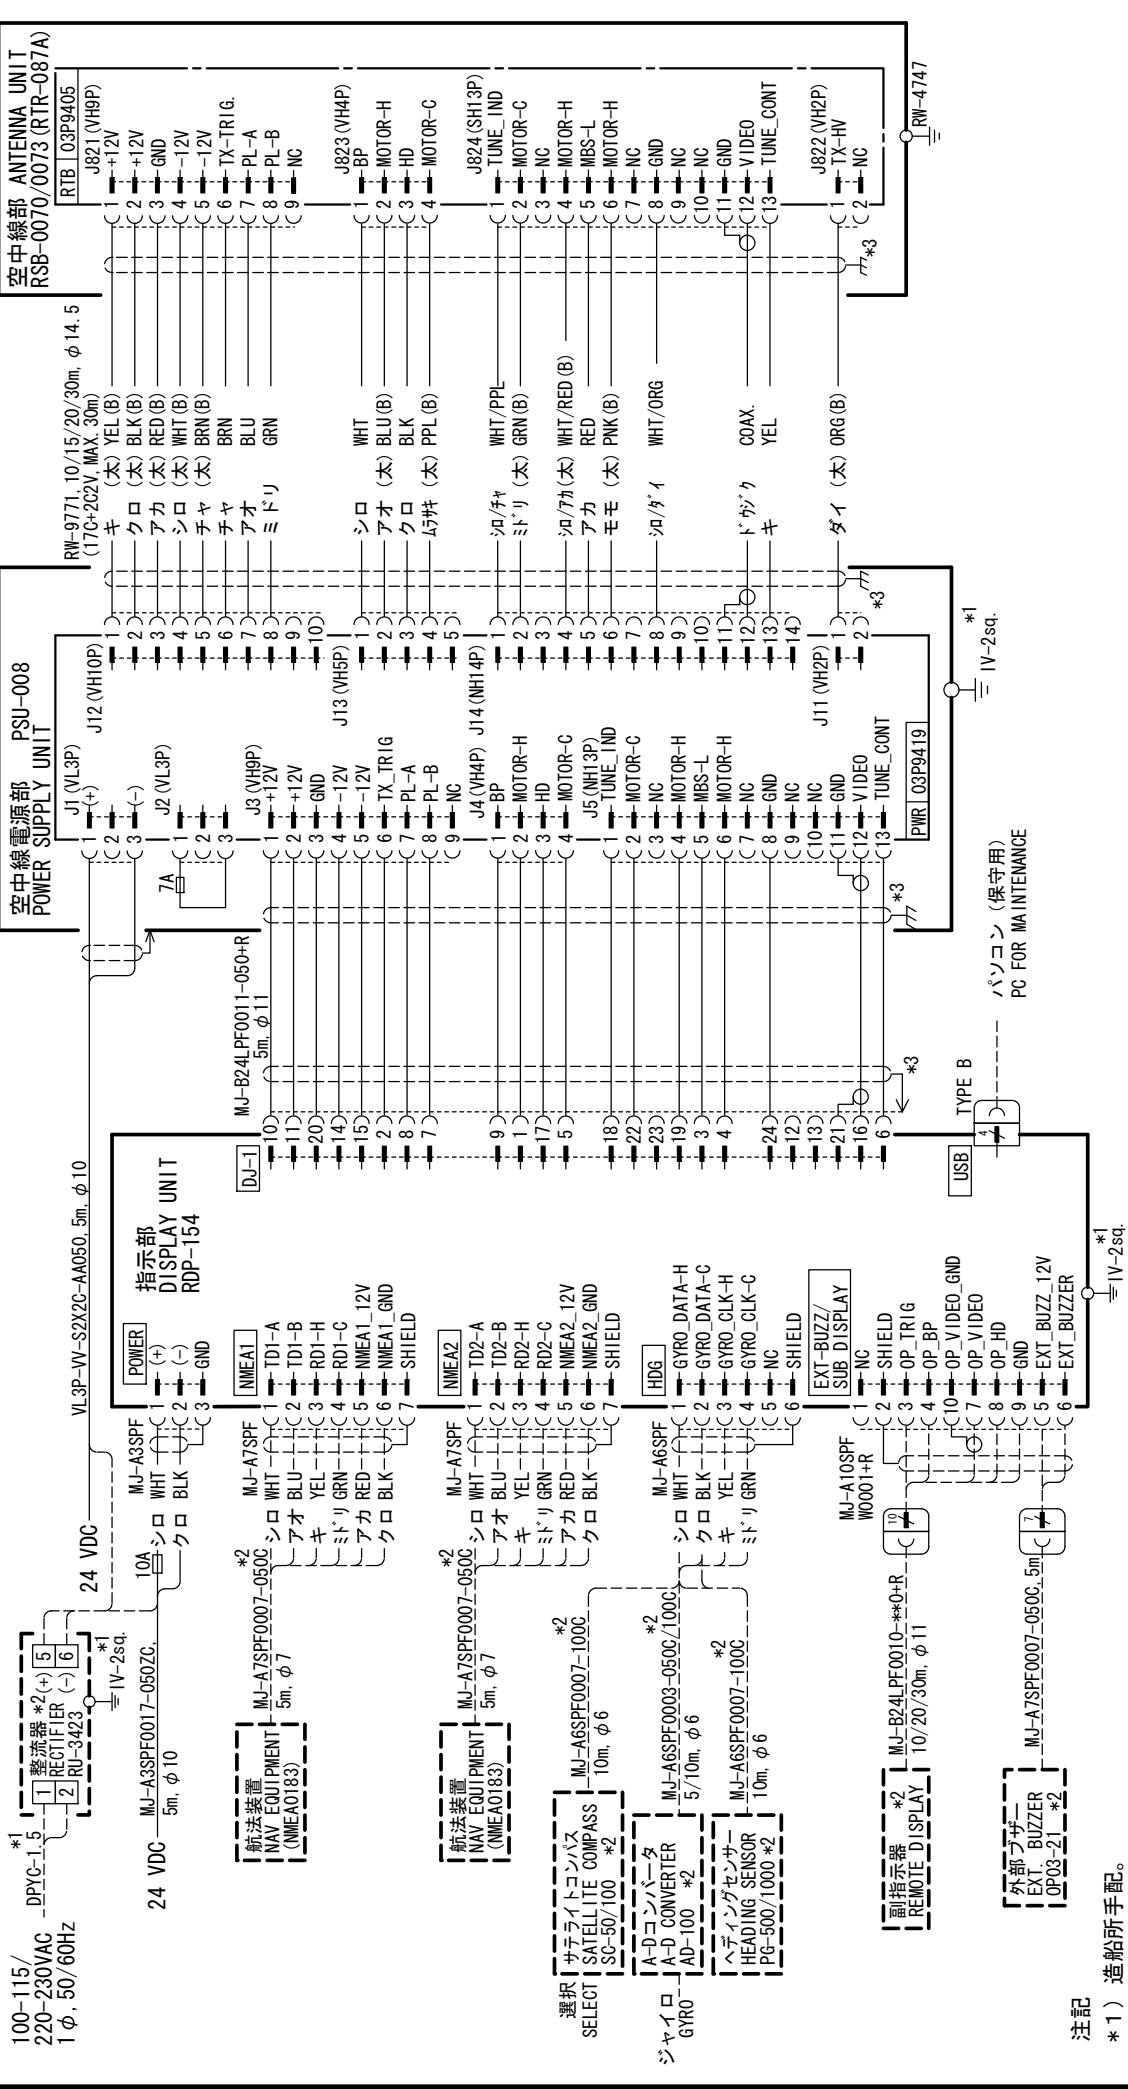

NOTE
 *1: SHIPYARD SUPPLY.
 *2: OPTION.
 *3: GROUND SHIELD EFF

DRAWN				TITLE
CHECKED	24/Feb./2014	T. YAMASAKI		FR-8255
APPROVED	24/Feb./2014	H. MAKI I		船舶用レーダー
SCALE	25/Feb/2014	H. MAKI		相互結線図
		MASS kg		MARINE RADAR
DWG. No.	C3634-C01 - C	REF. No.	03-185-6004-0	INTERCONNECTION DIAGRAM



(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved.

Printed in Japan

Pub. No. IME-36320-C2

(TAHA) FR-8045/8065/8125

A : JAN. 2014

C2 : OCT. 06, 2015



0 0 0 1 7 8 5 0 7 1 2