


Instructions for GLM No. 12097 Seawater Pump Pulley Mounting

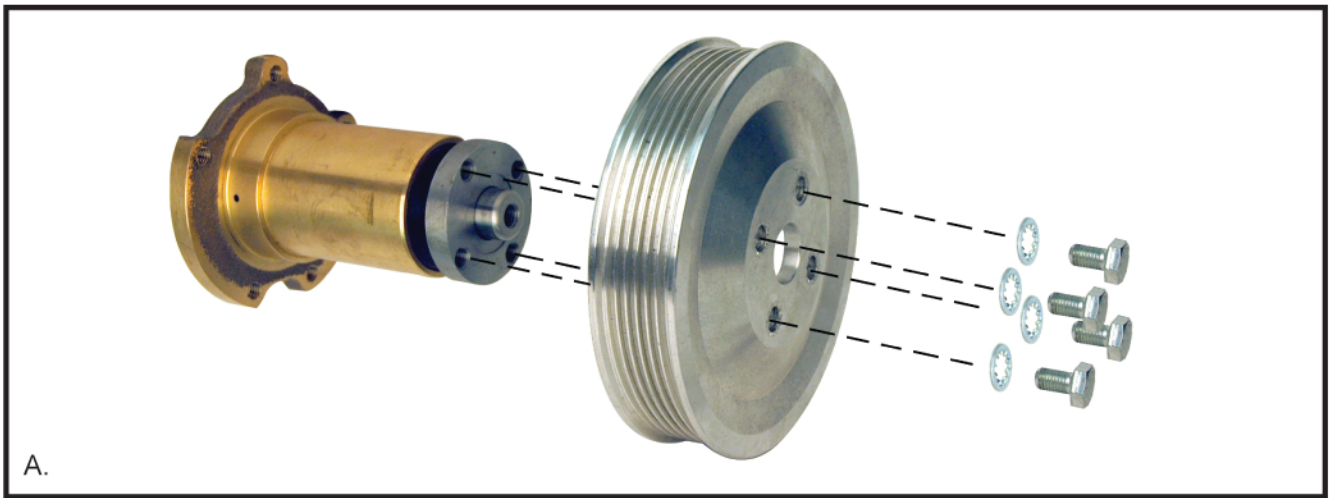

1. Install pulley on hub of seawater pump.
2. Install the mounting bolts with washers onto hub. Tighten mounting bolts to 10-12 Ft.Lbs. (14-16 Nm).

