



How to Clean the Horn Contacts

Step 1

Remove the Ongaro label at the back of the horn and unscrew Phillips head screw.




Step 2

This photo is the back of the sealed sound unit. The screw to the bottom left is the adjustment screw (Do **NOT** adjust, unless necessary, as outlined later in Step 6).




Step 3

Remove the 5 small screws (see arrows) from the front to remove the sound unit.

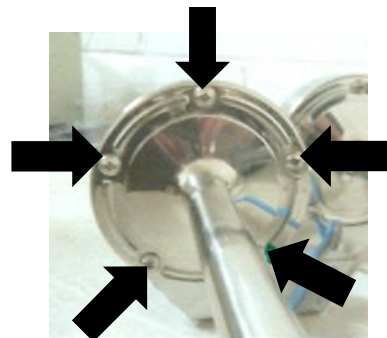


Step 4

This photo shows you the white gasket and the stainless steel sound unit.

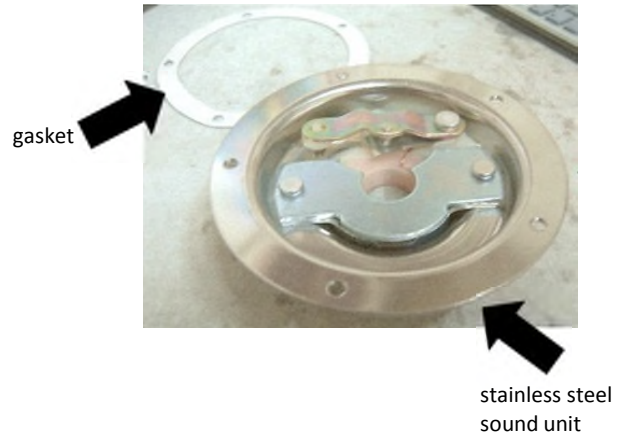

Step 5

This is a photo of the points.

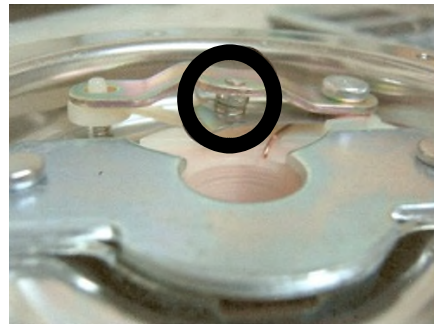

Step 6

Using an emery cloth, insert it between points and clean both sides to remove any corrosion. After cleaning, use one drop of a 4-in-1 oil, such as WD-40, on points and realign. Test the horn. If the horn does not sound, try the emery cloth once more.

If the horn still does not work, you can now try to manually adjust using the adjustment screw, *as shown above in Step 2.*

