

## REPLACING THE CAP FOR YOUR RECESSED CONTAINER



**NOTE:** The directions will be the same for both the composite and stainless steel versions.

1. Open the cap 180 degrees.



2. Remove the three screws securing the cup to the mounting surface.



3. Lift the cup assembly from the mounting surface approximately 2". DO NOT USE THE CAP TO LIFT THE CUP. Doing so may break the hinge.



4. With cap open to 180 degrees and cup raised ~2" from mounting surface push the cap toward the mounting surface to release the **hinge pins** from the **hinge housing** on the cap.



5. With the old cap removed, simply replace the cap with the new one and reverse the steps above. Be sure to re-insert the **hinge pins** into the **hinge housing, ONLY** when the cap is opened 180 degrees.



6. When cup has been pushed back, flush with mounting surface, replace the mounting screws. Be careful to not overtighten the screws, as this may crack the mounting cup.