


ADA-F2

 
INSTALLATION INSTRUCTIONS

www.seaviewglobal.com

PARTS INCLUDED

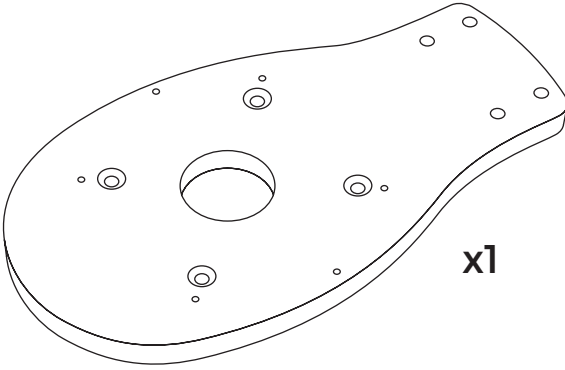


x1



x6


#12 x 1"

 


x4

5/816 x 1-1/4"


TOOLS NEEDED

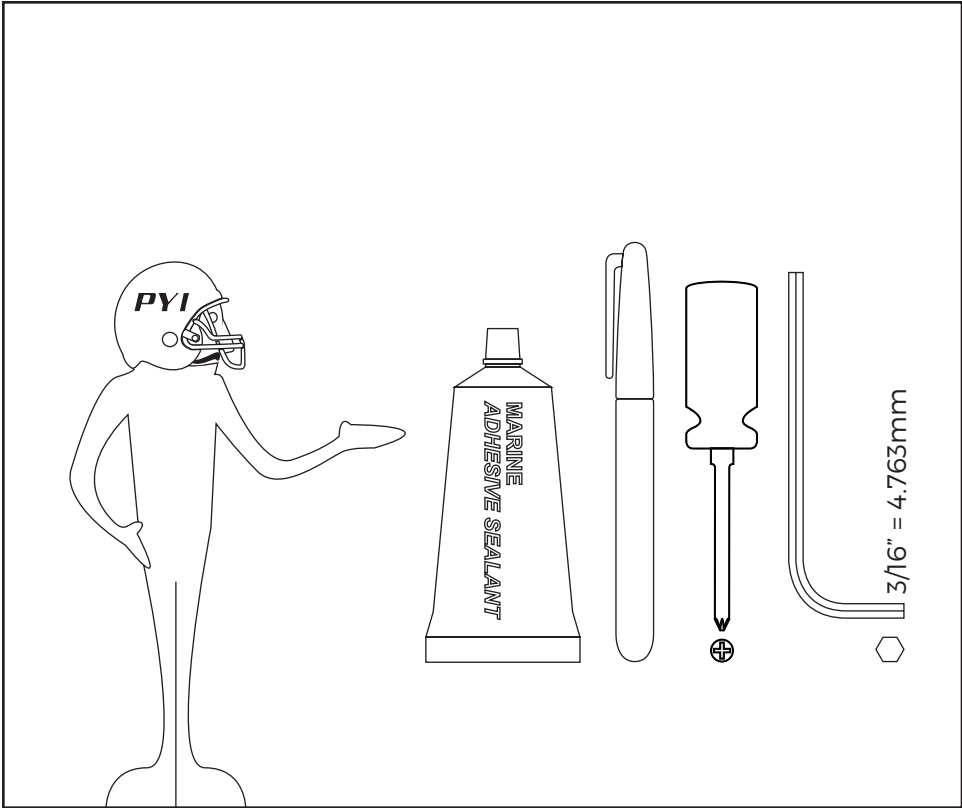


1

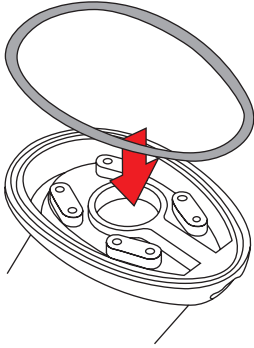

Insert rubber gasket onto the top of the Seaview mount. (Rubber gasket included with Seaview Mount.)

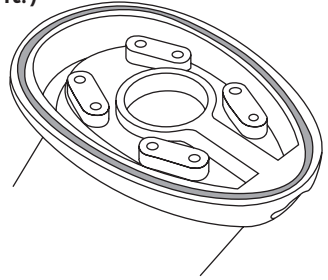


2

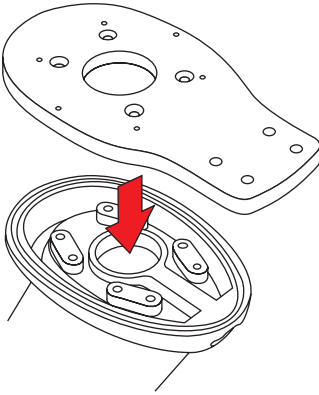


Place the ADA-F2 on top of the mount.


3

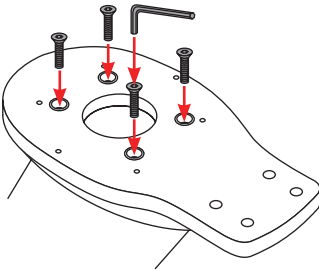

 Secure the ADA-F2 with the four bolts using an allen 3/16" wrench.




4

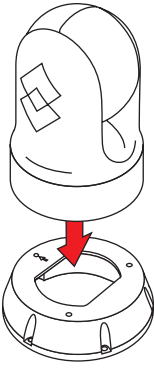

Mount the FLIR M100 or M200 to the top of the adapter provided by FLIR.

5

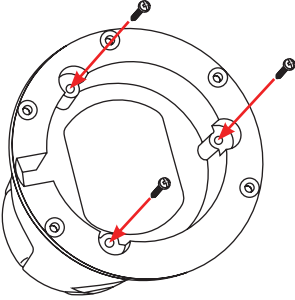

Secure the FLIR M100 or M200 to the adapter with the hardware specified by your electronics manufacturer.

6


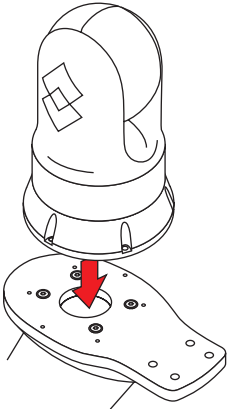



Plate the FLIR camera on top of the ADA-F2 top plate. Make sure that the six holes on the adapter line up with the six holes on the top plate.

7

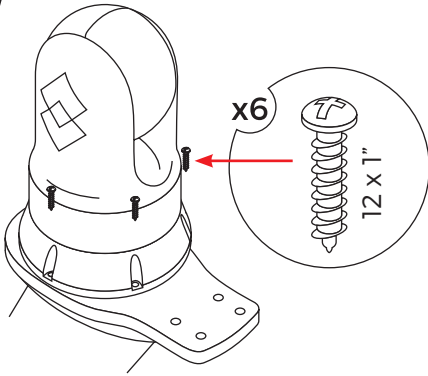


Secure the adapter to the ADA-F2 top plate using the provided six #12 x 1" screws with a philips head screwdriver.

8

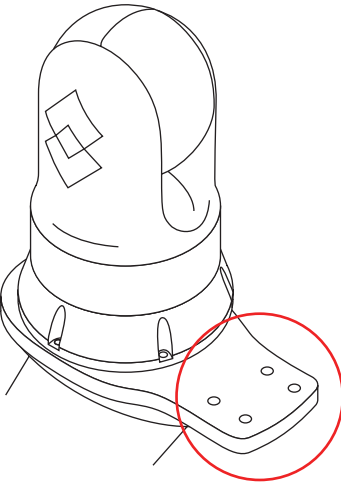

The four holes on the back of the ADA-F2 are for securing the optional Seaview Light Bar to the top plate..

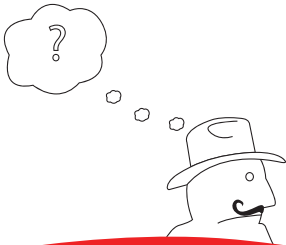

NORTH AMERICAN OFFICE

12532 Beverly Park Road,
Lynnwood, WA 98087
Tel: 800-523-7558
Fax: 425-355-3661
www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70
Fax: +33 4 94 53 26 62
ZI Du Capitou, 85 Rue Louis
Lepine, Frejus 83600 - France
www.seaviewprogress.com