


Siren Marine MTC
 Connect to INFR
 Motion Sensor
 Revision 1.2
 August 2018

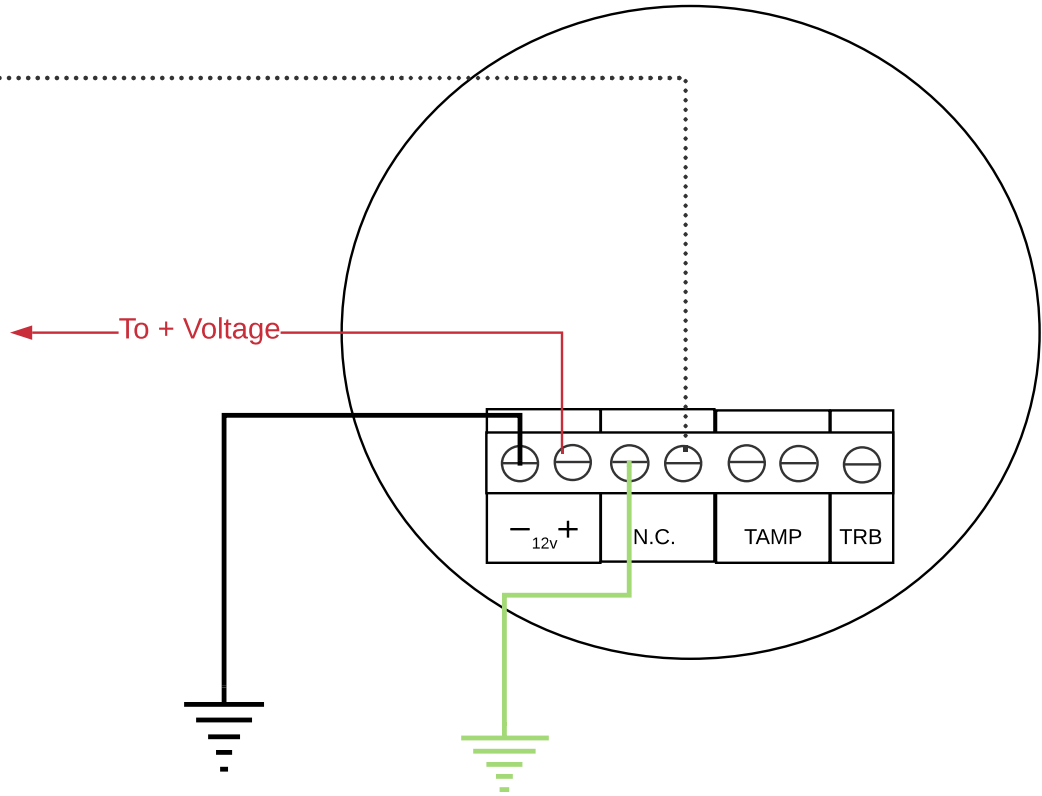

Wiring Instructions:

- 1.) The +12V terminal connects to +12V
- 2.) The -12V terminal connects to ground
- 3.) The right N.C. terminal connects to the input labeled "SECURITY 1" or "SECURITY 2" on the MTC
- 4.) The left N.C. terminal connects to the input labeled "BATT NEG" or the common ground