

## Spare Part List

Marine


FCF Classic Series - 115V (60Hz) | 230V (50/60Hz)

12,000 – 16,000 BTU

R410



**FCF Classic 12K & 16K Service Parts Diagram**

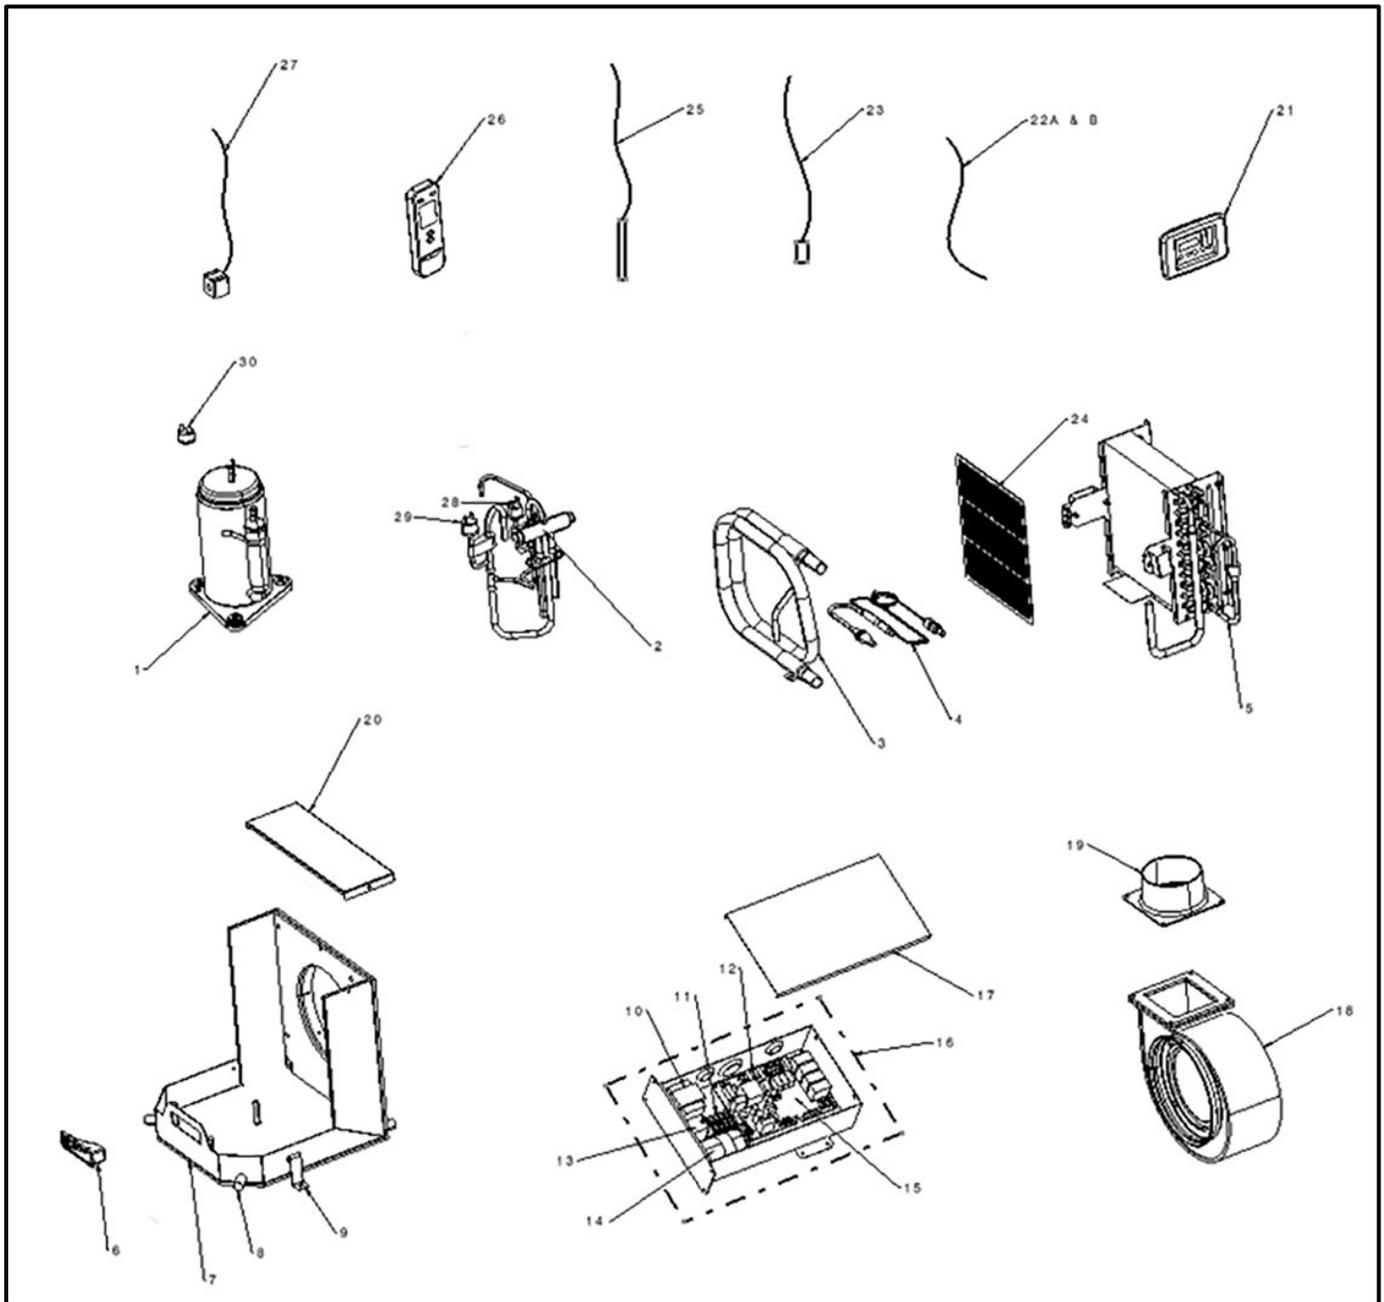

Position	FCF 12k & 16k Spare Parts		R410A 115V (60 Hz)		R410A 230V (50/60 Hz)	
	Webasto Part #	Description	FCF0012000GS 12k 115V	FCF0016000GS 16k 115V	FCF0012023G 12k 230V	FCF0016023G 16k 230V
1	5012029A	Compressor FCF 12k 115V R410A	X			
	5012034A	Compressor FCF 16k 115V R410A		X		
	<del>5012049A</del>	<del>Compressor FCF 12k 230V R410A OBSOLETE</del>			X	
	<del>5012050A</del>	<del>Compressor FCF 16k 230V R410A OBSOLETE</del>				X
2	<del>5012885A</del>	<del>Reverse Valve Assembly FCF 12k R410A OBSOLETE</del>	X		X	
	5012886A	Reverse Valve Assembly FCF 16k R410A		X		X
3	5012887A	Condenser Coil FCF 12k R410A	X		X	
	5012888A	Condenser Coil FCF 16k R410A		X		X
4	5012032A	Capillary Assembly FCF 12k R410A	X		X	
	<del>5012892A</del>	<del>Capillary Assembly FCF 16k R410A OBSOLETE</del>		X		X
5	<del>5012889A</del>	<del>Evaporator Assembly FCF 12k R410A OBSOLETE</del>	X		X	
	5012890A	Evaporator Assembly FCF 16k 115V R410A		X		
	5012891A	Evaporator Assembly FCF 16k 230V R410A				X
6	5012189A	Handle Big for Base Frame FCF 9k	X	X	X	X
7	5012893A	Base Frame Assembly FCF 12k	X		X	
	5012894A	Base Frame Assembly FCF 16k		X		X
8	5012329	Condensate Drain Pipe FCF	X	X	X	X
9	FCFSP0058A	Clamp Hold Down FCF	X	X	X	X
10	5012173A	Transformer FCF 115V	X	X		
	5012192A	Transformer FCF 230V			X	X
11	<del>FCFSP0059A</del>	<del>Terminal Board FCF 12k &amp; 16k OBSOLETE</del>	X	X	X	X
12	FCFSP0089A	Fuse 3.15 Amp 250V Glass FCF	X	X	X	X
13	FCFSP0006A	Capacitor 15uF-300V Blower Start FCF	X	X		
	FCFSP0063A	Capacitor 3.5uF-450V Blower Start FCF			X	
	FCFSP0067A	Capacitor 4uF-500V Blower Start FCF				X
14	FCFSP0018A	Capacitor 50uF-450V Compressor FCF	X			
	FCFSP0005A	Capacitor 35uF-450V Compressor FCF		X		
	FCFSP0075A	Capacitor 60uF-450V Compressor FCF			X	
	FCFSP0077A	Capacitor 30uF-450V Compressor FCF				X
15	FCFSP0064A	Circuit Board FCF 12k & 16k 115V	X	X		
	FCFSP0071A	Circuit Board FCF 12k & 16k 230V			X	X
16	5012895A	Electrical Box Assembly FCF 12k 115V	X			
	5012897A	Electrical Box Assembly FCF 16k 115V		X		
	5012896A	Electrical Box Assembly FCF 12k 230V			X	
	5012898A	Electrical Box Assembly FCF 16k 230V				X

17	FCFSP0004A	Electrical Box Cover FCF 5k & 9k	X	X	X	X
18	5012182A	Blower Assembly FCF 12k 115V	X			
	5012051A	Blower Assembly FCF 16k 115V		X		
	5012044A	Blower Assembly FCF 12k 230V			X	
	5012899A	Blower Assembly FCF 16k 230V				X
19	FCFSP0017A	Duct Ring 5" FCF Platinum	X	X	X	X
20	<del>5012900A</del>	<del>Evaporator Cover FCF 12k-OBSOLETE</del>	X		X	
	5012901A	Evaporator Cover FCF 16k		X		X
21	FCFSP0010A	Digital Display FCF	X	X	X	X
22A	FCFSP0098A	Display Cable 8m Long FCF	X	X	X	X
22B	FCFSP0076A	Display Cable 15m Long FCF	X	X	X	X
23	FCFSP0003A	Evaporator Temp Sensor FCF	X	X	X	X
24	FCFSP0027A	Air Filter FCF 12k	X		X	
	FCFSP0031A	Air Filter FCF 16k		X		X
25	FCFSP0002A	Ambient Temp Sensor FCF	X	X	X	X
26	5012610A	Remote FCF Platinum *Compatible with digital display v-30 or higher. Refer to item 21	X	X	X	X
27	FCFSP0001A	Solenoid Reversing Valve FCF 115V	X	X		
	FCFSP0060A	Solenoid Reversing Valve FCF 230V			X	X
28	5012055A	High Pressure Switch FCF R410A	X	X	X	X
29	5012056A	Low Pressure Switch FCF R410A	X	X	X	X
30	5012902A	Overload Protection FCF 12k 230V			X	