

Spare Part List


Marine

FCF Platinum Series - 115V (60Hz) | 230V (50/60Hz)

6,000 – 10,000 BTU

R410



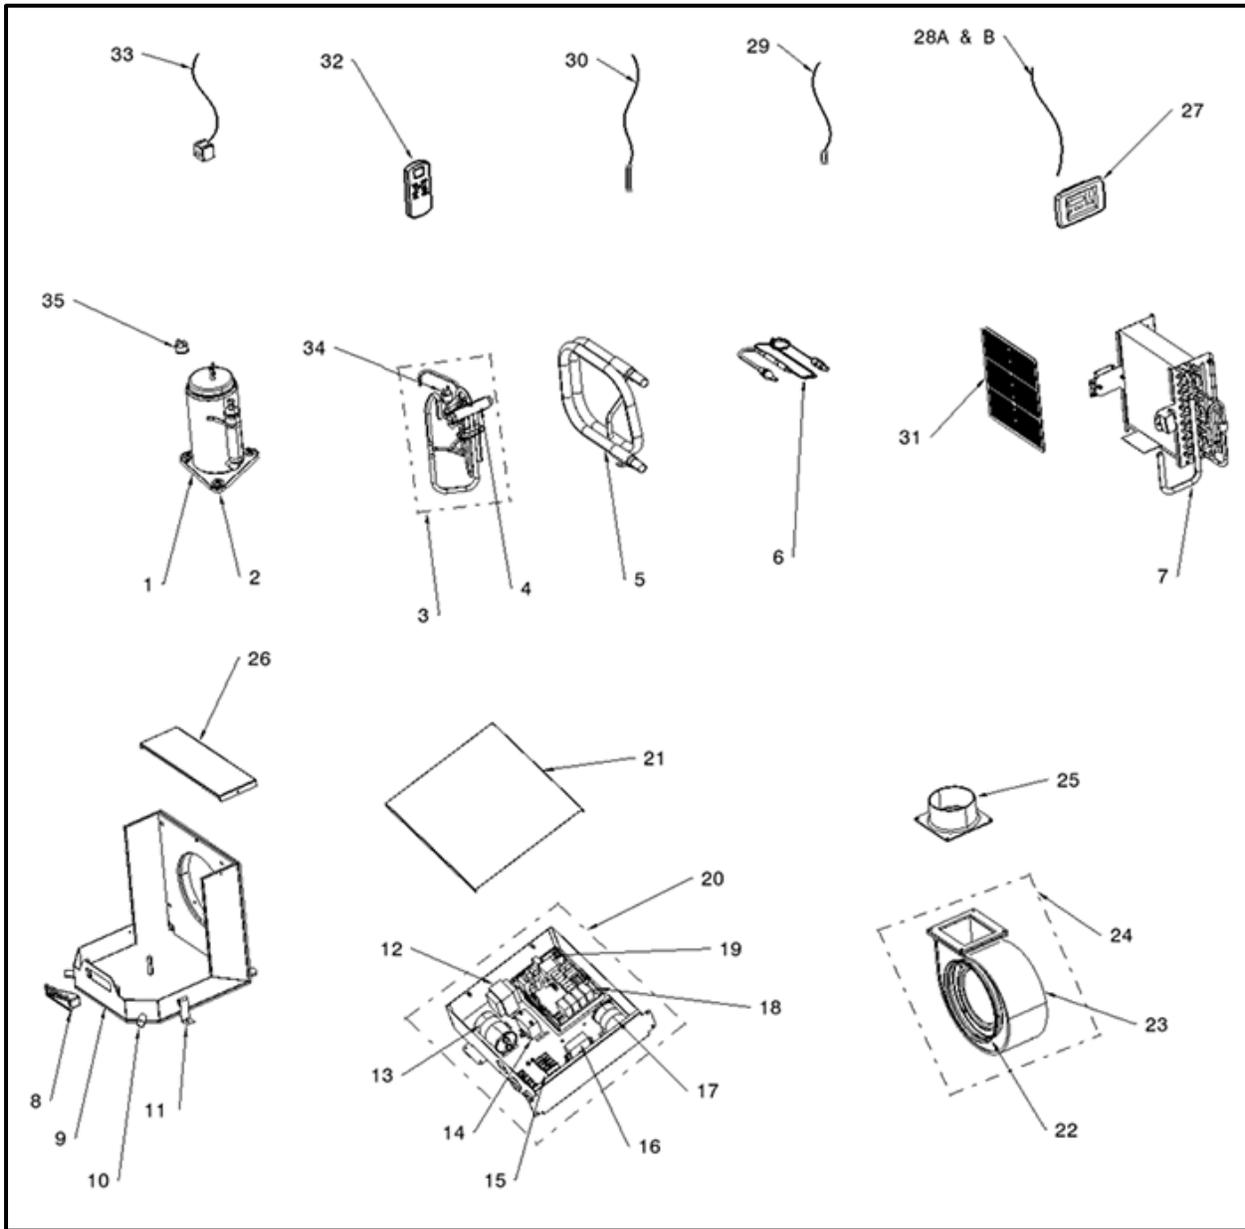

Position	FCF Platinum 6k & 10k Spare Parts			R410A 115V (60 Hz)		R410A 230V (50/60 Hz)	
	Gree Part #	Webasto Part #	Description	5011394A 6k 115V	5011396A 10k 115V	5011395A 6k 230V	5011397A 10k 230V
1	00203905P	5012022A	Compressor FCF Platinum 6k 115V R410A OBSOLETE	X			
	00203906P	5012025A	Compressor FCF Platinum 10k 115V R410A		X		
	00203920P	5012039A	Compressor FCF Platinum 6k 230V R410A			X	
	9001000048P	5012045A	Compressor FCF Platinum 10k 230V R410a				X
2	76711040	5012311A	Mounting Gasket Compressor FCF Platinum 6k & 10k 115V	X	X		
	76710302	5012300A	Mounting Gasket Compressor FCF Platinum 6k 230V			X	
	00901200013	5012303A	Mounting Gasket Compressor FCF Platinum 10k 230V				X
3	04143911	5012023A	Reverse Valve Assembly FCF Platinum 6k R410A	X		X	
	04143910	5012026A	Reverse Valve Assembly FCF Platinum 10k 115V R410A		X		
	04143906	5012068A	Reverse Valve Assembly FCF Platinum 10k 230V R410A				X
4	430004022	5012053A	Reverse Valve FCF Platinum 6k & 10k	X	X	X	X
5	01139402	5012021A	Condenser Coil FCF Platinum 6k R410A	X		X	
	01139401	5012041A	Condenser Coil FCF Platinum 10k R410A		X		X
6	04103918	5012020A	Capillary Assembly FCF Platinum 6k R410A	X		X	
	04103917	5012027A	Capillary Assembly FCF Platinum 10k 115V R410A		X		
	04103929	5012047A	Capillary Assembly FCF Platinum 10k 230V R410A				X
7	01023912	5012024A	Evaporator Assembly FCF Platinum 6k R410A	X		X	
	01023911	5012028A	Evaporator Assembly FCF Platinum 10k R410A OBSOLETE		X		X
8	26233100	5012186A	Handle Small for Base Frame FCF Platinum 6k	X		X	
	26235401	5012189A	Handle Big for Base Frame FCF Platinum 10k		X		X
9	01283932	5012042A	Base Frame Assembly FCF Platinum 6k 115V	X			
	01283935	5012048A	Base Frame Assembly FCF Platinum 10k 115V		X		
	01284050	5012040A	Base Frame Assembly FCF Platinum 6k 230V			X	
	01283945	5012052A	Base Frame Assembly FCF Platinum 10k 230V				X
10	04363901	5012329	Condensate Drain Pipe FCF Platinum	X	X	X	X
11	01729602	FCFSP0058A	Clamp Hold Down FCF Platinum	X	X	X	X
12	43110192	5012173A	Transformer FCF Platinum 115V	X	X		
	43110239	5012192A	Transformer FCF Platinum 230V			X	X
13	33000045	FCFSP0072A	Capacitor 40uF-450V Compressor FCF Platinum	X			
	3300008104	5012451A	Capacitor 50uF-450V Compressor FCF Platinum		X		
	3300008111	5012322A	Capacitor 15uF-450V Compressor FCF Platinum			X	
	33000081	5012315A	Capacitor 25uF-450V Compressor FCF Platinum				X
14	33010069	FCFSP0006A	Capacitor 15uF-300V Blower Start FCF Platinum	X	X		
	33010010	FCFSP0063A	Capacitor 3.5uF-450V Blower Start FCF Platinum			X	
	33010013	FCFSP0067A	Capacitor 4uF-500V Blower Start FCF Platinum				X

15	42010254	FCFSP0059A	Terminal Board FCF Platinum OBSOLETE	X	X	X	X
16	44010264	5012309A	AC Contactor FCF Platinum 115V	X	X		
	44010245	5012310A	AC Contactor FCF Platinum 230V			X	X
17	33000081	5012315A	Capacitor 25uF-450V Blower Run FCF Platinum	X	X	X	X
18	30225000010	5012434A	Main Circuit Board FCF Platinum	X	X	X	X
19	46010060	5012190A	5 Amp 250V Fuse FCF Platinum	X	X	X	X
20	01393900127	5012323A	Electrical Box Assembly FCF Platinum 6k 115V	X			
	01393900129	5012439A	Electrical Box Assembly FCF Platinum 10k 115V		X		
	01393900128	5012324A	Electrical Box Assembly FCF Platinum 6k 230V			X	
	01393900130	5012440A	Electrical Box Assembly FCF Platinum 10k 230V				X
21	01423900091P	5012301A	Electrical Box Cover FCF Platinum 6k & 10k	X	X	X	X
22	01523903P	5012318A	Diversion Ring FCF Platinum 6k & 10k	X	X	X	X
23	150194011	5012314A	Blower FCF Platinum 6k 115V	X			
	15019401	5012317A	Blower FCF Platinum 10k 115V		X		
	150194015	5012321A	Blower FCF Platinum 6k 230V			X	
	150194014	5012319A	Blower FCF Platinum 10k 230V				X
24	15009408	5012176A	Blower Assembly FCF Platinum 6k 115V	X			
	15403937	5012181A	Blower Assembly FCF Platinum 10k 115V		X		
	15009412	5012177A	Blower Assembly FCF Platinum 6k 230V			X	
	15009411	5012178A	Blower Assembly FCF Platinum 10k 230V				X
25	06329401	FCFSP0011A	Duct Ring 4" FCF Platinum	X	X	X	X
26	01263929	5012325A	Evaporator Cover FCF Platinum 6k	X		X	
	01263930	5012326A	Evaporator Cover FCF Platinum 10k		X		X
27	30295000009	5012299A	Digital Display FCF Platinum #	X	X	X	X
28	400300412	FCFSP0098A	Display Cable 8 meters Long FCF Platinum	X	X	X	X
29	340300031	5012316A	Evaporator Temp Sensor FCF Platinum	X	X	X	X
30	39000285	5012172A	Ambient Temp Sensor FCF Platinum	X	X	X	X
31	11129405	FCFSP0016A	Air Filter FCF Platinum 6k	X		X	
	11129404	5012191A	Air Filter FCF Platinum 10k		X		X
32	30510065_ L80305	5012610A	Remote FCF Platinum *Compatible with digital display v-30 or higher. Refer to item 27	X	X	X	X
33	4300040027	FCFSP0001A	Solenoid Reversing Valve FCF Platinum 115V	X	X		
	430004005	FCFSP0060A	Solenoid Reversing Valve FCF Platinum 230V			X	X
34	46020006	5012055A	High Pressure Switch FCF Platinum R410A	X	X	X	X
35	00181062	5012037A	Overload Protection FCF Platinum 6k 115V	X			
	00180304	5012059A	Overload Protection FCF Platinum 10k 115V		X		
	00181093	5012058A	Overload Protection FCF Platinum 6k 230V			X	
	00183030	5012060A	Overload Protection FCF Platinum 10k 230V				X

Refer to [FCF Platinum Remote Control Quick-Start Guide](#) for more information