

## Easy To Install



Figure #1

- #1 Grasp crossbar in one hand and securing rod in the other. (See Figure #1). Please note - both hands are under line.



Figure #2

- #2 Insert through window and apply slight tug to securing rod, this will cause the ventilator to pop open, then turn it to face the wind. (See Figure #2 and #3).



Figure #3

- #3 Seat the ventilator against the side of the boat and pull vigorously on securing rod: bring it back through the window and wedge inside. (See Figures #4 and #5). Please note - quite a bit of pressure will be needed until it becomes "broken in". If the thickness of the cabin wall is unusually thick - cord length may need to be adjusted to achieve the shape as seen in Figure #6.



Figure #4



Figure #5

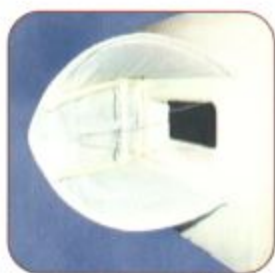


Figure #6