

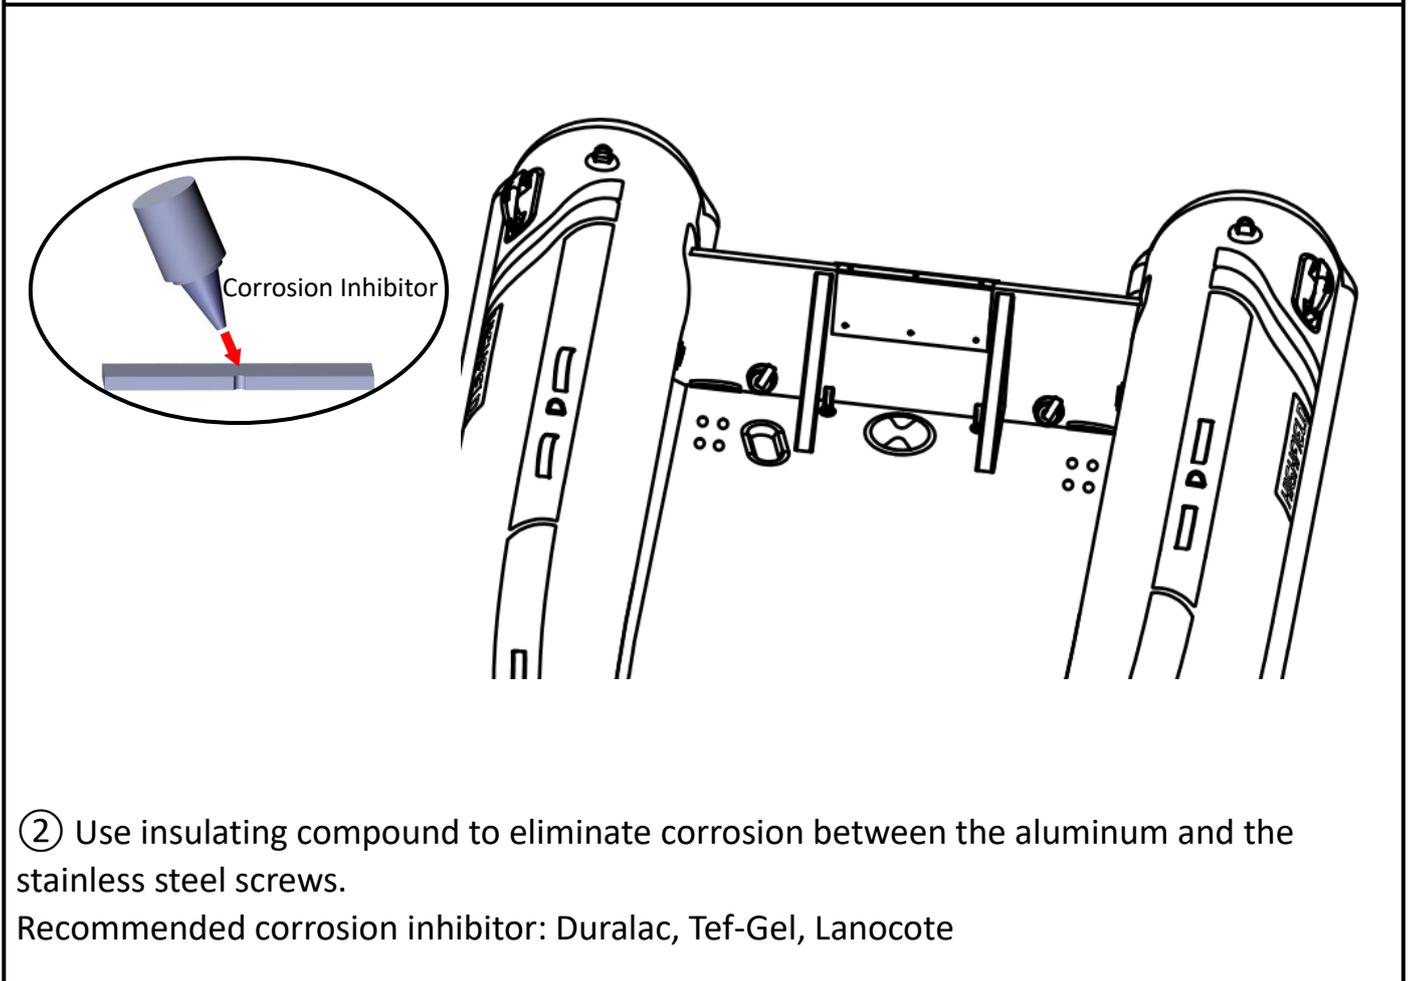


# **Highfield Boats**


# **Rollbar Installation Guide**

**(CL400-460/PA420-460)**

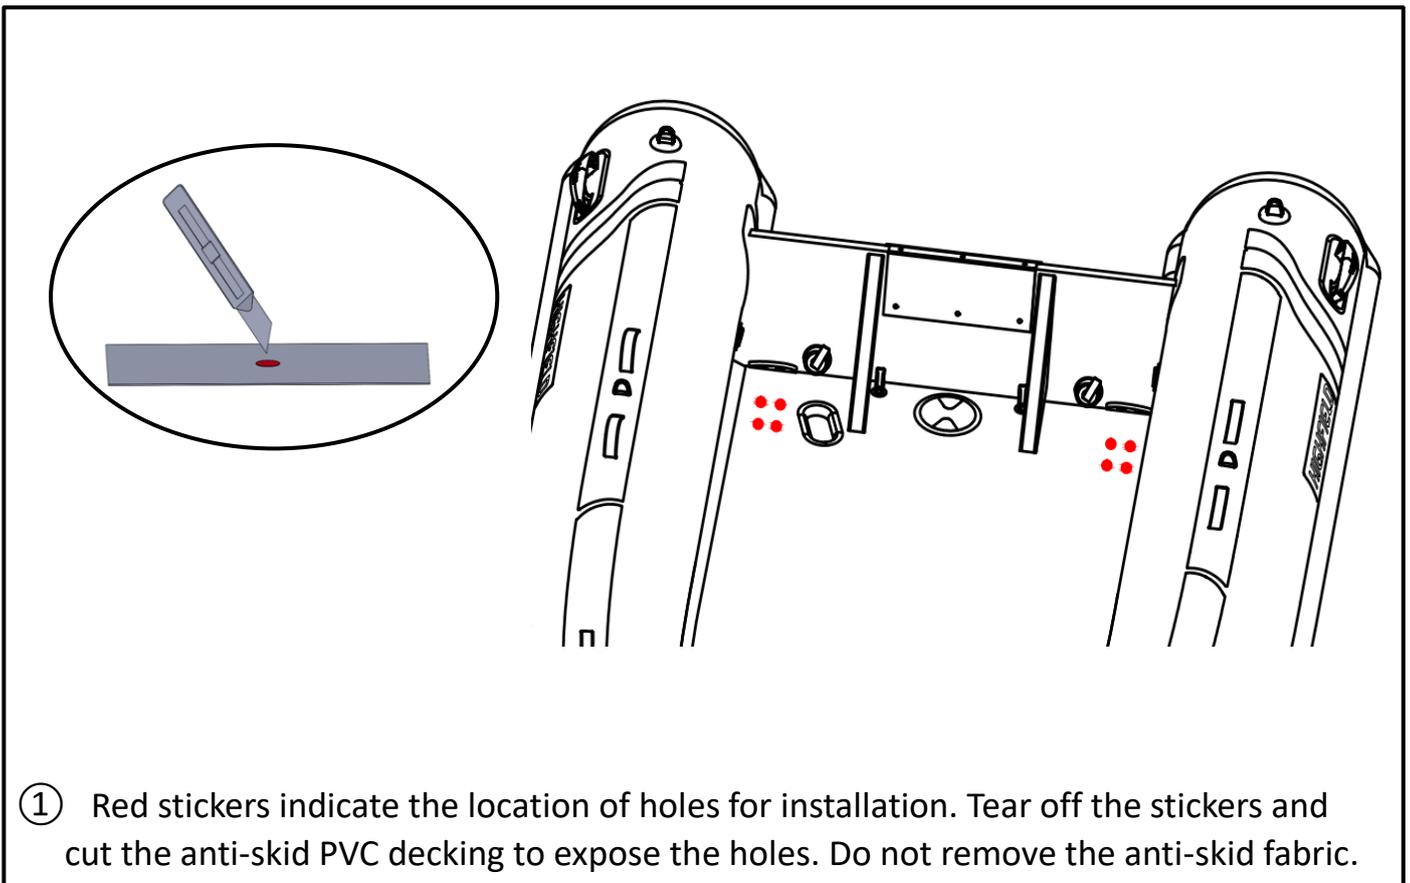


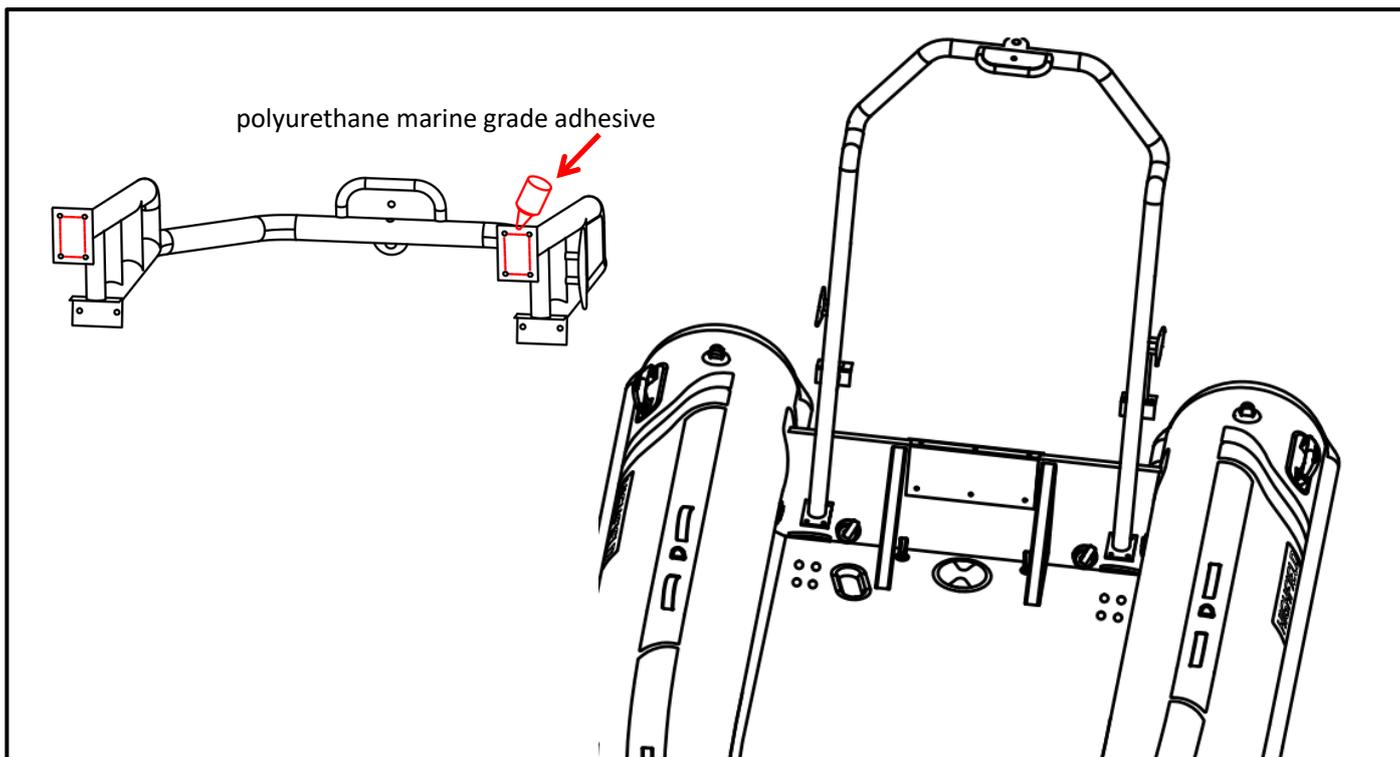

③ Gently clean the deck. Secure the rollbar using polyurethane marine grade adhesive such as 3M 5200, Sika 291, Fixtech Fix 15.

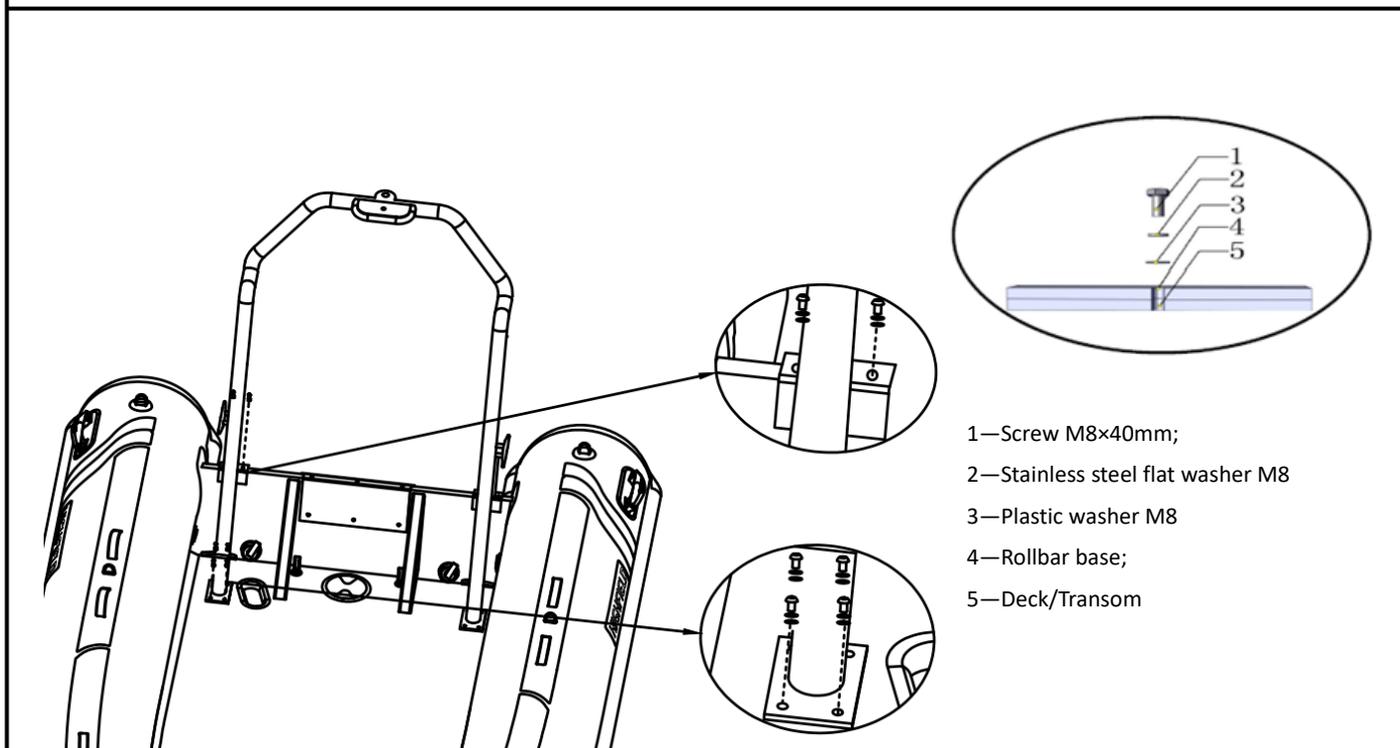

④ Use insulating compound on the M8 stainless steel screws supplied with the rollbar. Fasten the rollbar to the deck and transom using the screws.

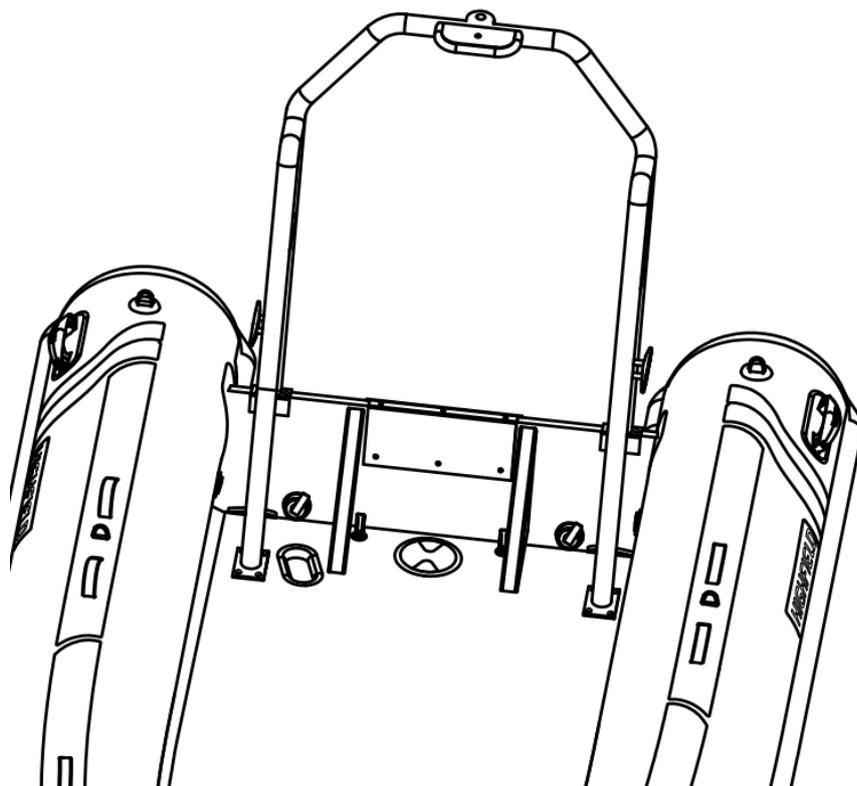

**Congratulations, you have successfully installed the rollbar.**