

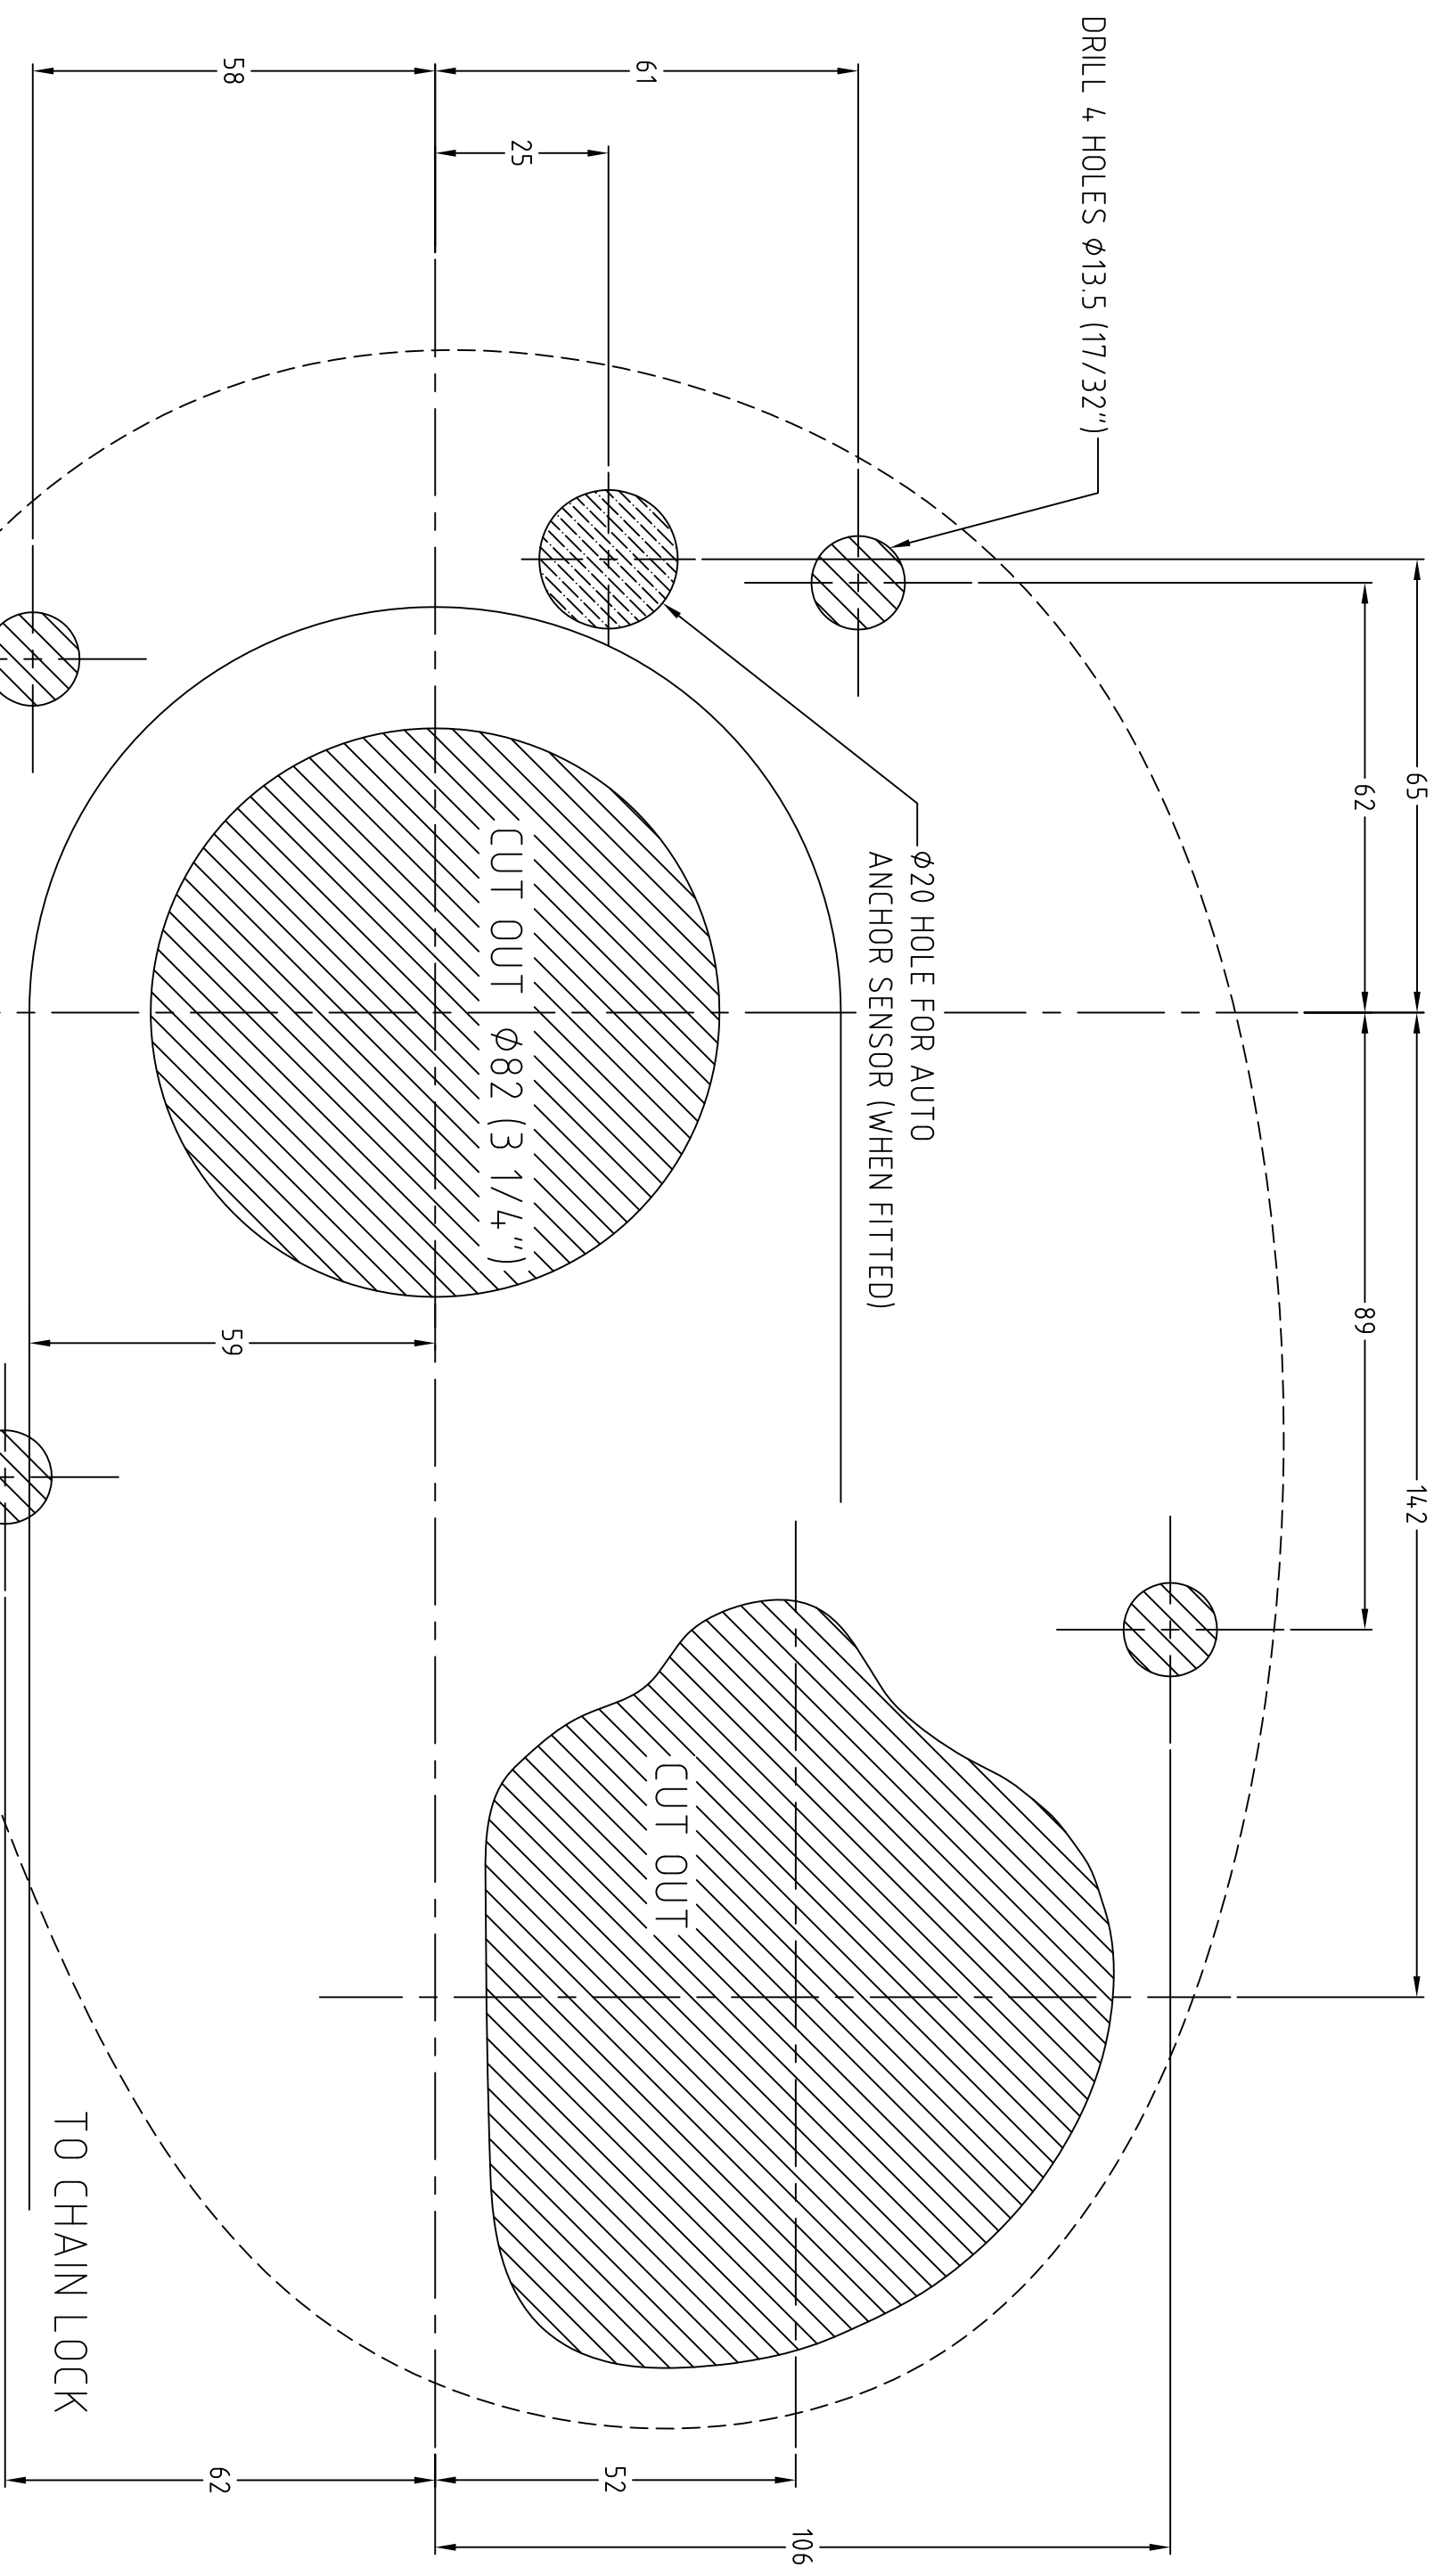


NOTE : WHEN PRINTING FROM ELECTRONIC PDF FILE  
 ENSURE PAGE SCALING IS SET TO "NONE" OR 100%.  
 CHECK PRINTED SIZE USING SCALE. MARK OUT HOLES  
 AND CHECK WITH WINCH IN POSITION BEFORE DRILLING.



		
FINISH		
<b>TOLERANCES (mm)</b> X: ± X.X: ± X.XX: ±		
UNLESS OTHERWISE SPECIFIED		
MATERIAL		
<b>TITLE</b> VR/VR2500/3500/4000 STORM DECK TEMPLATE (RH)		
<b>PART No.</b> VR2500-4000DT		
<b>DRN</b> MW	<b>DATE</b> 14-11-11	<b>DRG No.</b> VR2500-4000DT
<b>SCALE</b> 1:1	<b>APP1</b>	<b>APP2</b>
<b>SIZE</b> A3		<b>APP3</b>
© COPYRIGHT MUIR ENGINEERING PTY. LTD.		



WINDLASSES AUSTRALIA