


**STYLE
PL-258-CP-G**
for RG-8X &
RG-58/AU Coax

**Installation
Instructions**

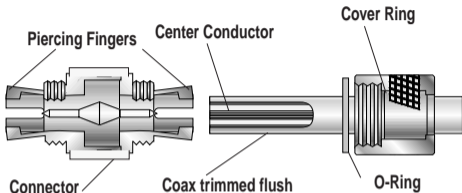

1. Cut the ends of the coax clean and flush.
2. Slide cover ring, threads facing cable end, then O-ring over one cable. RG-58 only: place nylon adapter over end of coax.
3. While holding the hex portion of the connector, push coax firmly into the connector body until it bottoms out.
4. Using pliers, carefully and evenly squeeze opposite pairs of the piercing fingers (on the knurled points) through the coax's outer jacket and into the braid.
5. Slide O-ring up to the piercing fingers. Tighten end cap onto the connector body. Repeat Steps 2 - 5 for second cable.

U.S. Patents Re.36,700 /6,062,897 /6,123,567
International Patents & Patents Pending
Centerpin is a registered trademark of
Centerpin Technology, Inc.