



Parts required for fitting to the VITO AFS

If a MOB 2 is purchased from a retailer you will require a clip to attach to the VITO AFS.

DW-MOBCLIP/V2

- 1 Slide toggle on to ribbon and pass ribbon through inside slot hole on grey plastic activation slider on left hand side.



- 2 Pass ribbon up through outside slot hole



- 3 Pass ribbon down through inside slot hole.



- 4 Leave roughly 60mm of tail of ribbon tail. Length of ribbon should roughly be the length from bladder weld to weld



- 5 Slide ribbon tail through toggle




- 6 Insert the antenna into the top and place the rewind tool into the antenna end. Wind the antenna anti-clockwise with the tool until the antenna is fully coiled. Do not remove the tool until the slider is in place



- 7 Attach slider to MOB 1



- 8 Place toggle into gap on left hand side of the slider and lay tail of ribbon across slider. Attach plastic Armed clip over the top.

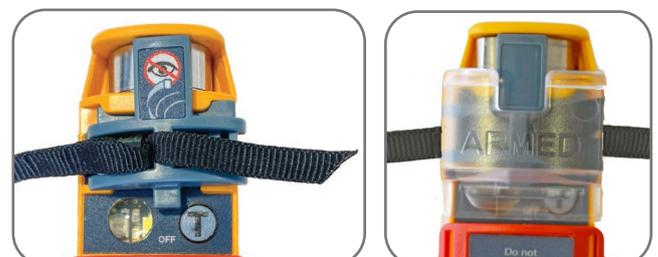

- 9 Slide the MOB 2 clip to the PLD attachment point by the whistle and oral tube. Clip the MOB 2 into place.




- 10 Run the ribbon underneath the bladder starting on the left - Pink side.



- 11 Once the ribbon has passed underneath the bladder:
 A. Feed the ribbon through the inner slot on the bracket.
 B. Loop the tape over the bracket and then feed the ribbon up through the outer slot.
 C. Pass the ribbon down through the inner slot and start to pull the ribbon tight.

- 12 Test for tightness by ensuring you can freely insert a finger in between the tape and the bladder. Re adjust if it is too tight.

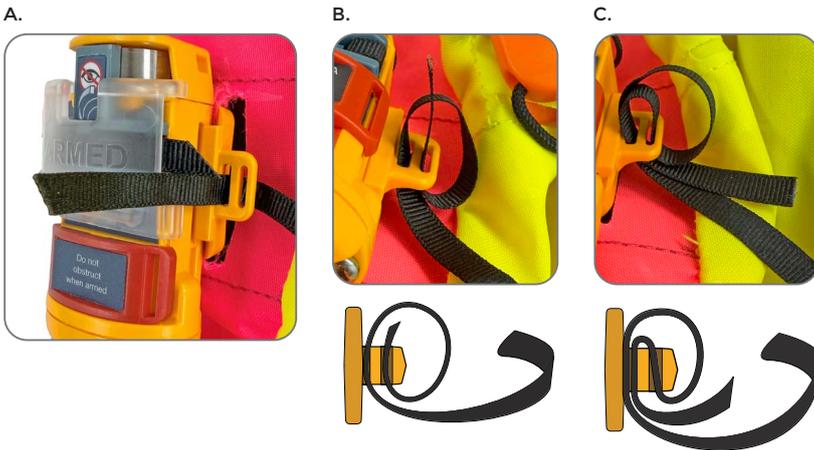

- 13 Pass both ends of the cord that is supplied with the unit through the slot on top of the MOB 1 unit.
 Pass the cord ends through the remaining loop.

- 14 Secure the remaining cord to the loop on the side of the cover with a knot.
 This is to ensure the unit is always attached to Deckvest.

